


## Solenoid valves VUVG/valve terminals VTUG

FESTO

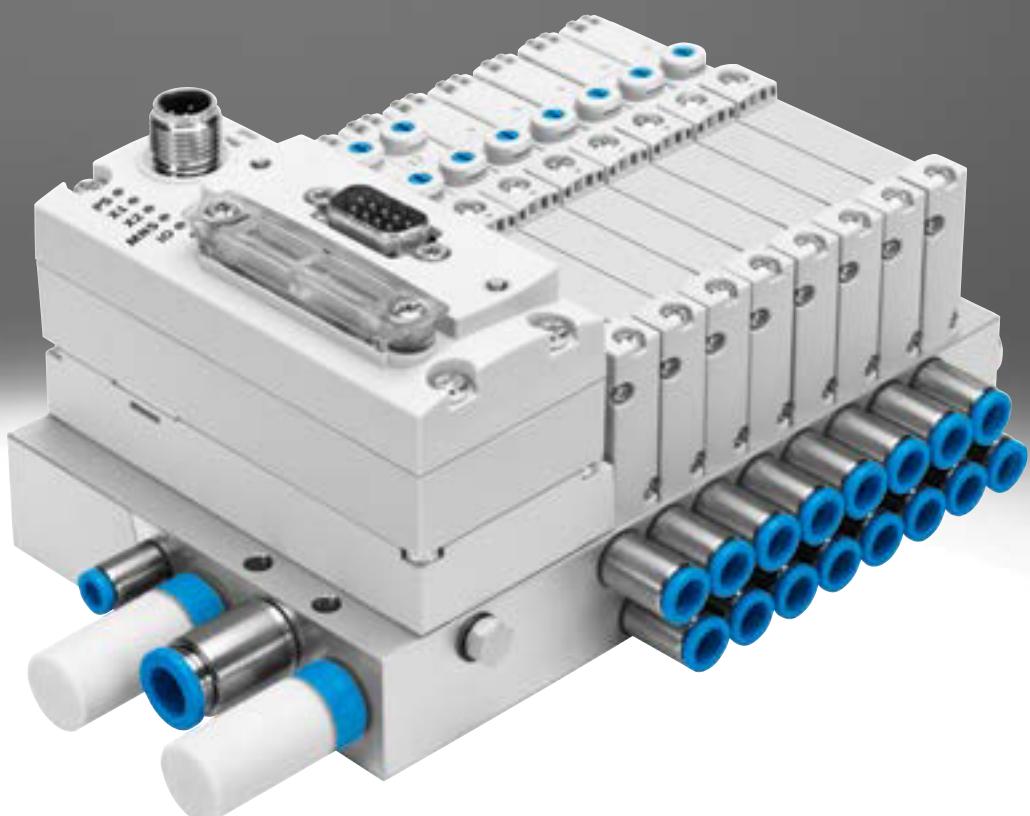

Festo Core Range  
Solves the majority of your automation tasks

Worldwide:  
Simply good:  
Fast:


Quickest delivery – wherever, whenever  
Expected high Festo quality  
Easy and fast to select

With the Festo Core Range, we have selected the most important products and functions from our broad product catalogue, and added the quickest delivery.

The Core Range offers you the best value for your automation tasks.

Just look  
for the  
star!

## Key features

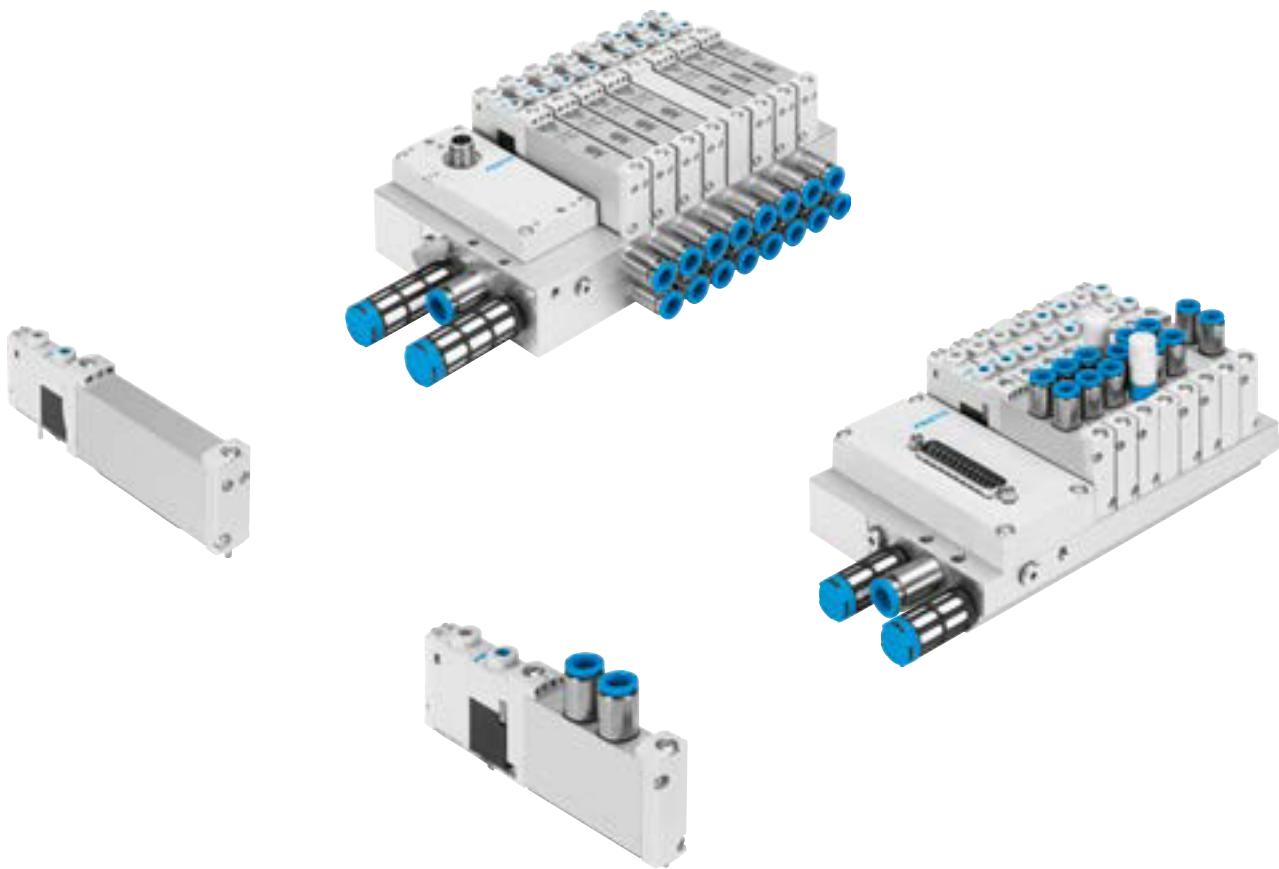

### Innovative

- Festo-specific I-Port interface for bus nodes (CTEU)
- IO-Link® mode for direct connection to a higher-level IO-Link master
- Festo-specific I-Port interface with interlock
- Flexible multi-pin plug connection using Sub-D or ribbon cable
- Reversible piston spool valves, up to 24 valve positions
- Reduced power consumption
- Excellent price/performance ratio

### Versatile

- Choice of quick push-in connectors
- Multiple pressure zones possible
- Sub-D variant and fieldbus interface with protection to IP67
- Internal or external pilot air with the same manifold rail possible by using blanking plugs
- Sub-base valves with working ports underneath for installation in control cabinets


### Reliable

- Sturdy and durable metal components
  - Valves
  - Manifold rails
- Fast troubleshooting thanks to LED indicator
- Manual override: choose from non-detenting, detenting or covered

### Easy to install

- Easy to mount thanks to captive screws and seal
- Easy-to-change connection technology
- Inscription label holder for labelling

### Ordering data – Product options



Configurable product  
This product and all its product options can be ordered using the configurator.

The configurator can be found at  
→ [www.festo.com/catalogue/...](http://www.festo.com/catalogue/)  
Enter the part number or the type.


Part no.  
573606

Type  
VTUG

## Key features


### Sub-base and semi in-line valves for valve terminal VTUG

VUVG-S...1T1, semi in-line valve

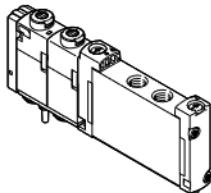


In the case of semi in-line valves, the supply ports (1, 3 and 5) are connected to the valve via pneumatic links (e.g. sub-base). The working ports (2, 4) are on the valve.

Valve terminal VTUG with different electrical connections

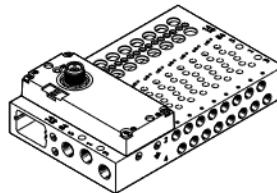


VUVG-B...1T1, sub-base valve

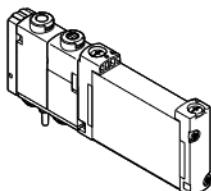

In the case of sub-base valves, the supply ports (1, 3 and 5) and the working ports (2, 4) are connected to the valve via pneumatic links (e.g. sub-base).


### Overview – Valve terminal with multi-pin plug connection and fieldbus interface

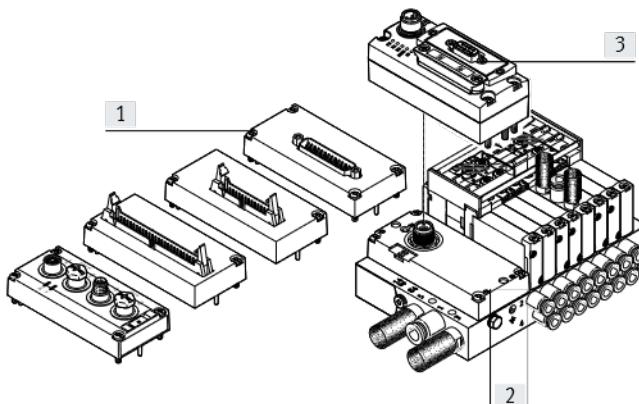

Different electrical connections:

- [1] Ribbon cable or Sub-D
- [2] I-Port interface
- [3] Bus node CTEU

### Overview – Valve terminal with interlock

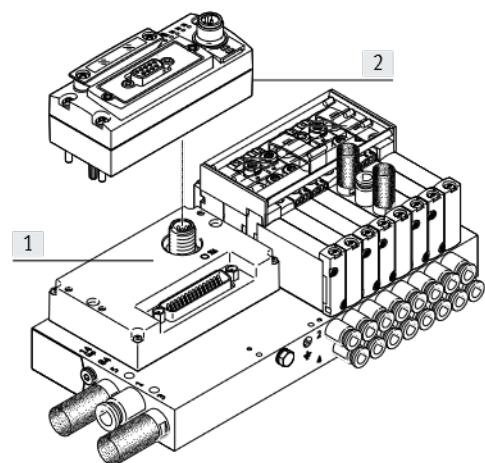

Different electrical connections:

- [1] I-Port interface with interlock
- [2] Bus node CTEU

## Key features

### Equipment options

#### Valve functions

- 2x 3/2-way, 3/2-way, 5/2-way, 5/3-way valves
- Reversible piston spool valves, up to 24 valve positions

#### Electrical connection options

- IO-Link® mode for direct connection to a higher-level IO-Link master
- Festo-specific I-Port interface for bus nodes (CTEU)
- Flexible multi-pin plug connection using Sub-D or ribbon cable
- Festo-specific I-Port interface with interlock (for valves of size 10 mm)

### Basic valves VUVG

#### Size

- 10
- 14
- 18
- Semi-in-line valve
- Sub-base valve

### Valve functions

#### 3/2-way valve

- Single solenoid
- Normally open
- Normally closed

#### 2x 3/2-way valve

- Single solenoid
- Normally open
- Normally closed
- 1x normally closed, 1x normally open
- Mechanical spring
- Pneumatic spring


#### 5/2-way valve

- Single solenoid
- Pneumatic/mechanical spring
- Mechanical spring
- Pneumatic spring
- Double solenoid valve

#### 5/3-way valve


- Mid-position pressurised
- Mid-position exhausted
- Mid-position closed

### Cover caps for manual override

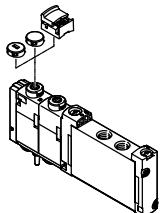


- Closed cover cap, covered manual override
- Slotted cover cap, non-detenting manual override
- Cover cap for detenting actuation without tools

### Inscription label holders

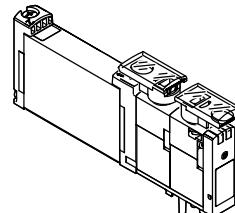

Inscription label holders ASLR-D-L1 for identifying the valves and as a covering for the manual override.

### Inscription label holders

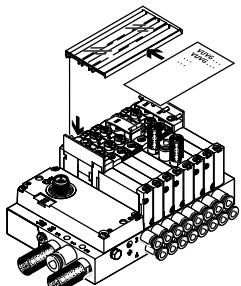


Inscription label holders ASCF-H-L1... for identifying the valves on the valve terminal VTUG

## Key features – Pneumatic components

### Manifold rail

For semi in-line valves

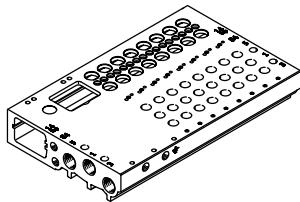


The semi in-line valves are supplied with external pilot air. The pilot air is set via the manifold rail. The scope of delivery of the manifold rail includes a short and a long blanking plug for setting the pilot air.

- For semi in-line valves M5/M7 (size 10), G1/8 (size 14) and G1/4 (size 18)

- For 2x 3/2-way, 5/2-way and 5/3-way valves
- 4 to 24 valve positions with electrical links

For sub-base valves

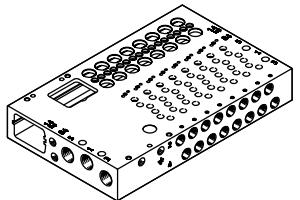


The sub-base valves are supplied with external pilot air. The pilot air is set via the manifold rail. The scope of delivery of the manifold rail includes a short and a long blanking plug for setting the pilot air.

- For sub-base valves M5/M7 (size 10), G1/8 (size 14) and G1/4 (size 18)

- For 2x 3/2-way, 3/2-way, 5/2-way and 5/3-way valves
- 4 to 24 valve positions with electrical links

Long version

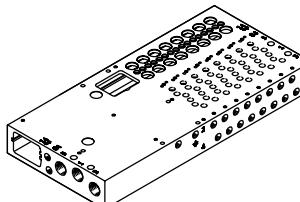


Versions:

- I-Port interface with outlet orientation on the side: for semi in-line valves and sub-base valves M5/M7 (size 10), G1/8 (size 14) and G1/4 (size 18)


- Interlock:  
For sub-base and semi in-line valves  
M5/M7 (size 10)

For control cabinet installation, outlet orientation underneath (U)

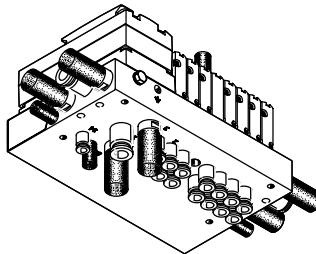


For sub-base valves M7 (size 10), G1/8 (size 14) and G1/4 (size 18).

For control cabinet installation, outlet orientation at the front (FD)

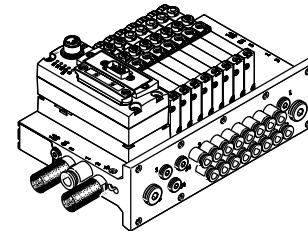


For sub-base valves  
M7 (size 10) and G1/8 (size 14).

For control cabinet installation, with shut-off function (hot swap)

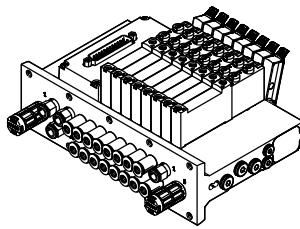

Shut-off function for duct 1, for sub-base valves M7 (size 10) and G1/8 (size 14):

- Internal pilot air supply only
- Vacuum operation not possible

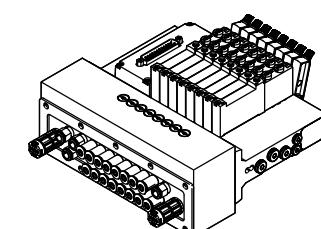

Shut-off function for ducts 1, 2 and 4, for sub-base valves M7 (size 10) and G1/8 (size 14):

- Internal/external pilot air supply
- Vacuum operation not possible




**Note**  
Pressurisation and exhaust at both ends is recommended for an optimised flow rate in cases where multiple valves switch simultaneously.

## Key features

### Electrical connection

#### Multi-pin plug connection

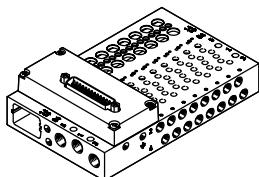


The signals are transmitted from the controller to the valve terminal via a pre-assembled or self-assembled multi-core cable to the multi-pin plug connection.

This substantially reduces installation time compared to individually connected valves. The valve terminal can be equipped with max. 48 solenoid coils.

#### Versions:

- Sub-D connection
- Ribbon cable

#### I-Port interface

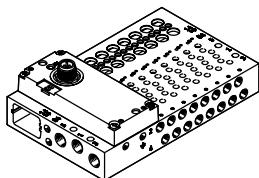


Festo-specific interface as a basis for bus nodes (CTEU) or in IO-Link® mode for direct connection to a higher-order IO-Link master.

Communication and power supply take place via a common M12 interface.

#### Connection options:

- As I-Port interface for bus nodes (CTEU)
- In IO-Link® mode for direct connection to an IO-Link master

#### I-Port interface with interlock

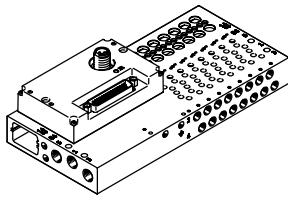


The interlock function enables the first 16 solenoid coils to be individually supplied externally.

This ensures that these valves can be released in a safety-oriented way.

### Note

The VTUG variant with multi-pin plug connection and fieldbus interface offers the additional option of individual electrical actuation of the valves (→ page 25).

### Supply plate

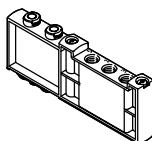


For additional air supply and exhaust via a valve position (ports for duct 1, 3 and 5).

### Note

The supply plate VABF-L1-14-P3A4-G18-T1 can only be used with G fittings. R fittings are not permissible.

### Cover plate for vacant position

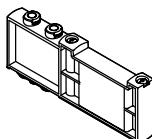

Vacant position cover

### Separator for pressure zones



For creating multiple pressure zones in a valve terminal

## Key features – Pneumatic components

### Creating pressure zones and separating exhaust air

Compressed air is supplied and exhausted via the manifold rail and via supply plates.

The position of the supply plates and duct separations can be freely selected with the VTUG.

A pressure zone is created by separating the internal supply ducts using a separator.


Pressure zone separation can be used for the following ducts:

- Duct 1
- Duct 3
- Duct 5

 - Note





- Use a separator if the exhaust air pressures are high
- Use at least one supply plate/air supply for each pressure zone
- Pressure zone separation is not possible in duct 12/14 (pilot air supply)

### Duct separation

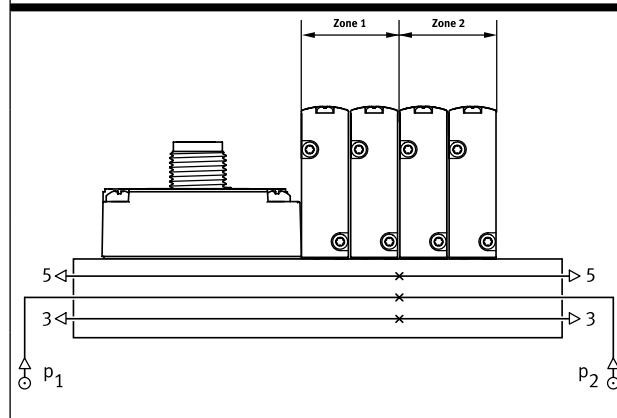


### Description

The pressure zones can be freely configured with the VTUG. The following duct separations are possible:

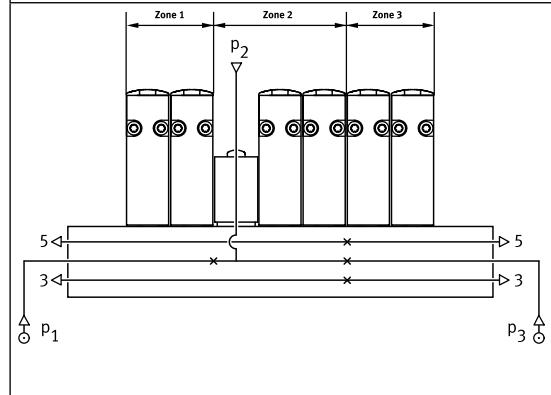

The number of pressure zones with the VTUG is limited by the number of valve positions on the manifold rail. Note that each supply plate occupies one valve position.

### Separator VABD

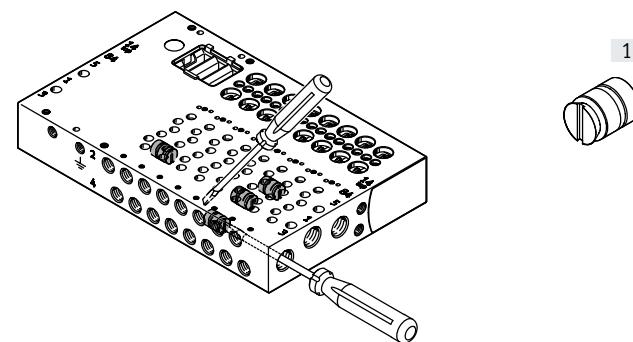

[1] Separator VABD


 - Note

With the VTUG, several pressure zones can be created by using separators (VABD). The separators are inserted in the manifold rail using a slotted screwdriver.

## Key features – Pneumatic components

### Shut-off function (hot swap)

For duct 1

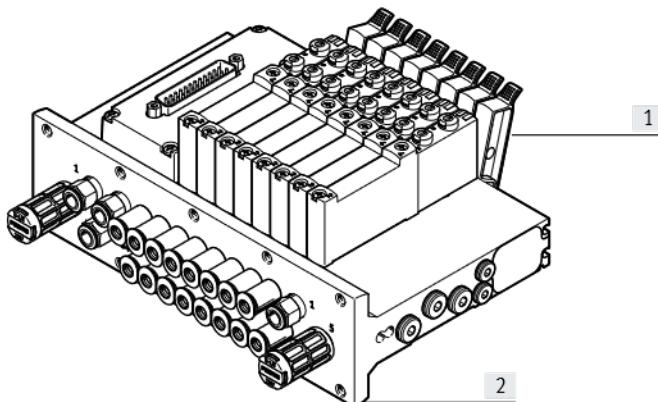


- [1] Actuating lever
- [2] Manifold rail with shut-off plate

The shut-off plate is located below the manifold block. Actuating the lever:

- Disconnects the valve position from the compressed air supply (duct 1)
- Exhausts the pilot air supply on the valve side (duct 12 and 14)
- Note the user instructions for use in combination with a supply plate

The actuating levers can be individually locked in place, securing them against unwanted actuation.

For duct 1, 2 and 4

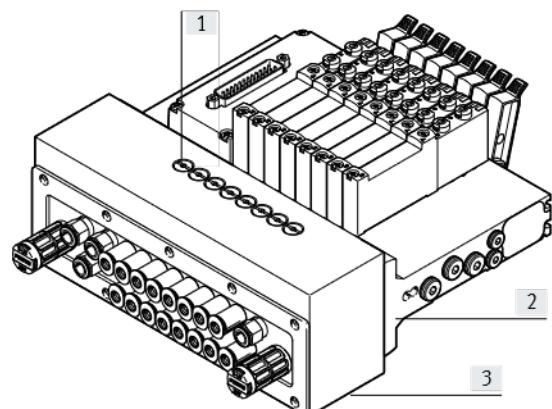

- [1] Plunger
- [2] Manifold rail
- [3] Manifold block

To actuate, press in the plunger with a pointed object or screwdriver and then turn clockwise 90° until the stop is reached:

- Connection from the valve position to ports 2 and 4 is blocked
- Components connected at ports 2 and 4 are not exhausted

### Pilot air supply

#### Internal pilot air supply

Internal pilot air supply can be selected with an operating pressure between 1.5 ... 8 bar, 2.5 ... 8 bar, or 3 ... 8 bar (depending on the valve used).

The pilot air supply is branched from duct 1 (compressed air supply) using an internal connection.


#### External pilot air supply

External pilot air supply is required for vacuum operation or operating pressures above 8 bar. The port for external pilot air supply (port 12/14) is located on the manifold rail.

#### Pilot exhaust air

The pilot air is exhausted via duct 82/84 of the manifold rail.

### Pilot air supply

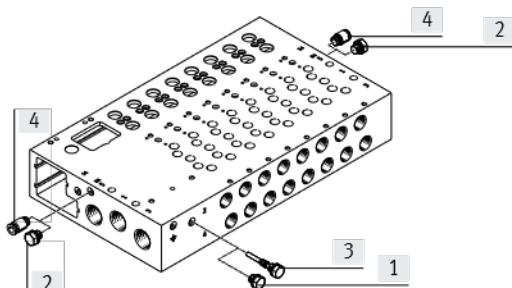


- [1] Blanking plug, short, for internal pilot air
- [2] Blanking plug for duct 12/14 with internal pilot air
- [3] Blanking plug, long, for external pilot air
- [4] Push-in fitting for duct 12/14 with external pilot air

The manifold rails have an internal connection between duct 12/14 and duct 1.

By inserting a blanking plug into this connection, it is possible to switch between internal and external pilot air.

## Key features – Pneumatic components

### Exhaust functions

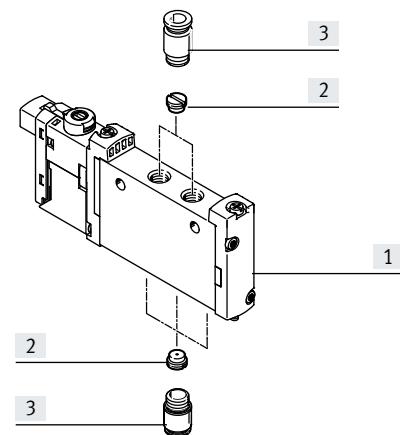

#### Flow restrictor for M5 thread

Semi in-line valve, individual electrical connection: flow restrictor can be fitted in port 1, 3, 5 and/or in port 2, 4.

Sub-base valve, individual electrical connection: flow restrictor can be fitted in port 2, 4.

#### Fixed flow restrictor, self-tapping

The fixed flow restrictor can be used to permanently set the exhaust flow rate in ducts 3 and 5.

The fixed flow restrictors are screwed into ducts 3 and 5 in the manifold rail.


Please see the relevant assembly instructions:  
[www.festo.com/catalogue/...](http://www.festo.com/catalogue/)  
 → Support/Downloads

#### Check valve

Check valves block the flow towards the valves, thus preventing actuators from switching unexpectedly if back pressure develops in ducts 3 and 5 in the case of a high exhaust capacity. The check valves are screwed into ducts 3 and 5 in the manifold rail.

#### Note

- It is not possible to use a check valve and a fixed flow restrictor (in the same duct) at the same time.
- When screwing in again, use the threads already present.

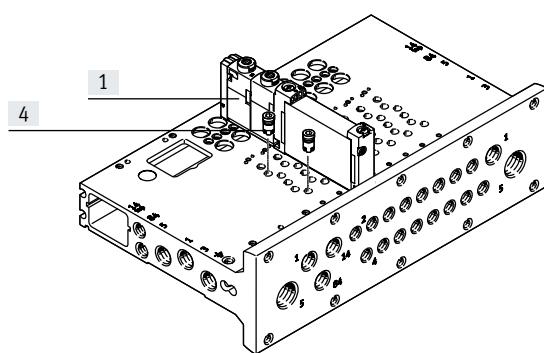

Please see the relevant assembly instructions:  
[www.festo.com/catalogue/...](http://www.festo.com/catalogue/)  
 → Support/Downloads

- [1] Valves VUVG
- [2] Flow restrictor for M5 thread
- [3] Fitting
- [4] Fixed flow restrictor, self-tapping/check valve

## Key features – Pneumatic components

### Operation with different pressures

#### Vacuum operation

##### Points to note with 3/2-way valves with pneumatic spring return:

The 3/2-way valves are available in a design with two valves in one valve body and with pneumatic spring return. With these valves, the force for the return movement is obtained from port 1.

Vacuum operation is only possible at port 3 and 5, not at port 1. With external pilot air supply, vacuum can be connected at port 1, 3, 5 of the 5/2-way and 5/3-way valves.

Vacuum operation is not possible when using the shut-off function (hot swap).


#### Reverse operation

The 3/2-way valves with pneumatic spring are not suitable for reverse operation, since at least the minimum pilot pressure must be present in duct 1.

#### Note

Pressure must be present at port 1.

### Pressure divider (internal pilot air)

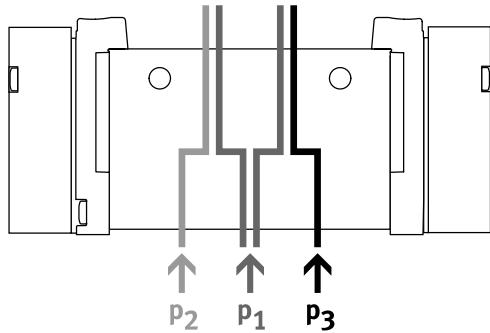

- Two different pressures are required
- Different pressures can be connected at duct 1, 3 and 5


#### Advantages

Any pressure or vacuum can be connected at duct 3 and 5 both with external and internal pilot air

#### Note

- When using internal pilot air, adhere to the minimum pilot pressure in duct 1
- When using 2x 3/2-way valves without spring return, adhere to the to minimum pilot pressure in duct 1

### Vacuum, ejector pulse and normal position

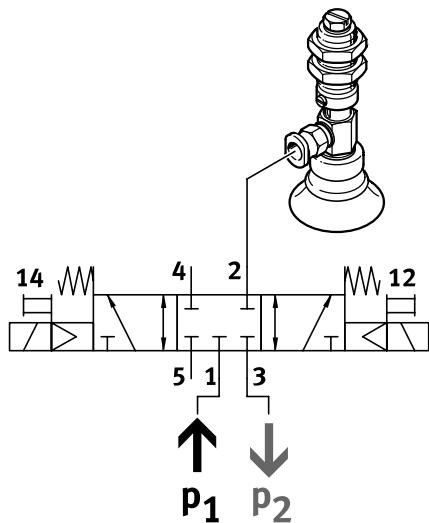


Vacuum, ejector pulse and normal position with internal pilot air can be achieved by connecting vacuum at duct 3 and pressure for the ejector pulse at duct 1.


## Key features – Pneumatic components

### Standard nominal flow rate $q_{nN}$ as a function of the number of switched valves $n$


Size 10 mm, 5/2-way valves

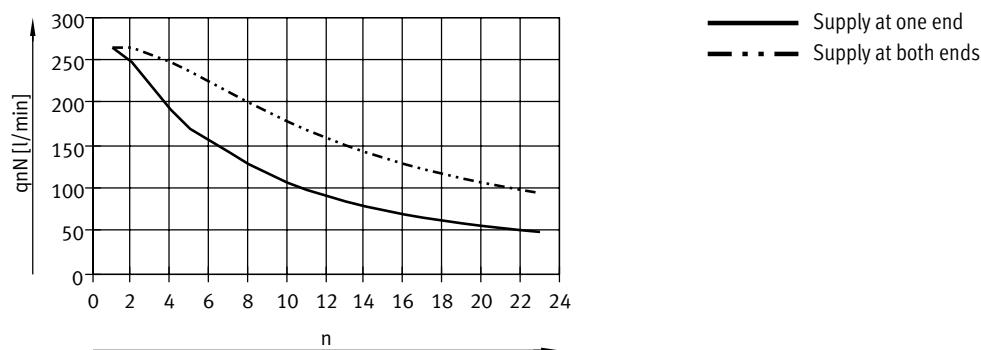

Size 14 mm

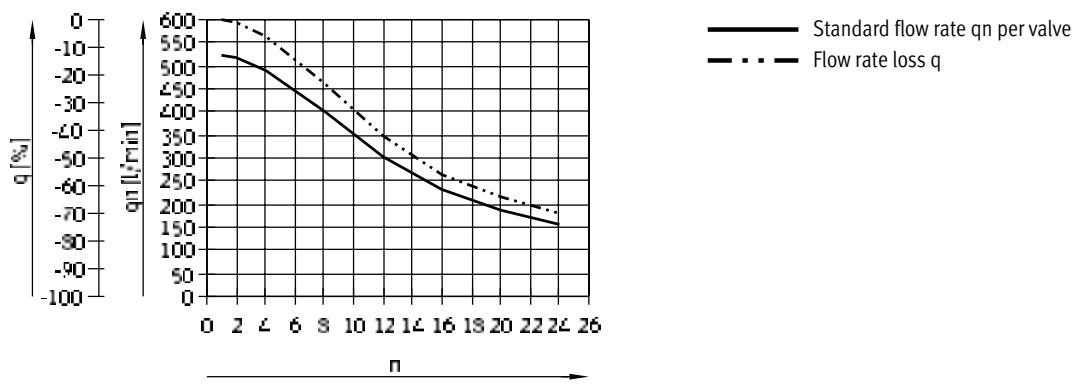


Size 18 mm

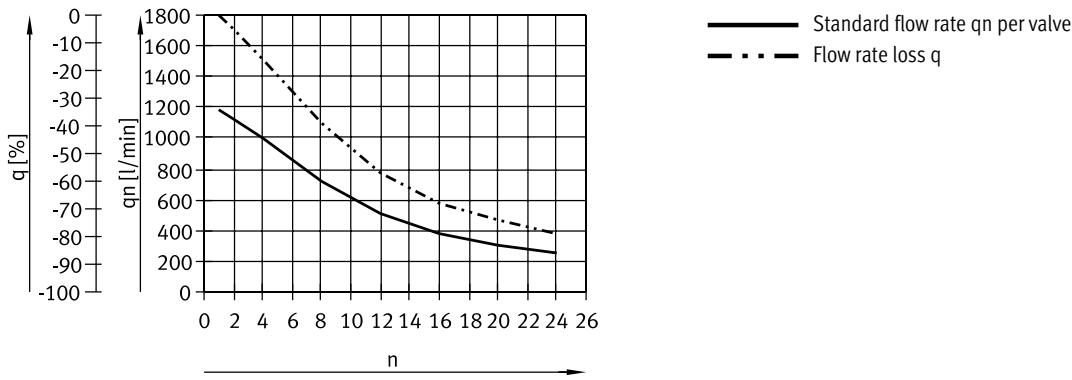


## Key features – Pneumatic components

### Pilot pressure p2 as a function of operating pressure p1


2x 3/2-way valve, mechanical spring return

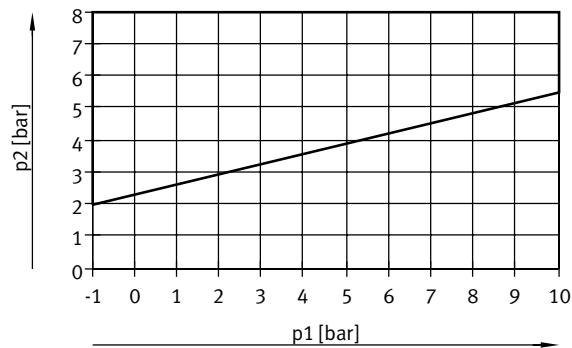

2x 3/2-way valve, pneumatic spring return

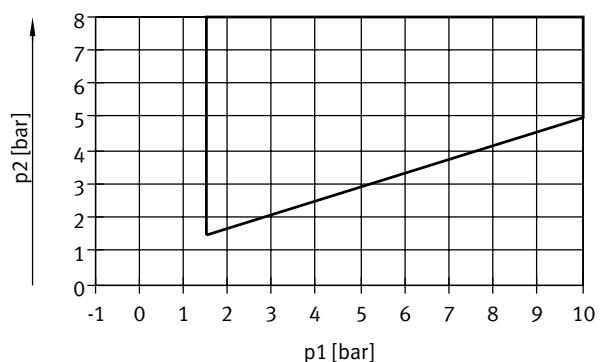

3/2-way single solenoid valve and 5/2-way single solenoid valve

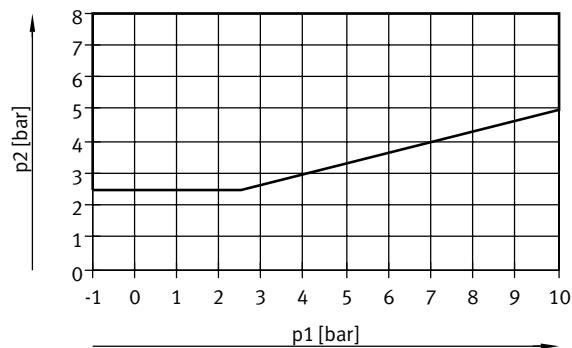

## Key features – Mounting

### Valve terminal mounting


Sturdy terminal mounting via:

- Four through-holes for wall mounting
- H-rail mounting
- Mounting bracket



**Note**  
Use the M5 thread provided on the manifold block for earthing the valve terminal.


### Wall mounting

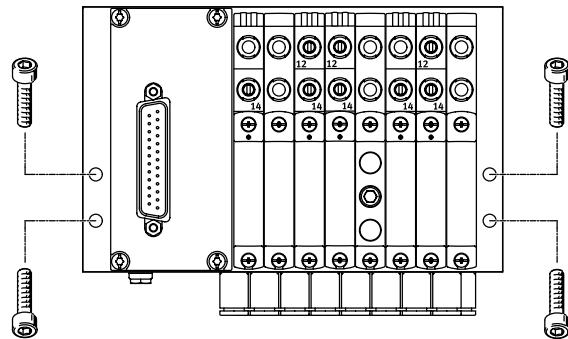

Screw the valve terminal VTUG onto the mounting surface using four M4 screws.

The mounting holes are on the left and right side of the manifold rail.

### H-rail mounting

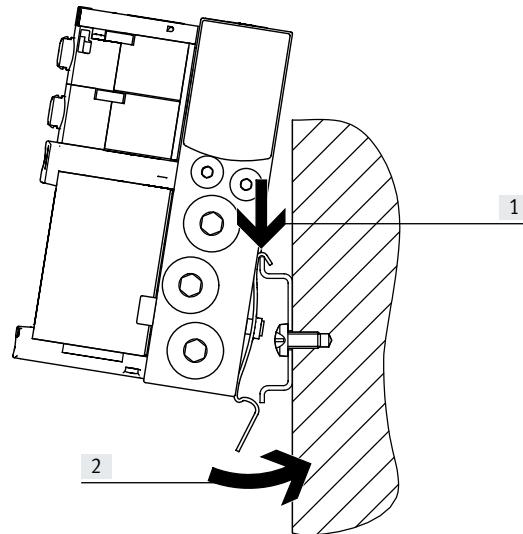

Clip the valve terminal VTUG onto the H-rail (see arrow [1]).

Swivel the valve terminal onto the H-rail and secure in place with the clamping component (see arrow [2]).

Attach the manifold rails to a rail to EN 60715-TH35 using the H-rail mounting VAME-T-M4.

Use the following screws for mounting (to DIN 912):

- Size 10: M4 x 30
- Size 14: M4 x 40
- Size 18: M5 x 50



**Note**  
Permissible use of the H-rail:

- Manifold rail with outlet on the side or on top.
- H-rail exclusively for horizontal mounting.

• Vibration/shock loads are not permissible for this type of mounting.


Size 14:

- Use H-rail type TH35-7.5 for valve terminals with a maximum of 8 valve positions.
- Use H-rail type TH35-15 for mounting in accordance with the standard and for more than 8 valve positions.

## Key features – Mounting

### Valve terminal mounting

#### Mounting with mounting bracket

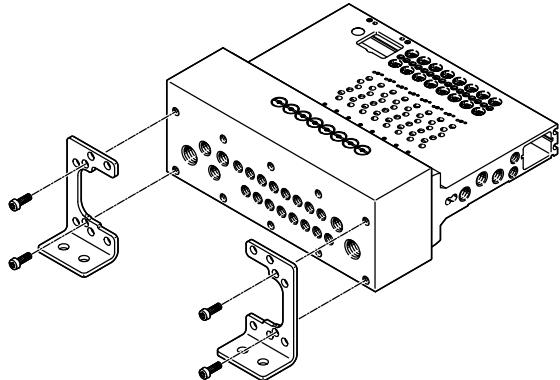


The VTUG valve terminal is screwed to the mounting bracket with four M4x16 screws. This enables the valve terminal to be mounted horizontally on the mounting surface.

The mounting brackets can be combined with the manifold rail for sub-base valves, for control cabinet installation with outlet orientation at the front.

## Key features – Mounting


### Manual override (MO)

MO with automatic return (non-detenting)

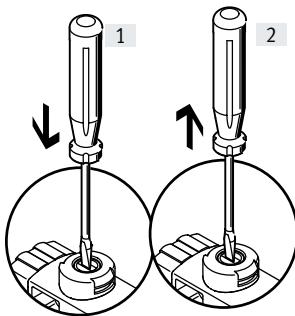


- [1] Press in the plunger of the MO with a pointed object or screwdriver.  
The pilot valve switches and actuates the main valve.
- [2] Remove the pointed object or screwdriver.  
The spring force pushes the plunger of the manual override back.  
The pilot valve returns to its normal position as does the main single solenoid valve (not the case with double solenoid valve code J).

MO with locking (detenting)

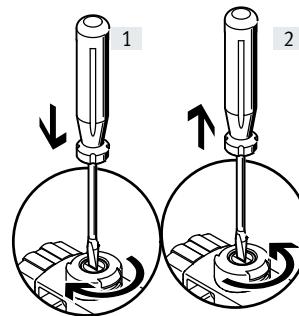


- [1] Press in the plunger of the MO with a pointed object or screwdriver until the valve switches and then turn the plunger 90° clockwise until the stop is reached.  
The valve remains actuated
- [2] Turn the plunger 90° anti-clockwise until the stop is reached and then remove the pointed object or screwdriver. The spring force pushes the plunger of the manual override back.  
The valve returns to its normal position (not with double solenoid valve code J).

MO non-detenting – with coded cover cap

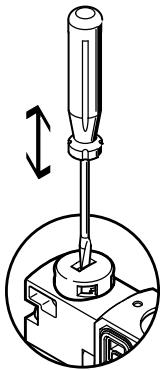


MO is actuated by pushing it with a pointed object or screwdriver and reset by spring force (detenting position prevented by coded cover cap).

MO detenting without tools – mounting

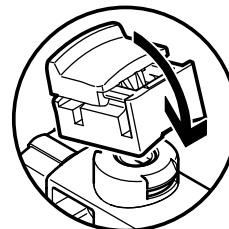


Turn MO to clip it onto the pilot valve.  
The MO cap can then be operated (detenting) without tools.

MO detenting without tools – actuation

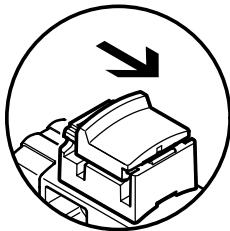

- Sliding the cap for the MO with latch in the direction of the arrow results in:
- Cap locks into the end position
  - The pilot valve switches and actuates the main valve.

MO detenting without tools – actuation

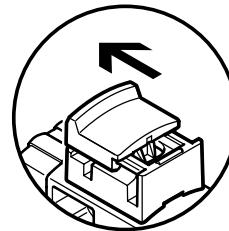


- Sliding the cap for the MO with latch in the direction of the arrow results in:
- Cap locks into the end position
  - The spring force pushes the plunger of the manual override back.
  - The pilot valve returns to its normal position as does the main single solenoid valve (not the case with double solenoid valve code J).

## Key features – Mounting

### Inscription system

#### Inscription label holders

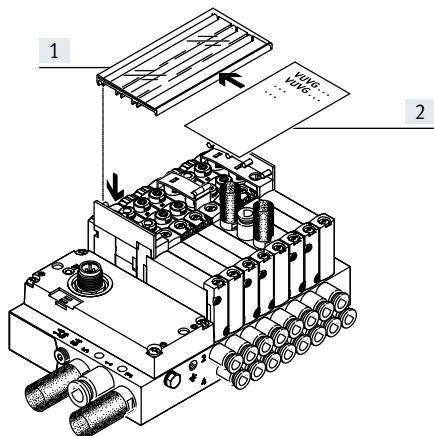

- [1] Inscription label holders ASCF-H-L1 (code TT)

- [2] Inscription field


Mount inscription label holders to label the valves. Open the inscription label holder to insert the inscription label and actuate the manual override. The inscription label holders are available in different sizes depending on the number of valve positions.

**Note**

Do not engage the manual override before mounting the inscription label holder.

The retainer for the inscription label holder covers the manual override of the valve beneath it when mounted. The manual override for the two valves under the retainers of the inscription label holder can then only be operated as non-detenting.

#### Inscription label holders

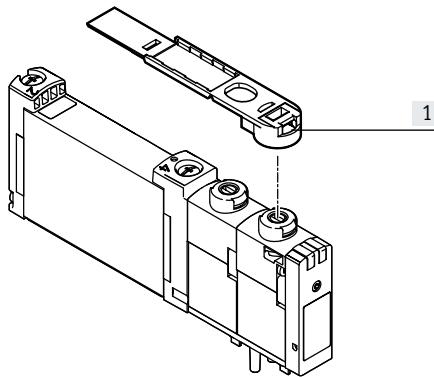

- [1] Inscription label holders ASLR-D-L1 (code TV)

Use inscription label holders ASLR-D-L1 (code TV) to label individual valves. The inscription label holder is placed directly on the manual override.

**Note**








Do not engage the manual override before mounting the inscription label holder.

After the retaining brackets are fitted, the manual override can only be operated as non-detenting.

## Overview of valve functions


Valve	Valve code	Description	Size		
			M5/M7	G1/8	G1/4
<b>3/2-way valve, pneumatic/mechanical spring</b>					
	M32C-R	Normally closed	■	-	-
	M32U-R	Normally open	■	-	-
<b>3/2-way valve, pneumatic spring</b>					
	M32C-A	Normally closed	-	■	-
	M32U-A	Normally open	-	■	-
<b>2x 3/2-way valve, pneumatic spring</b>					
	T32C-A	Normally closed	■	■	■
	T32U-A	Normally open	■	■	■
	T32H-A	1x normally open, 1x normally closed	■	■	■
<b>2x 3/2-way valve, mechanical spring</b>					
	T32C-M	Normally closed	■	■	■
	T32U-M	Normally open	■	■	■
	T32H-M	1x normally open, 1x normally closed	■	■	■

## Overview of valve functions

Valve	Valve code	Description	Size		
			M5/M7	G1/8	G1/4
<b>5/2-way valve, double solenoid</b>					
	B52	External pilot air supply	■	■	■
<b>5/2-way valve, single solenoid</b>					
	M52-A	Pneumatic spring	-	■	-
	M52-M	Mechanical spring	■	■	■
	M52-R	Pneumatic/mechanical spring	■	-	■
<b>5/3-way valve</b>					
	P53C	Mid-position closed	■	■	■
	P53U	Mid-position pressurised	■	■	■
	P53E	Mid-position exhausted	■	■	■

## Peripherals overview example – Semi in-line valves

### Valve terminal with multi-pin connection

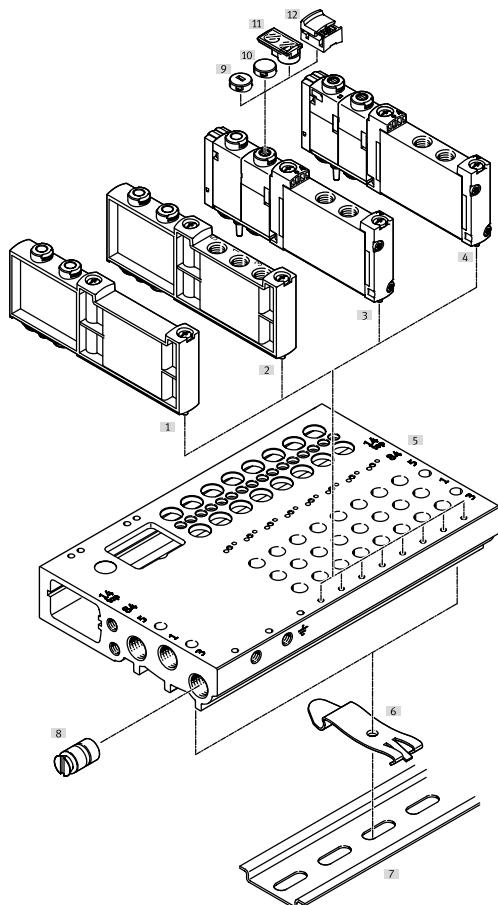


### Accessories

	Type	Description	→ Page/Internet
[1]	Cover plate	VABB-L1-...	For covering a vacant position
[2]	Supply plate	VABF-L1-...	For air supply at port 1 and ports 3 and 5
[3]	Solenoid valve	VUVG-...	Semi in-line valve M5/M7, G1/8
[4]	Solenoid valve	VUVG-...	Semi in-line valve G1/4
[5]	Manifold rail	VABM-L1-...	For 4 to 10, 12, 16, 20 and 24 valve positions
[6]	H-rail mounting	VAME-T-M4	2 pieces for fitting the valve terminal on an H-rail
[7]	H-rail	NRH-35-2000	For mounting the valve terminal
[8]	Separator	VABD-...	For creating pressure zones
[9]	Cover cap	VMPA-HBT-B	Non-detenting, for manual override
[10]	Cover cap	VMPA-HBV-B	Covered, for manual override
[11]	Inscription label holders	ASLR-D-L1	For inscription label and covering for the retaining screw/manual override
[12]	Covering	VAMC-...	Detenting, for manual override

## Peripherals overview example – Semi in-line valves

### Valve terminal with multi-pin plug and I-Port interface

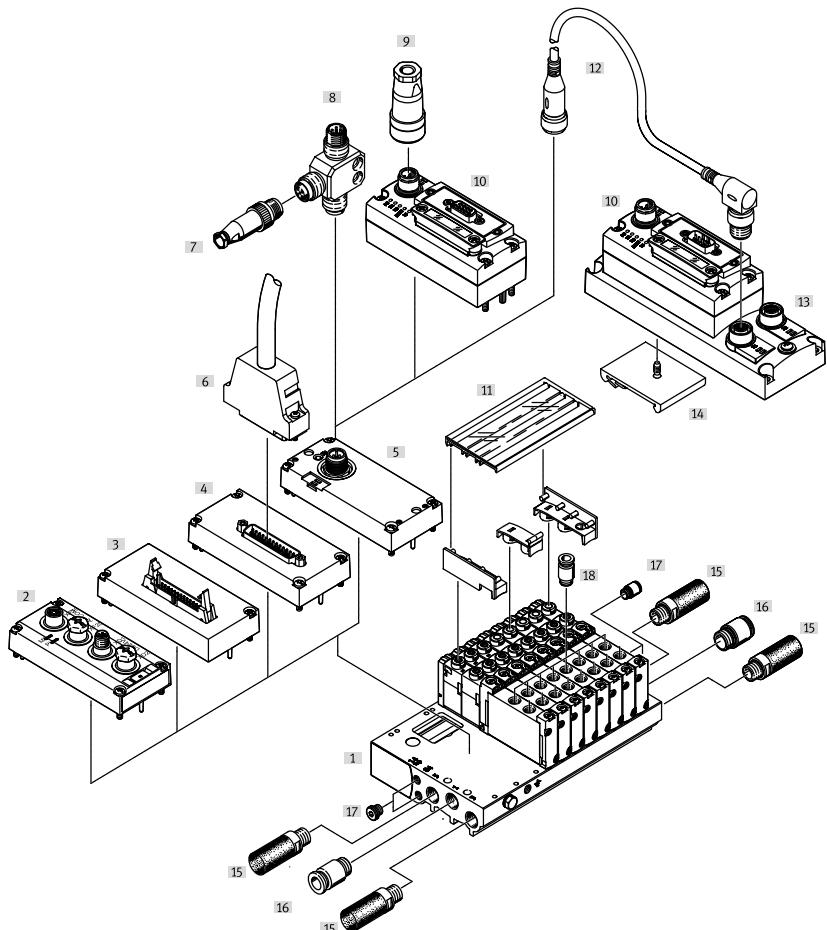


#### Accessories

	Type	Description	→ Page/Internet
[1]	Manifold rail	VABM-L1...	For 4 to 10, 12, 16, 20 and 24 valve positions
[2]	Electrical interface	VAEM-L1-S....-AP	AP interface for CPX-AP-I
[3]	Electrical interface	VAEM-L1-S-M3...	Ribbon cable
[4]	Electrical interface	VAEM-L1-S-M1...	Sub-D
[5]	Electrical interface	VAEM-L1-S....-PT	I-Port interface/IO-Link®
[6]	Connecting cable	NEBV...	Sub-D cable
[7]	Plug	SEA-M12-5GS-PG7	Straight, for T adapter FB-TA
[8]	T adapter	FB-TA-M12-5POL	For IO-Link® and load voltage supply
[9]	Power supply socket	NTSD.../FBSD...	Power supply for CTEU bus nodes
[10]	CTEU	CTEU...	Bus node
[11]	Inscription label holders	ASCF-H-L1	For identifying valves
[12]	Connecting cable	NEBU...	–
[13]	Electrical connection block	CAPC-F1-E-M12	For connecting a second device with I-Port interface
[14]	H-rail mounting	CAF-M1-H	For electrical connection block CAPC
[15]	Silencer	U...	For port 3 and 5
[16]	Push-in fitting	QS...	For air supply, port 1
[17]	Blanking plug	B...	For internal/external pilot air
[18]	Push-in fitting	QS...	For port 2 and 4

## Peripherals overview – Example sub-base valves


## Valve terminal with multi-pin connection

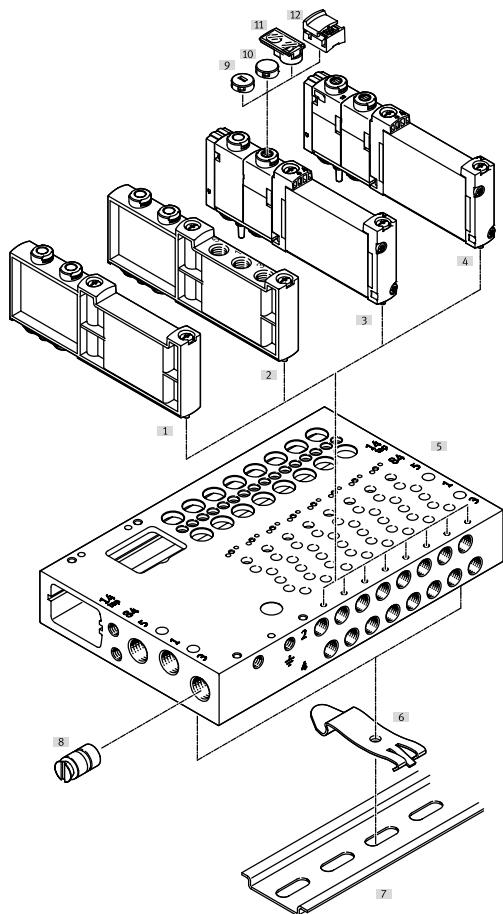

Accessories		Type	Description	→ Page/Internet
[1]	Cover plate	VABB-L1...	For covering a vacant position	92
[2]	Supply plate	VABF-L1...	For air supply at port 1 and ports 3 and 5	92
[3]	Solenoid valve	VUVG- ...	Sub-base valve M5/M7, G1/8	39, 42, 45
[4]	Solenoid valve	VUVG- ...	Sub-base valve G1/4	39, 42, 45
[5]	Manifold rail	VABM-L1...	For 4 to 10, 12, 16, 20 and 24 valve positions	48
[6]	H-rail mounting	VAMET-M4	2 pieces for fitting the valve terminal on an H-rail	95
[7]	H-rail	NRH-35-2000	For mounting the valve terminal	95
[8]	Separator	VABD-...	For creating pressure zones	92
[9]	Cover cap	VMPA-HBT-B	Non-detenting, for manual override	93
[10]	Cover cap	VMPA-HBV-B	Covered, for manual override	93
[11]	Inscription label holders	ASLR-D-L1	For inscription label and covering for the retaining screw/manual override	95
[12]	Covering	VAMC...	Detenting, for manual override	93

## Peripherals overview – Example sub-base valves

### Valve terminal with multi-pin plug and I-Port interface

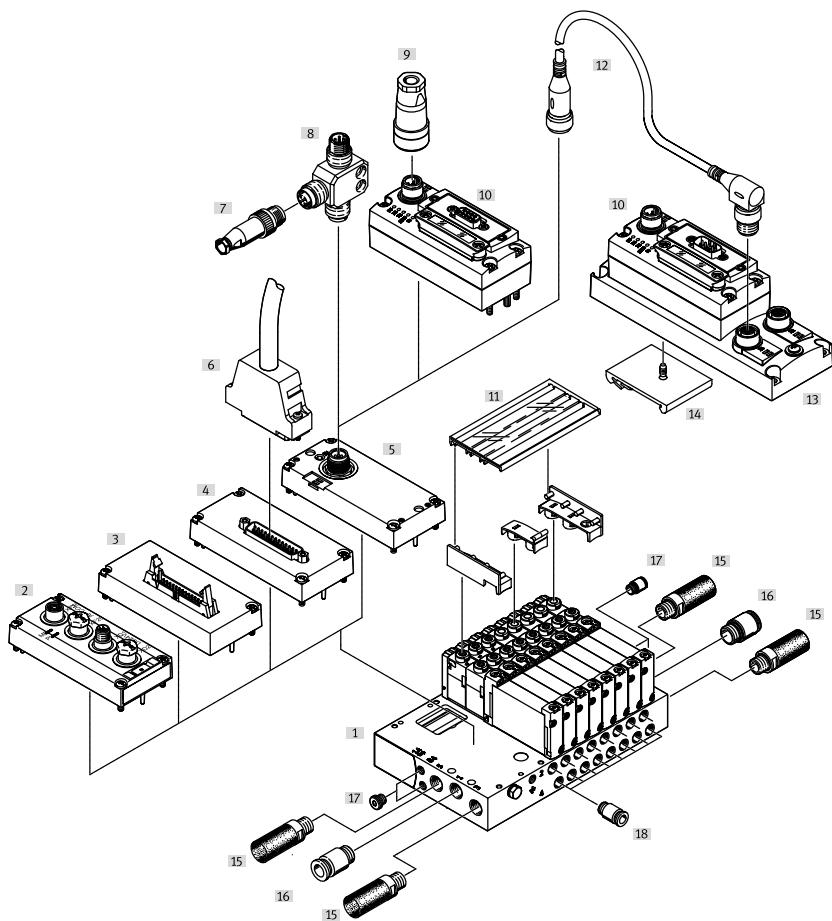


#### Accessories

	Type	Description	→ Page/Internet
[1]	Manifold rail	VABM-L1-...	For 4 to 10, 12, 16, 20 and 24 valve positions
[2]	Electrical interface	VAEM-L1-S-...-AP	AP interface for CPX-AP-I
[3]	Electrical interface	VAEM-L1-S-M3-...	Ribbon cable
[4]	Electrical interface	VAEM-L1-S-M1-...	Sub-D
[5]	Electrical interface	VAEM-L1-S-...-PT	I-Port interface/IO-Link®
[6]	Connecting cable	NEBV-...	Sub-D cable
[7]	Plug	SEA-M12-5GS-PG7	Straight, for T adapter FB-TA
[8]	T adapter	FB-TA-M12-5POL	For IO-Link® and load voltage supply
[9]	Power supply socket	FBSD-.../NTSD-...	Power supply for CTEU bus nodes
[10]	CTEU	CTEU-...	Bus node
[11]	Inscription label holders	ASCF-H-L1	For identifying valves
[12]	Connecting cable	NEBU-...	–
[13]	Electrical connection block	CAPC-F1-E-M12	For connecting a second device with I-Port interface
[14]	H-rail mounting	CAFM-F1-H	For electrical connection block CAPC
[15]	Silencer	U...	For port 3 and 5
[16]	Push-in fitting	QS...	For air supply, port 1
[17]	Blanking plug	B-...	For internal/external pilot air
[18]	Push-in fitting	QS...	For port 2 and 4

## Peripherals overview – Example sub-base valves


### Valve terminal with multi-pin connection

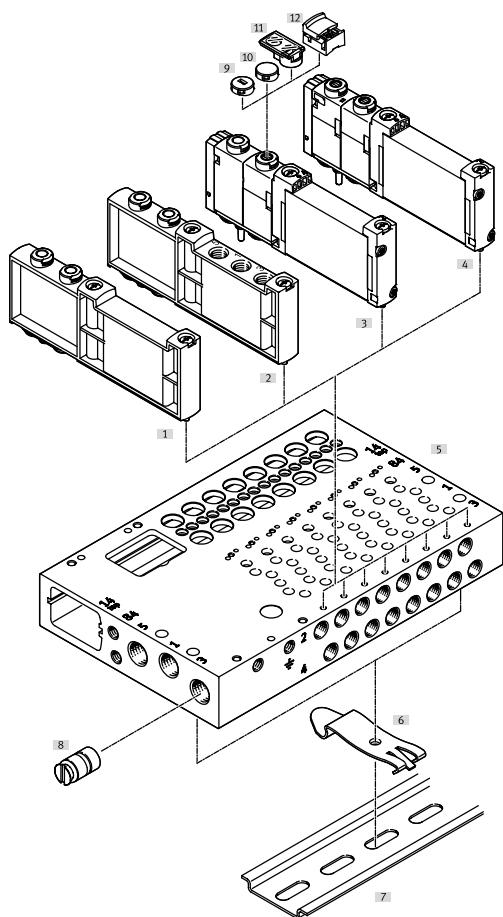

Accessories	Type	Description	→ Page/Internet
[1] Cover plate	VABB-L1...	For covering a vacant position	92
[2] Supply plate	VABF-L1...	For air supply at port 1 and ports 3 and 5	92
[3] Solenoid valve	VUVG-...	Sub-base valve M5/M7, G1/8	39, 42, 45
[4] Solenoid valve	VUVG-...	Sub-base valve G1/4	39, 42, 45
[5] Manifold rail	VABM-L1...	For 4 to 10, 12, 16, 20 and 24 valve positions	48
[6] H-rail mounting	VAME-T-M4	2 pieces for fitting the valve terminal on an H-rail	95
[7] H-rail	NRH-35-2000	For mounting the valve terminal	95
[8] Separator	VABD-...	For creating pressure zones	92
[9] Cover cap	VMPA-HBT-B	Non-detenting, for manual override	93
[10] Cover cap	VMPA-HBV-B	Covered, for manual override	93
[11] Inscription label holders	ASLR-D-L1	For inscription label and covering for the retaining screw/manual override	95
[12] Covering	VAMC-...	Detenting, for manual override	93

## Peripherals overview – Example sub-base valves

## I-Port interface with interlock

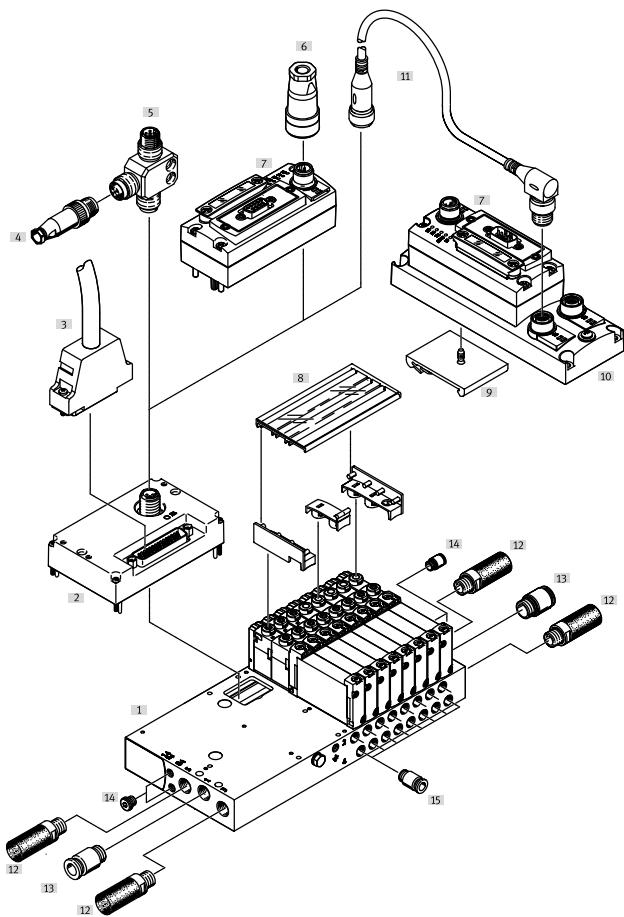

## Accessories

	Type	Description	→ Page/Internet
[1]	Manifold rail	VABM-L1...	For 4 to 10, 12, 16, 20 and 24 valve positions
[2]	Electrical interface	VAEM-L1-S-24...	I-Port interface with interlock
[3]	Connecting cable	NEBV...	Sub-D cable
[4]	Plug	SEA-M12-5GS-PG7	Straight, for T adapter FB-TA
[5]	T adapter	FB-TA-M12-5POL	For IO-Link® and load voltage supply
[6]	Power supply socket	NTSD-.../FBSD-...	Power supply for CTEU bus nodes
[7]	CTEU	CTEU...	Bus node
[8]	Inscription label holders	ASCF-H-L1	For identifying valves
[9]	H-rail mounting	CAFM-F1-H	For electrical connection block CAPC
[10]	Electrical connection block	CAPC-F1-E-M12	For connecting a second device with I-Port interface
[11]	Connecting cable	NEBU-...	–
[12]	Silencer	U-...	For port 3 and 5
[13]	Push-in fitting	QS-...	For air supply, port 1
[14]	Blanking plug	B-...	For internal/external pilot air
[15]	Push-in fitting	QS-...	For port 2 and 4

## Peripherals overview – Example sub-base valves

### Valve terminal with multi-pin plug/fieldbus connection and individually electrically actuated valves


In applications with specific emergency off requirements, it may be necessary to switch one or more valves separately from the valve terminal controller.

Valves VUVG (→ VUVG) with an individual electrical connection are therefore mounted on the valve terminal.

Valves with an individual electrical connection require a special seal when mounted within a valve terminal.

They are therefore ordered/fitted as follows:

- together with the valve terminal using the valve terminal configurator
- individually/subsequently to replace a cover plate in a vacant position

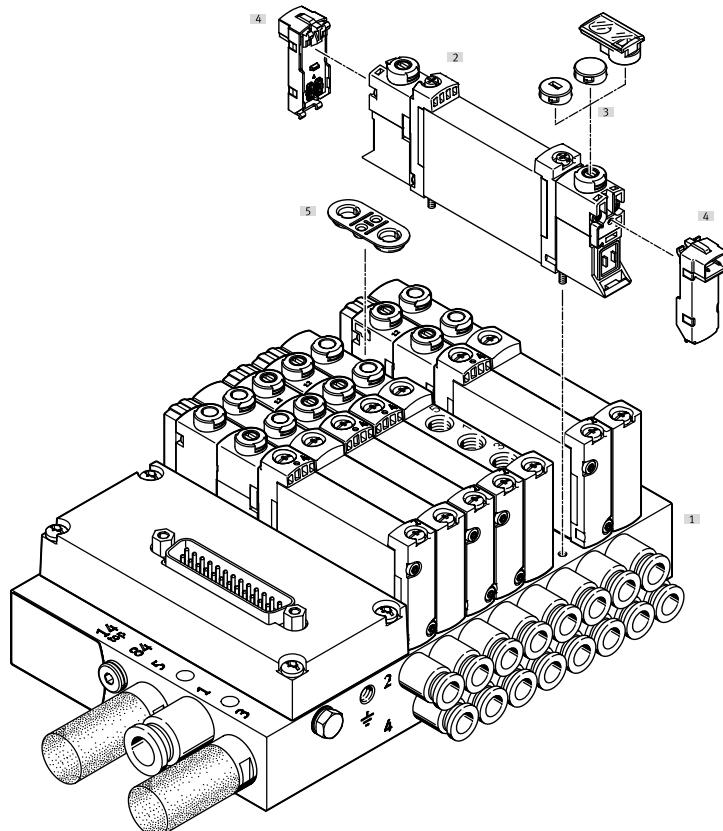

#### Accessories

	Type	Description	→ Page/Internet
[1]	Manifold rail	VABM-L1-10	For 2 to 10, 12 and 16 valve positions
[2]	Solenoid valve	VUVG	Sub-base valve
[3]	Cover cap	VMPA	For manual override
[4]	Electrical connection block	VAVE	For individual connection
[5]	Seal	–	Included in the scope of delivery of the cover plate for a vacant position

## Type codes

001	Series
VTUG	Valve terminal
002	Size
10	Size 10
14	Size 14
18	Size 18
003	Valve control
M	Multi-pin
V	Interface for fieldbus module
004	Multi-pin plug connection type
	None
RC	Ribbon cable
SD	Sub-D plug
005	Circuitry
R	Holding current reduction with integrated protective circuit
006	Bus protocol/activation
	None
AP	CPX-AP interface
LK	IO-Link®
PT	I-Port interface
007	Outlet direction of electrical components
	Top
L	Left
008	Degree of protection, electrical system
	Standard
S8	IP67
009	Valve type
B	Sub-base valve
S	Semi-inline valve
010	Nominal operating voltage
1	24 V DC
011	Manual override
	None
H	Non-detenting
S	Covered
T	Non-detenting, detenting with accessories
Y	Detenting
012	Pilot air
	Internal
Z	External
013	Additional function
	None
L	Interlock
014	Number of pins
	None
25	25-pin
26	26-pin
44	44-pin
50	50-pin
015	Pin allocation
	Standard
V20	For 12 double solenoid/bistable or 24 single solenoid/monostable valves
V21	For 18 double solenoid/bistable and 6 single solenoid/monostable valves
V22	For 10 double solenoid/bistable valves
V23	For 8 double solenoid/bistable and 4 single solenoid/monostable valves
V24	For 4 double solenoid/bistable and 12 single solenoid/monostable valves
V25	For 20 single solenoid/monostable valves
V26	For 24 double solenoid/bistable valves
016	Material of fittings
	Standard
B2	Brass, nickel-plated
V1	Stainless steel
017	Compressed air supply connection
Q6	Push-in connector 6 mm
Q8	Push-in connector 8 mm
Q10	Push-in connector 10 mm
Q12	Push-in connector 12 mm
Q16	Push-in connector 16 mm
G18	G1/8
G14	G1/4
G38	G3/8
T14	Push-in connector 1/4"
T516	Push-in connector 5/16"
T38	Push-in connector 3/8"
T12	Push-in connector 1/2"
018	Compressed air supply connection position
	Both sides
B	Underneath
L	Left
R	Right
FD	Front, both sides, for control cabinet
FDL	Front, left, for control cabinet
FDR	Front, right, for control cabinet
019	Compressed air supply connection type
	Straight
A	Elbow fitting
020	Exhaust connection
DQ	Push-in fitting
DT	Thread
U	Silencer
UC	Silencer

## Type codes

021		Exhaust connection position
		Both sides
B		Underneath
L		Left
R		Right
FD		Front, both sides, for control cabinet
FDL		Front, left, for control cabinet
FDR		Front, right, for control cabinet

022		Valve connection
C		Blanking plug
G18		G1/8
G14		G1/4
M5		M5
M7		M7
Q3		Push-in connector 3 mm
Q4		Push-in connector 4 mm
QH4		Push-in connector 4 mm, with connecting thread M7
Q6		Push-in connector 6 mm
QH6		Push-in connector 6 mm, with connecting thread M7
Q8		Push-in connector 8 mm
Q10		Push-in connector 10 mm
T14		Push-in connector 1/4"
T18		Push-in connector 1/8"
T316		Push-in connector 3/16"
T38		Push-in connector 3/8"
T516		Push-in connector 5/16"
T532		Push-in connector 5/32"
TH14		Push-in connector 1/4", M7
TH316		Push-in connector 3/16", M7

023		Push-in connection type
S		Screwed

024		Valve connection position
		Front, straight outlet
FA		Angled outlet front, top
FB		Angled outlet front, top/underneath
FC		Angled outlet at front, underneath
FD		Front, straight outlet, for control cabinet
U		Underneath, straight outlet

025		Flow control function, connections 3 and 5
		None
FE		Fixed flow restrictor nominal size 0.5 mm
FF		Fixed flow restrictor nominal size 0.6 mm
FG		Fixed flow restrictor nominal size 0.7 mm
FH		Fixed flow restrictor nominal size 0.85 mm
FJ		Fixed flow restrictor nominal size 1 mm
FK		Fixed flow restrictor nominal size 1.05 mm
FL		Fixed flow restrictor, nominal size 1.15 mm
FM		Fixed flow restrictor nominal size 1.2 mm
FN		Fixed flow restrictor nominal size 1.4 mm
FP		Fixed flow restrictor nominal size 1.55 mm
FQ		Fixed flow restrictor, nominal size 1.6 mm
FR		Fixed flow restrictor nominal size 1.8 mm
ZS		Exhaust air

026		Shut-off function
		None
SH		With hot swap for supply air ports
WH		With hot swap for supply air ports and working ports

027		Position function
A		5/2 or 4/2-way valve, single solenoid/monostable, mechanical spring
B		5/3- or 4/3-way valve, mid-position pressurised
E		5/3 or 4/3-way valve, mid-position exhausted
G		5/3 or 4/3-way valve, mid-position closed
H		2x3/2-way valve, 1x normally closed, 1x normally open, pneumatic spring
J		4/2 or 5/2-way double pilot valve
K		2x3/2-way valve, normally closed
L		Vacant position
M		4/2 or 5/2-way valve, single solenoid/monostable, pneumatic spring
N		2x3/2-way valve, normally open
P		5/2-way valve, single solenoid/monostable, pneumatic/mechanical spring
S		Additional power supply
SD		Additional supply, exhaust, blanking plug
SW		Additional supply, exhaust, push-in fitting
VH		2x3/2-way valve, 1x normally closed, 1x normally open, mechanical spring
VK		2x3/2-way valve, normally closed, mechanical spring
VN		2x3/2-way valve, normally open, mechanical spring
VW		1x3/2-way valve, normally open, external compressed air supply
VX		1x3/2-way valve, normally closed, external compressed air supply

028		Working port
		As selected
T14		Push-in connector 1/4"
TH14		Push-in connector 1/4", M7
T18		Push-in connector 1/8"
T316		Push-in connector 3/16"
TH316		Push-in connector 3/16", M7
T516		Push-in connector 5/16"
T532		Push-in connector 5/32"
T38		Push-in connector 3/8"
QG14		G1/4
QG18		G1/8
CC		Blanking plug
Q3		Push-in connector 3 mm
Q4		Push-in connector 4 mm
QH4		Push-in connector 4 mm, with connecting thread M7
Q6		Push-in connector 6 mm
QH6		Push-in connector 6 mm, with connecting thread M7
Q8		Push-in connector 8 mm
Q10		Push-in connector 10 mm
QM5		M5
QM7		M7

## Type codes

029	Working port, duct 4
	As selected
XCC	Blanking plug
XQG18	G1/8
XQM5	M5
XQ2	Push-in connector 2 mm
XQM7	M7
XQ3	Push-in connector 3 mm
XQ4	Push-in connector 4 mm
XQH4	Push-in connector 4 mm, with connecting thread M7
XQ6	Push-in connector 6 mm
XQH6	Push-in connector 6 mm, with connecting thread M7
XQ8	Push-in connector 8 mm
XT14	Push-in connector 1/4"
XT18	Push-in connector 1/8"
XT316	Push-in connector 3/16"
XT516	Push-in connector 5/16"
XT532	Push-in connector 5/32"
XTH14	Push-in connector 1/4", M7
XTH316	Push-in connector 3/16", M7
030	Working port position
	As selected
FA	Angled outlet at top
FB	Angled outlet at top/underneath
FC	Angled outlet underneath
031	Duct separation at valve level
	None
TP	Separator, duct 1
TR	Separator duct 3, 5
TS	Separator duct 1, 3, 5
032	Electrical connection
	As selected
XH1	Individual connection, connection pattern H, horizontal connector
XH3	Individual connection, connection pattern H, vertical plug
XR1	Individual connection M8, 3-pin
XX	Individual connection for vacant position
033	Flow control function, connection 3
	None
FE	Nominal size 0.5 mm
FF	Nominal size 0.6 mm
FG	Nominal size 0.7 mm
FH	Nominal size 0.85 mm
FJ	Nominal size 1 mm
FK	Nominal size 1.05 mm
FL	nominal size 1.15 mm
FM	Nominal size 1.2 mm
FN	nominal size 1.4 mm
FP	Nominal size 1.55 mm
FQ	Nominal size 1.6 mm
FR	Nominal size 1.8 mm
ZS	Exhaust air

034	Flow control function, connection 5
	None
XFE	Nominal size 0.5 mm
XFF	Nominal size 0.6 mm
XFG	Nominal size 0.7 mm
XFH	Nominal size 0.85 mm
XFJ	Nominal size 1 mm
XFK	Nominal size 1.05 mm
XFL	nominal size 1.15 mm
XFM	Nominal size 1.2 mm
XFN	nominal size 1.4 mm
XFP	Nominal size 1.55 mm
XFQ	Nominal size 1.6 mm
XFR	Nominal size 1.8 mm
ZS	Exhaust air
035	Certification
	None
036	Mounting accessories
	None
A	Mounting bracket for regulator knob
H	H-rail mounting
037	Accessories for IO-Link®
	None
XM	T-adapter, M12, 5-pin, for IO-Link® and load supply
038	Accessories for IO-Link®, separate load supply
	None
XN	Straight plug, M12, 5-pin
039	Electrical accessories
	None
M1	Connecting cable, multi-pin, 2.5 m
M2	Connecting cable, multi-pin, 5 m
M3	Connecting cable, multi-pin, 10 m
MA1	Connecting cable, multi-pin, angled, 2.5 m
MA2	Connecting cable, multi-pin, angled, 5 m
MA3	Connecting cable, multi-pin, angled, 10 m
040	Inscription label holder for valves
	None
TV	Transparent, valve
TT	Transparent, valve terminal
041	Seal
	None
SC	With seal for control cabinet integration
042	Surface coating
	Standard
VA	Stainless steel coating
043	Copper content
	Standard

## Datasheet – Semi in-line valves M5/M7

## Function

2x 3/2C, 2x 3/2U, 2x 3/2H  
 5/2-way, single solenoid  
 5/2-way, double solenoid  
 5/3C, 5/3U, 5/3E

Circuit diagrams → page 17

-  - Size 10 mm-  - Flow rate  
130 ... 330 l/min-  - Voltage  
24 V DC

## General technical data

Valve function	T32-A	T32-M			M52-R	B52	M52-M	P53							
Normal position	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	-	-							
Stable position	Monostable				Bistable		Monostable								
Pneumatic spring return	Yes	No		Yes <sup>5)</sup>	-	No	-								
Mechanical spring return	No	Yes		Yes <sup>5)</sup>	-	Yes	Yes								
Vacuum operation at port 1	No	With external pilot air													
Design	Piston spool														
Sealing principle	Soft														
Actuation type	Electrical														
Type of control	Piloted														
Pilot air supply	External														
Exhaust air function	Can be throttled														
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting														
Type of mounting	On manifold rail														
Mounting position	Any														
Overlap	Positive overlap						Indeterminate overlap								
Signal status indication	LED														
Flow rate on manifold rail M5	[l/min]	150	130	230		210									
Flow rate on manifold rail M7	[l/min]	160	140	330	290	280									
Size	[mm]	10													
Connection	1, 3, 5, 12/14, 82/84	On manifold rail													
	2, 4	M5 (UVVG-S10....-M5)													
		M7 (UVVG-S10....-M7)													
Product weight	[g]	59	53	60	53	58									
Certification	c UL us - Recognized (OL)		RCM												
	CE marking (see declaration of conformity) <sup>6)</sup> To EU EMC Directive														
Corrosion resistance class CRC <sup>7)</sup>		2													

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) Combined reset method

6) For information about the area of use, see the declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

7) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Semi in-line valves M5/M7

Operating and environmental conditions							
Valve function		T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]					
Operating pressure	Internal pilot air supply	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.15 ... 0.8	0.3 ... 0.8
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	1.5 ... 8	3 ... 8
	External pilot air supply	[MPa]	0.15 ... 1	-0.09 ... 1	-	-0.09 ... 1	-0.09 ... 0.8
		[bar]	1.5 ... 10	-0.9 ... 10		-0.9 ... 8	-0.9 ... 10
Pilot pressure <sup>4)</sup>		[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.15 ... 0.8	0.3 ... 0.8
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	1.5 ... 8	3 ... 8
Ambient temperature	[°C]	-5 ... +60					
Temperature of medium	[°C]	-5 ... +60					
LABS (PWIS) conformity		VDMA24364-B1/B2-L					

1) Pneumatic spring

2) Mechanical spring

3) Mixed, pneumatic/mechanical spring

4) See graphs on page 12

## Electrical data

Electrical connection	Via E-box
Operating voltage	[V DC] 24 ±10%
Power	[W] 1/0.4 (after 25 ms)
Duty cycle	[%] 100
Max. switching frequency	[Hz] 3
Protection rating to EN 60529 <sup>1)</sup>	Individual valve IP65, IP67 Valve terminal VTUG IP40, IP67/IP65

1) Depending on the configuration selected

## Safety characteristics

Max. positive test pulse with logic 0	[μs]	1600
Max. negative test pulse with logic 1	[μs]	3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27	
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6	

## Information on materials

Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

## Valve switching times

Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53
Switching time on	[ms] 8	10	9	-	12	12
Switching time off	[ms] 20	20	21	-	30	38
Switching time changeover	[ms] -	-	-	9	-	16

1) Pneumatic spring


2) Mechanical spring

3) Mixed, pneumatic/mechanical spring

## Datasheet – Semi in-line valves M5/M7

## Dimensions

Semi in-line valves M5/M7

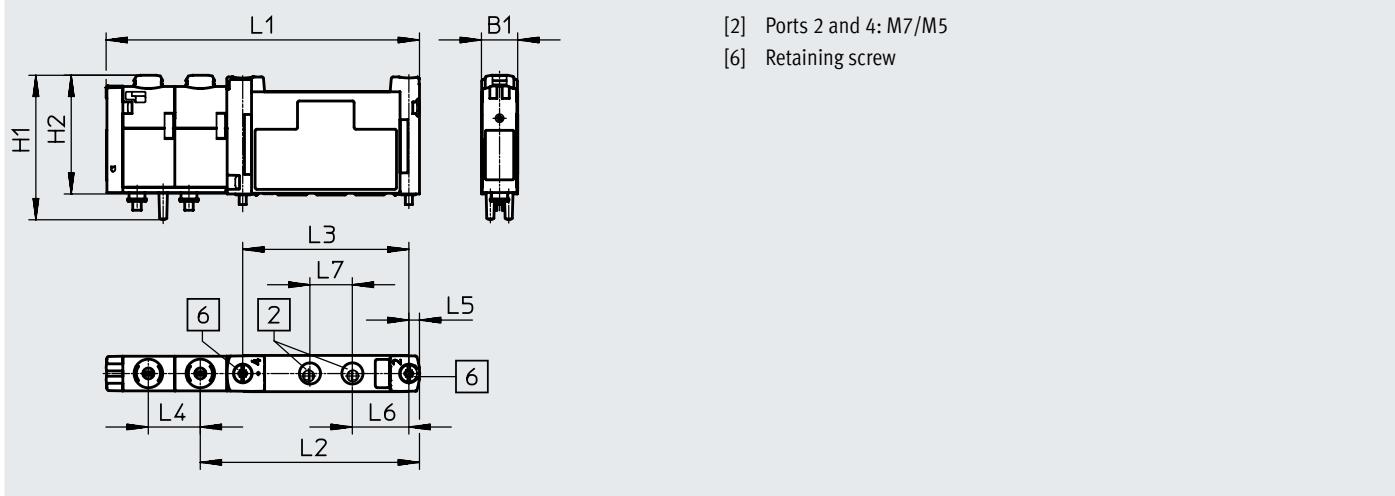
Download CAD data → [www.festo.com](http://www.festo.com)

Type	B1	H1	H2	L1	L2	L3	L4	L5	L6	L7
VUVG-S10-...-M5-1T1L	10.3	40.7	33.6	88.6	62	47	14.7	3	16	12
VUVG-S10-...-M7-1T1L										

## Ordering data

	Description		Part no.	Type		
<b>Semi in-line valve M5</b>						
	<b>2x 3/2-way valve</b>					
	External pilot air supply	Normally closed, pneumatic spring return	573386	VUVG-S10-T32C-AZT-M5-1T1L		
		Normally open, pneumatic spring return	573387	VUVG-S10-T32U-AZT-M5-1T1L		
		1x normally open, 1x normally closed, pneumatic spring return	573388	VUVG-S10-T32H-AZT-M5-1T1L		
		Normally closed, mechanical spring return	573389	VUVG-S10-T32C-MZT-M5-1T1L		
		Normally open, mechanical spring return	573390	VUVG-S10-T32U-MZT-M5-1T1L		
<b>5/2-way valve, single solenoid</b>		External pilot air supply	Mechanical spring return	573393	VUVG-S10-M52-MZT-M5-1T1L	
	Pneumatic/mechanical spring return		573392	VUVG-S10-M52-RZT-M5-1T1L		
	<b>5/2-way valve, double solenoid</b>	External pilot air supply		573394	VUVG-S10-B52-ZT-M5-1T1L	
		<b>5/3-way valve</b>	External pilot air supply	Mid-position closed, mechanical spring return	573395	VUVG-S10-P53C-ZT-M5-1T1L
				Mid-position pressurised, mechanical spring return	573397	VUVG-S10-P53U-ZT-M5-1T1L
Mid-position exhausted, mechanical spring return				573396	VUVG-S10-P53E-ZT-M5-1T1L	

## Ordering data

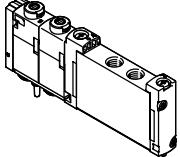Ordering data	Description	Part no.	Type
<b>Semi in-line valve M7</b>			
<b>2x 3/2-way valve</b>			
	External pilot air supply	573398	VUVG-S10-T32C-AZT-M7-1T1L
	Normally closed, pneumatic spring return	573399	VUVG-S10-T32U-AZT-M7-1T1L
	1x normally open, 1x normally closed, pneumatic spring return	573400	VUVG-S10-T32H-AZT-M7-1T1L
	Normally closed, mechanical spring return	573401	VUVG-S10-T32C-MZT-M7-1T1L
	Normally open, mechanical spring return	573402	VUVG-S10-T32U-MZT-M7-1T1L
	1x normally open, 1x normally closed, mechanical spring return	573403	VUVG-S10-T32H-MZT-M7-1T1L
<b>5/2-way valve, single solenoid</b>			
External pilot air supply	Mechanical spring return	573405	VUVG-S10-M52-MZT-M7-1T1L
	Pneumatic/mechanical spring return	573404	VUVG-S10-M52-RZT-M7-1T1L
<b>5/2-way valve, double solenoid</b>			
External pilot air supply		573406	VUVG-S10-B52-ZT-M7-1T1L
<b>5/3-way valve</b>			
External pilot air supply	Mid-position closed, mechanical spring return	573407	VUVG-S10-P53C-ZT-M7-1T1L
	Mid-position pressurised, mechanical spring return	573409	VUVG-S10-P53U-ZT-M7-1T1L
	Mid-position exhausted, mechanical spring return	573408	VUVG-S10-P53E-ZT-M7-1T1L

## Datasheet – Semi in-line valves G1/8

## Function

2x 3/2C, 2x 3/2U, 2x 3/2H

-  - Size 14 mm

5/2-way, single solenoid

-  - Flow rate  
520 ... 630 l/min

5/2-way, double solenoid

-  - Voltage  
24 V DC

5/3C, 5/3U, 5/3E

Circuit diagrams → page 17



## General technical data

Valve function	T32-A	T32-M			M52-A	B52	M52-M	P53						
Normal position	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	–	–						
Stable position	Monostable					Bistable	Monostable							
Pneumatic spring return	Yes		No		Yes	–	No	–						
Mechanical spring return	No		Yes		No	–	Yes	Yes						
Vacuum operation at port 1	No		With external pilot air											
Design	Piston spool													
Sealing principle	Soft													
Actuation type	Electrical													
Type of control	Piloted													
Pilot air supply	External													
Exhaust air function	Can be throttled													
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting													
Type of mounting	On manifold rail													
Mounting position	Any													
Overlap	Positive overlap													
Signal status indication	LED													
Flow rate on manifold rail G1/8	[l/min]	610	520	620	630	620	590							
Size	[mm]	14												
Connection	1, 3, 5, 12/14, 82/84	On manifold rail												
	2, 4	G1/8												
Product weight	[g]	102	100	91	98	89	95							
Certification		c UL us - Recognized (OL) RCM												
CE marking (see declaration of conformity) <sup>5)</sup>		To EU EMC Directive												
Corrosion resistance class CRC <sup>6)</sup>		2												

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) For information about the area of use, see the declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

6) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Semi in-line valves G1/8

<b>Operating and environmental conditions</b>							
Valve function		T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-A <sup>1)</sup>	B52	M52-M <sup>2)</sup>	P53
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]					
Operating pressure	Internal pilot air supply	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.15 ... 0.8	0.3 ... 0.8
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	1.5 ... 8	3 ... 8
External pilot air supply		[MPa]	0.15 ... 1	-0.09 ... 1		-0.09 ... 0.8	-0.09 ... 1
		[bar]	1.5 ... 10	-0.9 ... 10		-0.9 ... 8	-0.9 ... 10
Pilot pressure <sup>3)</sup>		[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.15 ... 0.8	0.3 ... 0.8
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	1.5 ... 8	3 ... 8
Ambient temperature	[°C]	-5 ... +60					
Temperature of medium	[°C]	-5 ... +60					
LABS (PWIS) conformity		VDMA24364-B1/B2-L					

1) Pneumatic spring

2) Mechanical spring

3) See graphs on page 12

**Electrical data**

Electrical connection	Via E-box
Operating voltage	[V DC] 24 ±10%
Power	[W] 1/0.4 (after 25 ms)
Duty cycle	[%] 100
Max. switching frequency	[Hz] 3
Protection rating to EN 60529 <sup>1)</sup>	Individual valve IP65, IP67 Valve terminal VTUG IP40, IP67/IP65

1) Depending on the configuration selected

**Safety characteristics**

Max. positive test pulse with logic 0	[μs] 1600
Max. negative test pulse with logic 1	[μs] 3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

**Information on materials**

Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

**Valve switching times**

Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-A <sup>1)</sup>	B52	M 52-M <sup>2)</sup>	P53
Switching time on	[ms] 10	13	13	–	10	15
Switching time off	[ms] 29	21	26	–	38	42
Switching time changeover	[ms] –	–	–	9	–	25


1) Pneumatic spring

2) Mechanical spring

## Datasheet – Semi in-line valves G1/8

## Dimensions

Semi in-line valves G1/8

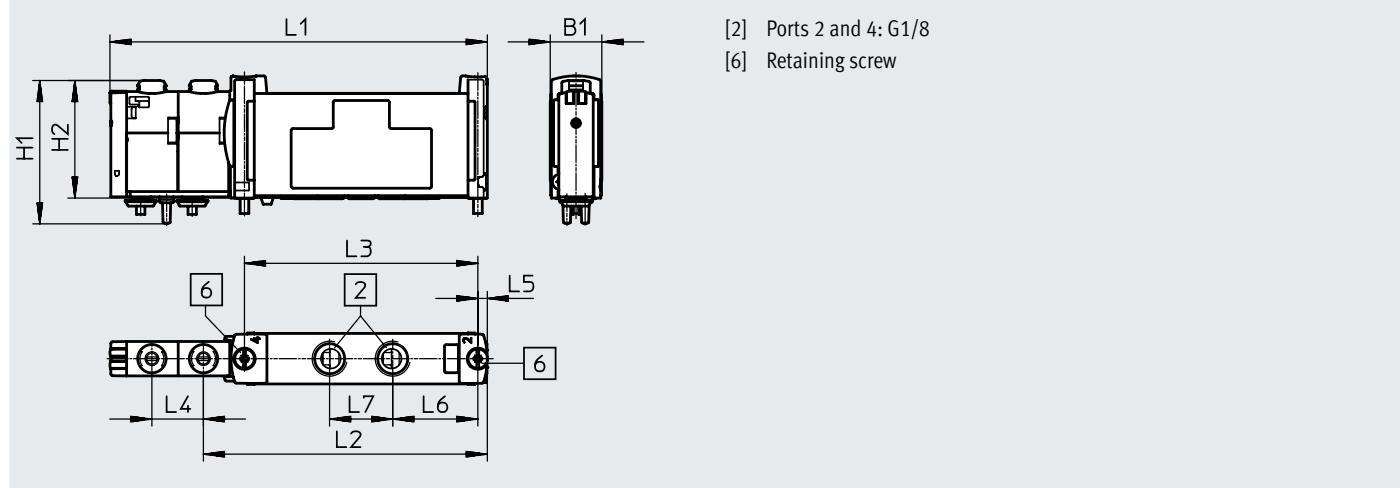Download CAD data → [www.festo.com](http://www.festo.com)

Type	B1	H1	H2	L1	L2	L3	L4	L5	L6	L7
VUVG-S14-...-G18-1T1L	14.7	40.9	33.5	107.6	81	66.5	14.7	2.8	24.3	18

Ordering data		Description	Part no.	Type
<b>Semi in-line valve G1/8</b>				
	<b>2x 3/2-way valve</b>			
	External pilot air supply	Normally closed, pneumatic spring return	573464	VUVG-S14-T32C-AZT-G18-1T1L
		Normally open, pneumatic spring return	573465	VUVG-S14-T32U-AZT-G18-1T1L
		1x normally open, 1x normally closed, pneumatic spring return	573466	VUVG-S14-T32H-AZT-G18-1T1L
		Normally closed, mechanical spring return	573467	VUVG-S14-T32C-MZT-G18-1T1L
		Normally open, mechanical spring return	573468	VUVG-S14-T32U-MZT-G18-1T1L
	1x normally open, 1x normally closed, mechanical spring return	573469	VUVG-S14-T32H-MZT-G18-1T1L	
<b>5/2-way valve, single solenoid</b>				
External pilot air supply	Pneumatic spring return	573470	VUVG-S14-M52-AZT-G18-1T1L	
	Mechanical spring return	573471	VUVG-S14-M52-MZT-G18-1T1L	
<b>5/2-way valve, double solenoid</b>				
External pilot air supply		573472	VUVG-S14-B52-ZT-G18-1T1L	
<b>5/3-way valve</b>				
External pilot air supply	Mid-position closed, mechanical spring return	573473	VUVG-S14-P53C-ZT-G18-1T1L	
	Mid-position pressurised, mechanical spring return	573475	VUVG-S14-P53U-ZT-G18-1T1L	
	Mid-position exhausted, mechanical spring return	573474	VUVG-S14-P53E-ZT-G18-1T1	

## Datasheet – Semi in-line valves G1/4


Function  
2x 3/2C, 2x 3/2U, 2x 3/2H  
5/2-way, single solenoid  
5/2-way, double solenoid  
5/3C, 5/3U, 5/3E

- - Size 18 mm

- - Flow rate  
900 ... 1200 l/min

- - Voltage  
24 V DC

Circuit diagrams → page 17

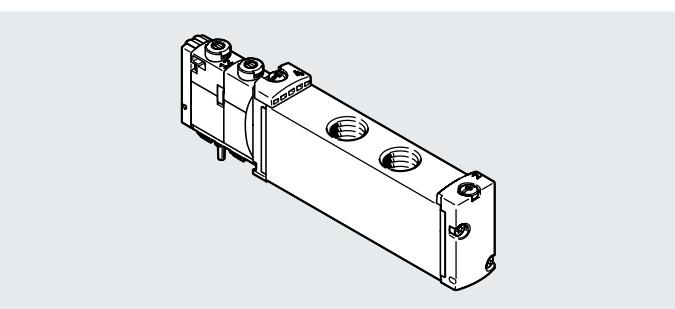

General technical data	T32-A	T32-M	M52-R	B52	M52-M	P53									
Valve function							C <sup>1)</sup>	U <sup>2)</sup>							
Normal position	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	–	–							
Stable position	Monostable			Bistable			Monostable								
Pneumatic spring return	Yes	No	Yes <sup>5)</sup>	–	No	–									
Mechanical spring return	No	Yes	Yes <sup>5)</sup>	–	Yes	Yes									
Vacuum operation at port 1	No	With external pilot air													
Design	Piston spool														
Sealing principle	Soft														
Actuation type	Electrical														
Type of control	Piloted														
Pilot air supply	External														
Exhaust air function	Can be throttled														
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting														
Type of mounting	On manifold rail														
Mounting position	Any														
Overlap	Positive overlap		Indeterminate overlap	Positive overlap	Indeterminate overlap	Positive overlap	Indeterminate overlap								
Signal status indication	LED														
Flow rate on manifold rail G1/8	[l/min]	950	900	1150	1200	1150	1000								
Size	[mm]	18													
Connection	1, 3, 5, 12/14, 82/84	On manifold rail													
	2, 4	G1/4													
Product weight	[g]	145	147	138	145	138	140								
Certification	c UL us - Recognized (OL) RCM														
CE marking (see declaration of conformity) <sup>6)</sup>	To EU EMC Directive														
Corrosion resistance class CRC <sup>7)</sup>	2														

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) Combined reset method

6) For information about the area of use, see the declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

7) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Semi in-line valves G1/4

Operating and environmental conditions						
Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53
Operating medium	Compressed air to ISO 8573-1:2010 [7:4:4]					
Pilot medium	Compressed air to ISO 8573-1:2010 [7:4:4]					
Note on the operating/pilot medium	Lubricated operation possible (in which case lubricated operation will always be required)					
Operating pressure	Internal pilot air supply [MPa] [bar]	0.15 ... 0.8 1.5 ... 8	0.2 ... 0.8 2 ... 8	0.15 ... 0.8 1.5 ... 8	0.3 ... 0.8 3 ... 8	
	External pilot air supply [MPa] [bar]	0.15 ... 1 1.5 ... 10	-0.09 ... 1 -0.9 ... 10		-0.09 ... 0.8 -0.9 ... 8	-0.09 ... 1 -0.9 ... 10
Pilot pressure <sup>4)</sup>	[MPa] [bar]	0.15 ... 0.8 1.5 ... 8	0.2 ... 0.8 2 ... 8	0.15 ... 0.8 1.5 ... 8	0.3 ... 0.8 3 ... 8	
Ambient temperature	[°C]	-5 ... +60				
Temperature of medium	[°C]	-5 ... +60				
LABS (PWIS) conformity	VDMA24364-B1/B2-L					

- 1) Pneumatic spring  
 2) Mechanical spring  
 3) Mixed, pneumatic/mechanical spring  
 4) See graphs on page 12

Electrical data	
Electrical connection	Via E-box
Operating voltage	[V DC] 24 ±10%
Power	[W] 1
Duty cycle	[%] 100
Max. switching frequency	[Hz] 3
Protection rating to EN 60529 <sup>1)</sup>	Individual valve IP65, IP67 Valve terminal VTUG IP40, IP67/IP65

1) Depending on the configuration selected

Safety characteristics	
Max. positive test pulse with logic 0	[μs] 1600
Max. negative test pulse with logic 1	[μs] 3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

Information on materials	
Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

Valve switching times						
Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53
Switching time on	[ms] 15	25	20	–	13	20
Switching time off	[ms] 37	33	35	–	50	68
Switching time changeover	[ms] –	–	–	15	–	35


- 1) Pneumatic spring  
 2) Mechanical spring  
 3) Mixed, pneumatic/mechanical spring

## Datasheet – Semi in-line valves G1/4

## Dimensions

Download CAD data → [www.festo.com](http://www.festo.com)

Semi in-line valve G1/4

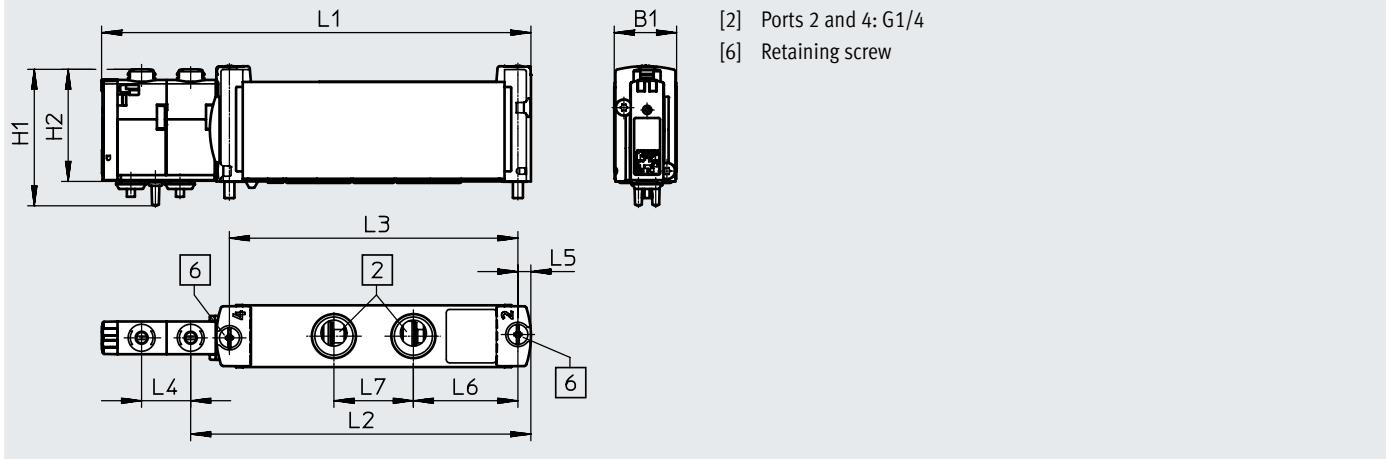

Type	B1	H1	H2	L1	L2	L3	L4	L5	L6	L7
VUVG-S18-...-G14-1T1L	18.7	40.9	33.6	128.6	101.9	86.4	14.7	3.9	31.3	23.8

## Ordering data

Description	Part no.	Type
<b>Semi in-line valve G1/4</b>		
<b>2x 3/2-way valve</b>		
External pilot air supply	8004873	VUVG-S18-T32C-AZT-G14-1T1L
	8004874	VUVG-S18-T32U-AZT-G14-1T1L
	8004875	VUVG-S18-T32H-AZT-G14-1T1L
	8004876	VUVG-S18-T32C-MZT-G14-1T1L
	8004877	VUVG-S18-T32U-MZT-G14-1T1L
	8004878	VUVG-S18-T32H-MZT-G14-1T1L
<b>5/2-way valve, single solenoid</b>		
External pilot air supply	8004879	VUVG-S18-M52-RZT-G14-1T1L
	8004880	VUVG-S18-M52-MZT-G14-1T1L
<b>5/2-way valve, double solenoid</b>		
External pilot air supply	8004881	VUVG-S18-B52-ZT-G14-1T1L
<b>5/3-way valve</b>		
External pilot air supply	8004882	VUVG-S18-P53C-ZT-G14-1T1L
	8004883	VUVG-S18-P53E-ZT-G14-1T1L
	8004884	VUVG-S18-P53U-ZT-G14-1T1L

## Datasheet – Sub-base valve M5/M7

## Function

3/2C, 3/2U

2x 3/2C, 2x 3/2U, 2x 3/2H

5/2-way, single solenoid

5/2-way, double solenoid

5/3C, 5/3U, 5/3E

-  - Size 10 mm-  - Flow rate  
130 ... 300 l/min-  - Voltage  
24 V DC

Circuit diagrams → page 17



## General technical data

Valve function	T32-A	T32-M			M32-R	M52-R	B52	M52-M	P53									
Normal position	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	–									
Stable position	Monostable						Bistable	Monostable										
Pneumatic spring return	Yes	No		No	Yes <sup>5)</sup>	–	–	No	–									
Mechanical spring return	No	Yes		Yes	Yes <sup>5)</sup>	–	–	Yes	Yes									
Vacuum operation at port 1	No	With external pilot air																
Design	Piston spool																	
Sealing principle	Soft																	
Actuation type	Electrical																	
Type of control	Piloted																	
Pilot air supply	External																	
Exhaust air function	Can be throttled																	
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting																	
Type of mounting	On manifold rail																	
Mounting position	Any																	
Overlap	Positive overlap							Indeterminate overlap										
Signal status indication	LED																	
Standard nominal flow rate M5/M7	[l/min]	160	140		140	300	260	260										
Flow rate on manifold rail M5, front	[l/min]	150	130		130	220	220	200										
Flow rate on manifold rail M7, front	[l/min]	160	140		140	270	240	250										
Flow rate on manifold rail M7, underneath	[l/min]	160	140		140	300	260	260										
Size	[mm]	10																
Connection	1, 3, 5, 12/14, 82/84	On manifold rail																
	2, 4	On manifold rail																
Product weight	[g]	59	53		60	53	58											
Certification	c UL us - Recognized (OL) RCM																	
CE marking (see declaration of conformity) <sup>6)</sup>	To EU EMC Directive																	
Corrosion resistance class CRC <sup>7)</sup>	2																	

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) Combined reset method

6) For information about the area of use, see the declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

7) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Sub-base valve M5/M7

<b>Operating and environmental conditions</b>											
Valve function		T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M32-R <sup>3)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53			
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]									
Operating pressure	Internal pilot air supply	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8					
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8					
Pilot pressure <sup>4)</sup>	External pilot air supply	[MPa]	0.15 ... 1	-0.09 ... 1			-0.09 ... 0.8	-0.09 ... 1			
		[bar]	1.5 ... 10	-0.9 ... 10			-0.9 ... 8	-0.9 ... 10			
Ambient temperature	[°C]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8						
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8					
Ambient temperature	[°C]	-5 ... +60									
Temperature of medium	[°C]	-5 ... +60									
LABS (PWIS) conformity	Valve terminal VTUG-...	VDMA24364-B1/B2-L									

1) Pneumatic spring

2) Mechanical spring

3) Mixed, pneumatic/mechanical spring

4) See graphs on page 12

**Electrical data**

Electrical connection	Via E-box
Operating voltage	[V DC] 24 ±10%
Power consumption per valve solenoid	[W] 1/0.4 (after 25 ms)
Duty cycle	[%) 100
Max. switching frequency	[Hz] 3
Protection rating to EN 60529 <sup>1)</sup>	Individual valve IP65, IP67
	Valve terminal VTUG (all variants) IP40, IP67/IP65, NEMA 4X
	Valve terminal VTUG (for control cabinet installation) IP69K

1) Depending on the configuration selected

**Safety characteristics**

Max. positive test pulse with logic 0	[μs] 1600
Max. negative test pulse with logic 1	[μs] 3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

**Information on materials**

Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

**Valve switching times**

Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M32-R <sup>3)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53
Switching time on	[ms] 8	10	9	9	–	12	12
Switching time off	[ms] 20	20	17	21	–	30	38
Switching time changeover	[ms] –	–	–	–	9	–	16

1) Pneumatic spring


2) Mechanical spring

3) Mixed, pneumatic/mechanical spring

## Datasheet – Sub-base valve M5/M7

## Dimensions

Sub-base valve M5/M7

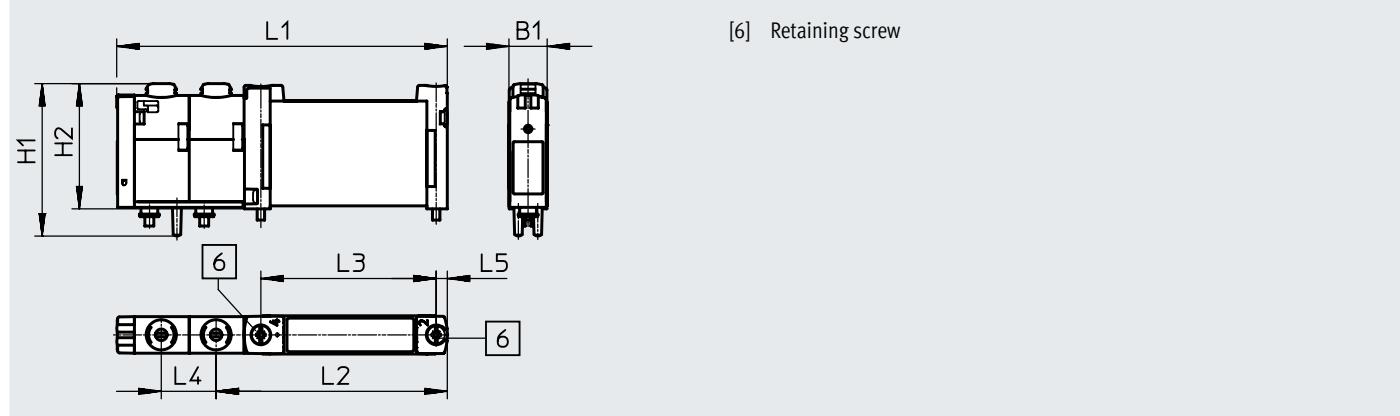Download CAD data → [www.festo.com](http://www.festo.com)

Type	B1	H1	H2	L1	L2	L3	L4	L5
VUVG-B10-...-F-1T1L	10.3	40.7	33	88.6	62	47	14.7	3

Ordering data		Description	Part no.	Type
<b>Sub-base valve M5/M7</b>				
	<b>3/2-way valve</b>			
	External pilot air supply	Normally closed, mechanical spring return	8028231	VUVG-B10Z-M32C-RZT-F-1T1L
	Normally open, mechanical spring return	8028232	VUVG-B10Z-M32U-RZT-F-1T1L	
<b>2x 3/2-way valve</b>				
	External pilot air supply	Normally closed, pneumatic spring return	573410	VUVG-B10-T32C-AZT-F-1T1L
		Normally open, pneumatic spring return	573411	VUVG-B10-T32U-AZT-F-1T1L
		1x normally open, 1x normally closed, pneumatic spring return	573412	VUVG-B10-T32H-AZT-F-1T1L
		Normally closed, mechanical spring return	573413	VUVG-B10-T32C-MZT-F-1T1L
		Normally open, mechanical spring return	573414	VUVG-B10-T32U-MZT-F-1T1L
		1x normally open, 1x normally closed, mechanical spring return	573415	VUVG-B10-T32H-MZT-F-1T1L
<b>5/2-way valve, single solenoid</b>				
	External pilot air supply	Mechanical spring return	573417	VUVG-B10-M52-MZT-F-1T1L
		Pneumatic/mechanical spring return	573416	VUVG-B10-M52-RZT-F-1T1L
<b>5/2-way valve, double solenoid</b>				
	External pilot air supply		573418	VUVG-B10-B52-ZT-F-1T1L
<b>5/3-way valve</b>				
	External pilot air supply	Mid-position closed, mechanical spring return	573419	VUVG-B10-P53C-ZT-F-1T1L
		Mid-position pressurised, mechanical spring return	573421	VUVG-B10-P53U-ZT-F-1T1L
		Mid-position exhausted, mechanical spring return	573420	VUVG-B10-P53E-ZT-F-1T1L

## Datasheet – Sub-base valve G1/8

## Function

3/2C, 3/2U

2x 3/2C, 2x 3/2U, 2x 3/2H

5/2-way, single solenoid

5/2-way, double solenoid

5/3C, 5/3U, 5/3E

- - Size 14 mm

- - Flow rate  
350 ... 560 l/min- - Voltage  
24 V DC

Circuit diagrams → page 17



## General technical data

Valve function	T32-A	T32-M		M32-A		M52-A	B52	M52-M	P53									
Normal position	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	-									
Stable position	Monostable					Bistable		Monostable										
Pneumatic spring return	Yes		No		Yes		-	No	-									
Mechanical spring return	No		Yes		No		No	Yes	Yes									
Vacuum operation at port 1	No		With external pilot air															
Design	Piston spool																	
Sealing principle	Soft																	
Actuation type	Electrical																	
Type of control	Piloted																	
Pilot air supply	External																	
Exhaust air function	Can be throttled																	
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting																	
Type of mounting	On manifold rail																	
Overlap	Positive overlap																	
Mounting position	Any																	
Signal status indication	LED																	
Standard nominal flow rate G1/8	[l/min]	530	470	350	550	560	550	510										
Flow rate on manifold rail G1/8, front	[l/min]	490	440	320	500	510	500	470										
Flow rate on manifold rail G1/8, underneath	[l/min]	530	470	350	550	560	550	510										
Size	[mm]	14																
Connection	1, 3, 5, 12/14, 82/84	On manifold rail																
	2, 4	On manifold rail																
Product weight	[g]	102	100	91	98	89	95											
Certification		c UL us - Recognized (OL) RCM																
CE marking (see declaration of conformity) <sup>5)</sup>		To EU EMC Directive																
Corrosion resistance class CRC <sup>6)</sup>		2																

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) For information about the area of use, see the declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

6) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Sub-base valve G1/8

<b>Operating and environmental conditions</b>							
Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M32-A <sup>1)</sup>	M52-A <sup>1)</sup>	B52	M52-M <sup>2)</sup>	P53
Operating medium	Compressed air to ISO 8573-1:2010 [7:4:4]						
Operating pressure	Internal pilot air supply [MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8		
	[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8		
External pilot air supply	[MPa]	0.15 ... 1	-0.09 ... 1			-0.09 ... 0.8	-0.09 ... 1
	[bar]	1.5 ... 10	-0.9 ... 10			-0.9 ... 8	-0.9 ... 10
Pilot pressure <sup>3)</sup>	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8		
	[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8		
Ambient temperature	[°C]	-5 ... +60					
Temperature of medium	[°C]	-5 ... +60					
LABS (PWIS) conformity	Valve terminal VTUG-...	VDMA24364-B1/B2-L					

1) Pneumatic spring

2) Mechanical spring

3) See graphs on page 12

**Electrical data**

Electrical connection	Via E-box
Operating voltage	[V DC]
Power	[W]
Duty cycle	[%]
Max. switching frequency	[Hz]
Protection rating to EN 60529 <sup>1)</sup>	Individual valve
	Valve terminal VTUG (all variants)
	Valve terminal VTUG (for control cabinet installation)

1) Depending on the configuration selected

**Safety characteristics**

Max. positive test pulse with logic 0	[μs]	1600
Max. negative test pulse with logic 1	[μs]	3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27	
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6	

**Information on materials**

Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

**Valve switching times**

Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M32-A <sup>1)</sup>	M52-A <sup>1)</sup>	B52	M52-M <sup>2)</sup>	P53
Switching time on	[ms]	10	13	13	13	–	10
Switching time off	[ms]	29	21	20	26	–	38
Switching time changeover	[ms]	–	–	–	–	9	–

1) Pneumatic spring


2) Mechanical spring

## Datasheet – Sub-base valve G1/8

## Dimensions

Download CAD data → [www.festo.com](http://www.festo.com)

Sub-base valve G1/8

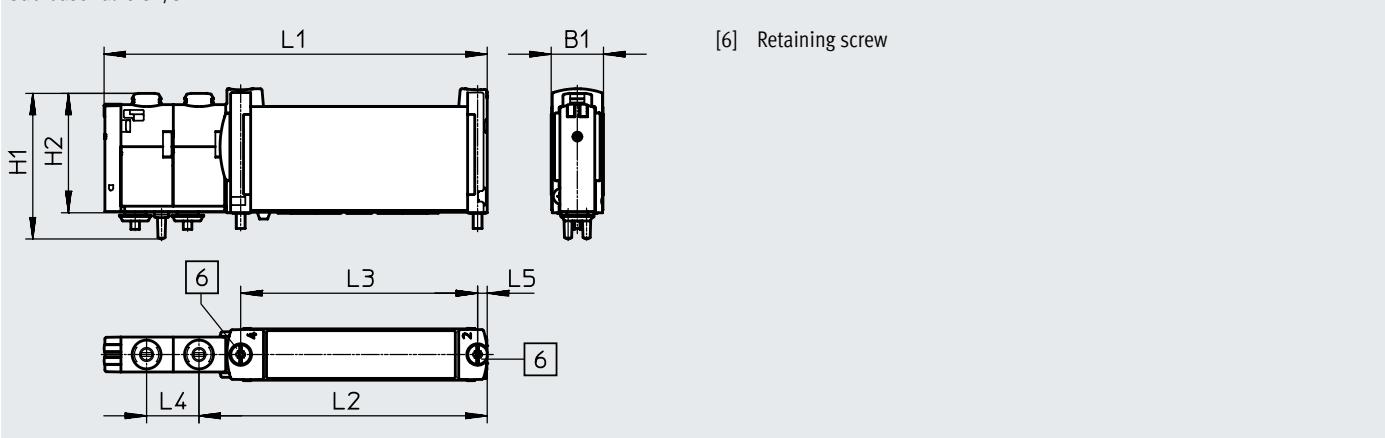

Type	B1	H1	H2	L1	L2	L3	L4	L5
VUVG-B14-...-F-1T1L	14.7	40.9	33.5	107.6	81	66.5	15.1	2.8

## Ordering data

Description	Part no.	Type
<b>Sub-base valve G1/8</b>		
<b>3/2-way valve</b>		
External pilot air supply	8028235	VUVG-B14Z-M32C-AZT-F-1T1L
	8028236	VUVG-B14Z-M32U-AZT-F-1T1L
<b>2x 3/2-way valve</b>		
External pilot air supply	573476	VUVG-B14-T32C-AZT-F-1T1L
	573477	VUVG-B14-T32U-AZT-F-1T1L
1x normally open, 1x normally closed, pneumatic spring return	573478	VUVG-B14-T32H-AZT-F-1T1L
Normally closed, mechanical spring return	573479	VUVG-B14-T32C-MZT-F-1T1L
Normally open, mechanical spring return	573480	VUVG-B14-T32U-MZT-F-1T1L
1x normally open, 1x normally closed, mechanical spring return	573481	VUVG-B14-T32H-MZT-F-1T1L
<b>5/2-way valve, single solenoid</b>		
External pilot air supply	573482	VUVG-B14-M52-AZT-F-1T1L
	573483	VUVG-B14-M52-MZT-F-1T1L
<b>5/2-way valve, double solenoid</b>		
External pilot air supply	573484	VUVG-B14-B52-ZT-F-1T1L
<b>5/3-way valve</b>		
External pilot air supply	573485	VUVG-B14-P53C-ZT-F-1T1L
	573487	VUVG-B14-P53U-ZT-F-1T1L
Mid-position exhausted, mechanical spring return	573486	VUVG-B14-P53E-ZT-F-1T1L

## Datasheet – Sub-base valve G1/4

## Function

2x 3/2C, 2x 3/2U, 2x 3/2H

 Size 18 mm

5/2-way, single solenoid

 Flow rate

5/2-way, double solenoid


800 ... 1000 l/min

5/3C, 5/3U, 5/3E

 Voltage

Circuit diagrams → page 17

24 V DC

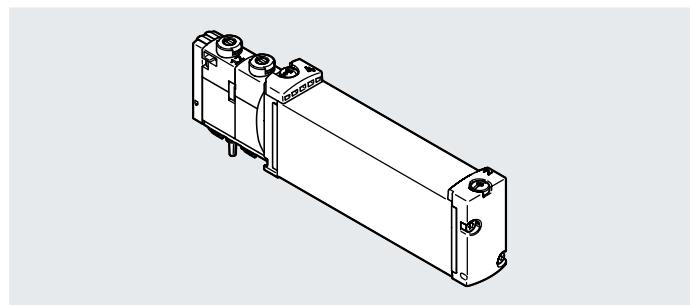

## General technical data

Valve function	T32-A	T32-M	M52-R	B52	M52-M	P53							
Normal position	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	C <sup>1)</sup>	U <sup>2)</sup>	H <sup>4)</sup>	–						
Stable position	Monostable			Bistable		Monostable							
Pneumatic spring return	Yes	No		Yes <sup>5)</sup>	–	No	–						
Mechanical spring return	No	Yes		Yes <sup>5)</sup>	–	Yes	Yes						
Vacuum operation at port 1	No	With external pilot air											
Design	Piston spool												
Sealing principle	Soft												
Actuation type	Electrical												
Type of control	Piloted												
Pilot air supply	External												
Exhaust air function	Can be throttled												
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting												
Type of mounting	On manifold rail												
Mounting position	Any												
Overlap	Positive overlap			Indeterminate overlap	Positive overlap	Indeterminate overlap	Positive overlap						
Signal status indication	LED												
Flow rate on manifold rail G1/4, front	[l/min]	800	800	950	1000	950	900						
Size	[mm]	18											
Connection	1, 3, 5, 12/14, 82/84	On manifold rail											
	2, 4	On manifold rail											
Product weight	[g]	145	147	138	145	138	140						
Certification	c UL us - Recognized (OL) RCM												
CE marking (see declaration of conformity)	To EU EMC Directive <sup>6)</sup>												
Corrosion resistance class CRC <sup>7)</sup>	2												

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) Combined reset method

6) For information about the area of use, see the declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

7) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Sub-base valve G1/4

Operating and environmental conditions								
Valve function		T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53	
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]						
Pilot medium		Compressed air to ISO 8573-1:2010 [7:4:4]						
Note on the operating/pilot medium								
Operating pressure	Internal pilot air supply	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8		
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8		
	External pilot air supply	[MPa]	0.15 ... 1	-0.09 ... 1		-0.09 ... 0.8	-0.09 ... 1	
		[bar]	1.5 ... 10	-0.9 ... 10		-0.9 ... 8	-0.9 ... 10	
Pilot pressure <sup>4)</sup>		[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8		
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8		
Ambient temperature	[°C]	-5 ... +60						
Temperature of medium	[°C]	-5 ... +60						
LABS (PWIS) conformity		VDMA24364-B1/B2-L						

1) Pneumatic spring

2) Mechanical spring

3) Mixed, pneumatic/mechanical spring

4) See graphs on page 12

## Electrical data

Electrical connection	Via E-box
Operating voltage	[V DC] 24 ±10%
Power	[W] 1
Duty cycle	[%] 100
Max. switching frequency	[Hz] 3
Protection rating to EN 60529 <sup>1)</sup>	Individual valve IP65, IP67
	Valve terminal VTUG (all variants) IP40, IP67/IP65, NEMA 4X
	Valve terminal VTUG (for control cabinet installation) IP69K

1) Depending on the configuration selected

## Safety characteristics

Max. positive test pulse with logic 0	[μs]	1600
Max. negative test pulse with logic 1	[μs]	3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27	
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6	

## Information on materials

Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

## Valve switching times

Valve function	T32-A <sup>1)</sup>	T32-M <sup>2)</sup>	M52-R <sup>3)</sup>	B52	M52-M <sup>2)</sup>	P53
Switching time on	[ms] 15	25	20	–	13	20
Switching time off	[ms] 37	33	35	–	50	68
Switching time changeover	[ms] –	–	–	15	–	35

1) Pneumatic spring


2) Mechanical spring

3) Mixed, pneumatic/mechanical spring

## Datasheet – Sub-base valve G1/4

## Dimensions

Sub-base valve G1/4

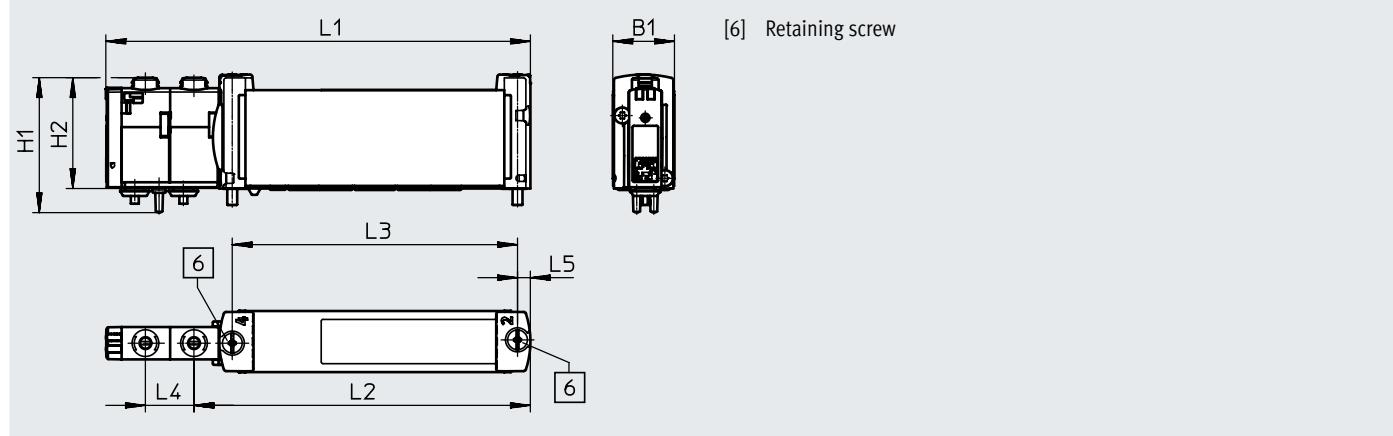Download CAD data → [www.festo.com](http://www.festo.com)

Type	B1	H1	H2	L1	L2	L3	L4	L5
VUVG-B18-...-F-1T1L	18.7	40.9	33.6	128.6	101.9	86.4	14.7	3.9

## Ordering data

	Description	Part no.	Type
<b>Sub-base valve G1/4</b>			
	<b>2x 3/2-way valve</b>		
External pilot air supply	Normally closed, pneumatic spring return	8004885	VUVG-B18-T32C-AZT-F-1T1L
	Normally open, pneumatic spring return	8004886	VUVG-B18-T32U-AZT-F-1T1L
	1x normally open, 1x normally closed, pneumatic spring return	8004887	VUVG-B18-T32H-AZT-F-1T1L
	Normally closed, mechanical spring return	8004888	VUVG-B18-T32C-MZT-F-1T1L
	Normally open, mechanical spring return	8004889	VUVG-B18-T32U-MZT-F-1T1L
	1x normally open, 1x normally closed, mechanical spring return	8004890	VUVG-B18-T32H-MZT-F-1T1L
	<b>5/2-way valve, single solenoid</b>		
External pilot air supply	Pneumatic/mechanical spring return	8004891	VUVG-B18-M52-RZT-F-1T1L
	Mechanical spring return	8004892	VUVG-B18-M52-MZT-F-1T1L
	<b>5/2-way valve, double solenoid</b>		
External pilot air supply		8004893	VUVG-B18-B52-ZT-F-1T1L
	<b>5/3-way valve</b>		
External pilot air supply	Mid-position closed, mechanical spring return	8004894	VUVG-B18-P53C-ZT-F-1T1L
	Mid-position exhausted, mechanical spring return	8004895	VUVG-B18-P53E-ZT-F-1T1L
	Mid-position pressurised, mechanical spring return	8004896	VUVG-B18-P53U-ZT-F-1T1L

## Datasheet – Manifold rail VABM

General technical data													
Manifold rail		Size 10			Size 14			Size 18					
Short type code		VABM											
Grid dimension		[mm]	10.5		16		19						
Mounting position		Any											
Connection type		Semi in-line/sub-base											
Max. no. of valve positions		24											
Connection	12/14		M5		M5		G1/8						
	82/84		M5		M5		G1/8						
	2, 4		M5 (VABM-L1-10W...-GR)		G1/8		G1/4						
	1, 3, 5		M7 (VABM-L1-10HW...-GR)		G1/8		G3/8						
Storage temperature		[°C]	-20 ... 60										
Certification		c UL us - Recognized (OL)											
CE marking (see declaration of conformity) <sup>1)</sup>		To EU EMC Directive											
Corrosion resistance class CRC <sup>2)</sup>		2											
LABS (PWIS) conformity		VDMA24364-B1/B2-L											

1) For information about the area of use, see the declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

2) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

Weight [g]											
Valve positions	4	5	6	7	8	9	10	12	16	20	24
VABM-L1-10G-G18...	329	363	397	431	465	499	533	601	737	873	1009
VABM-L1-10HW-G18...	388	426	464	502	540	578	616	692	844	996	1148
VABM-L1-14G-G14...	879	990	1101	1212	1323	1434	1545	1767	2211	2655	3099
VABM-L1-14W-G14...	839	940	1041	1142	1243	1344	1445	1647	2051	2455	2859
VABM-L1-18G-G38...	1461	1661	1861	2061	2261	2461	2661	3061	3861	4661	5461
VABM-L1-18W-G38...	1369	1546	1723	1900	2077	2254	2431	2785	3493	4201	4909


Materials										
Manifold rail	Wrought aluminium alloy									
Note on materials	RoHS-compliant									

## Datasheet – Manifold rail VABM

## Dimensions – Example of valve terminal with I-Port interface

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation of electrical components on top

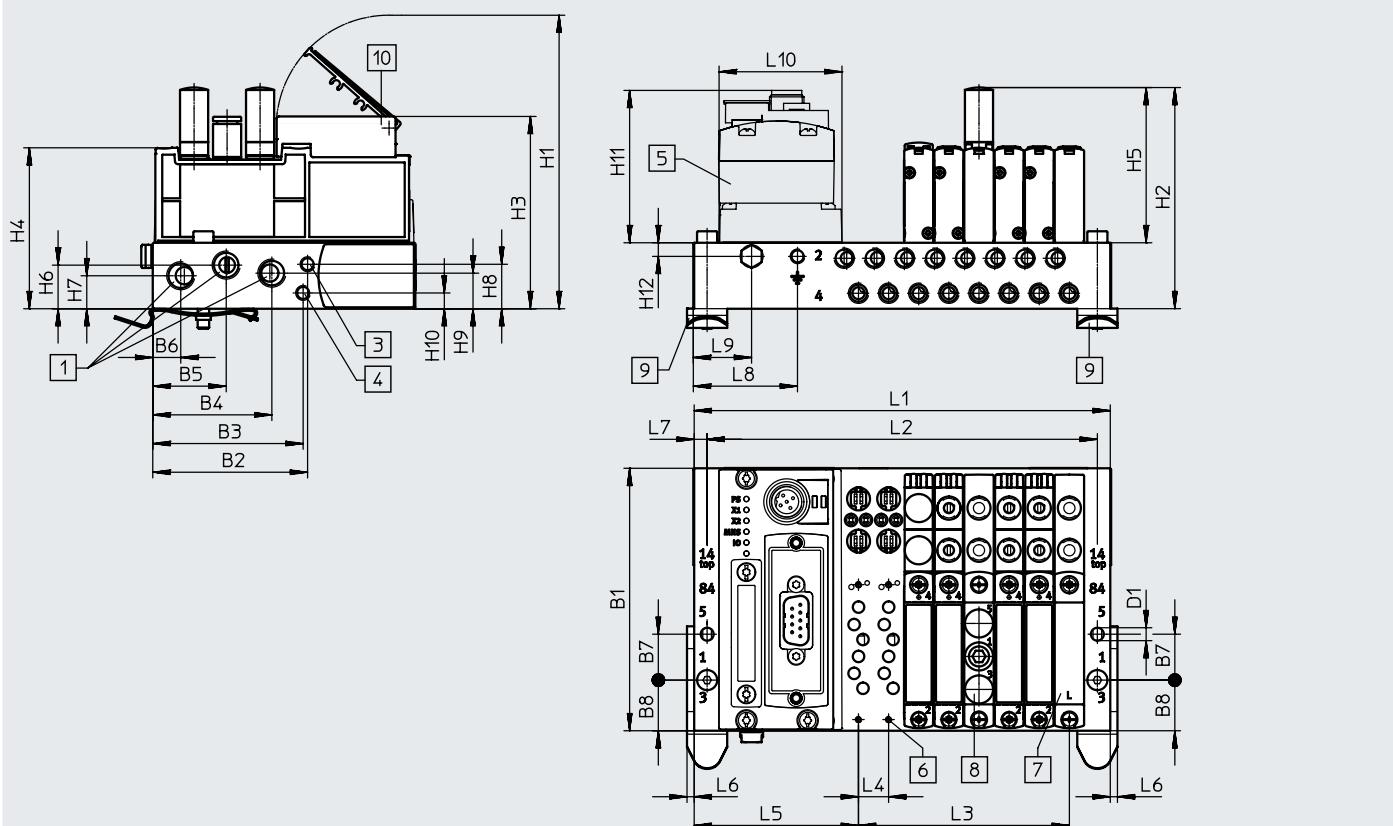

- [1] Ports 1, 3 and 5: size 10: G1/8 (at both ends), size 14: G1/4 (at both ends), size 18: G3/8 (at both ends)
- [3] Ports 12/14: sizes 10 and 14: M5 (at both ends), size 18: G1/8 (at both ends)

- [4] Ports 82/84: sizes 10 and 14: M5 (at both ends), size 18: G1/8 (at both ends)
- [5] CTEU-CANopen

- [6] Valves/cover plates/supply plates – mounting on manifold block: size 10: M2, size 14: M2.5, size 18: M3
- [7] Cover plate

- [8] Supply plate, ports 1, 3 and 5: size 10: M7, size 14: G1/8, size 18: G1/4
- [9] H-rail mounting
- [10] Inscription label holder

Type	Number of valve positions	Size 10																
		B1	B2	B3	B4	B5	B6	B7	B8	D1 Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	91.5	54	52.4	41.5	25.6	9.8	16	17.7	4.5	102.3	77.1	67	56.1	54.1	15.2	11.5	15.5

Type	Number of valve positions	Size 10										
		H9	H10	H11	H12	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	12.4	5.5	54.8	4.8	10.5	57.3	2.5	4.5	36	20	42.5

Type	Number of valve positions	Size 14																
		B1	B2	B3	B4	B5	B6	B7	B8	D1 Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	110	70	59.3	56.5	36.5	16	20	26.5	4.5	113.1	95.1	77.7	68.6	61.3	18.7	15.7	28.7

## Datasheet – Manifold rail VABM

Type	Number of valve positions	Size 14										
		H9	H10	H11	H12	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	13.2	23.7	54.8	5.1	16	60.6	2	5	10	25.5	42.5

Type	Number of valve positions	Size 18																
		B1	B2	B3	B4	B5	B6	B7	B8	D1 Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	131	90.5	77.3	72.3	47.5	21.5	26	34	5.5	121.5	95.2	–	77.4	52.7	23.6	18.7	35.1

Type	Number of valve positions	Size 18										
		H9	H10	H11	H12	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	14.5	27	54.8	13.8	19	63.5	2	5	10	27	42.5


Type	Number of valve positions	Size 10			Size 14			Size 18		
		L1	L2	L3	L1	L2	L3	L1	L2	L3
VABM	4	103	94	31.5	128	118	48	139.5	129.5	57
	5	113.5	104.5	42	144	134	64	158.5	148.5	76
	6	124	115	52.5	160	150	80	177.5	167.5	95
	7	134.5	125.5	63	176	166	96	196.5	186.5	114
	8	145	136	73.5	192	182	112	215.5	205.5	133
	9	155.5	146.5	84	208	198	128	234.5	224.5	152
	10	166	157	94.5	224	214	144	253.5	243.5	171
	12	187	178	115.5	256	246	176	291.5	281.5	209
	16	229	220	157.5	320	310	240	367.5	357.5	285
	20	271	262	199.5	384	374	304	443.5	433.5	361
	24	313	304	241.5	448	438	368	519.5	509.5	437

## Datasheet – Manifold rail VABM

**Dimensions – Example of valve terminal with I-Port interface**

 Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation of electrical components to the left

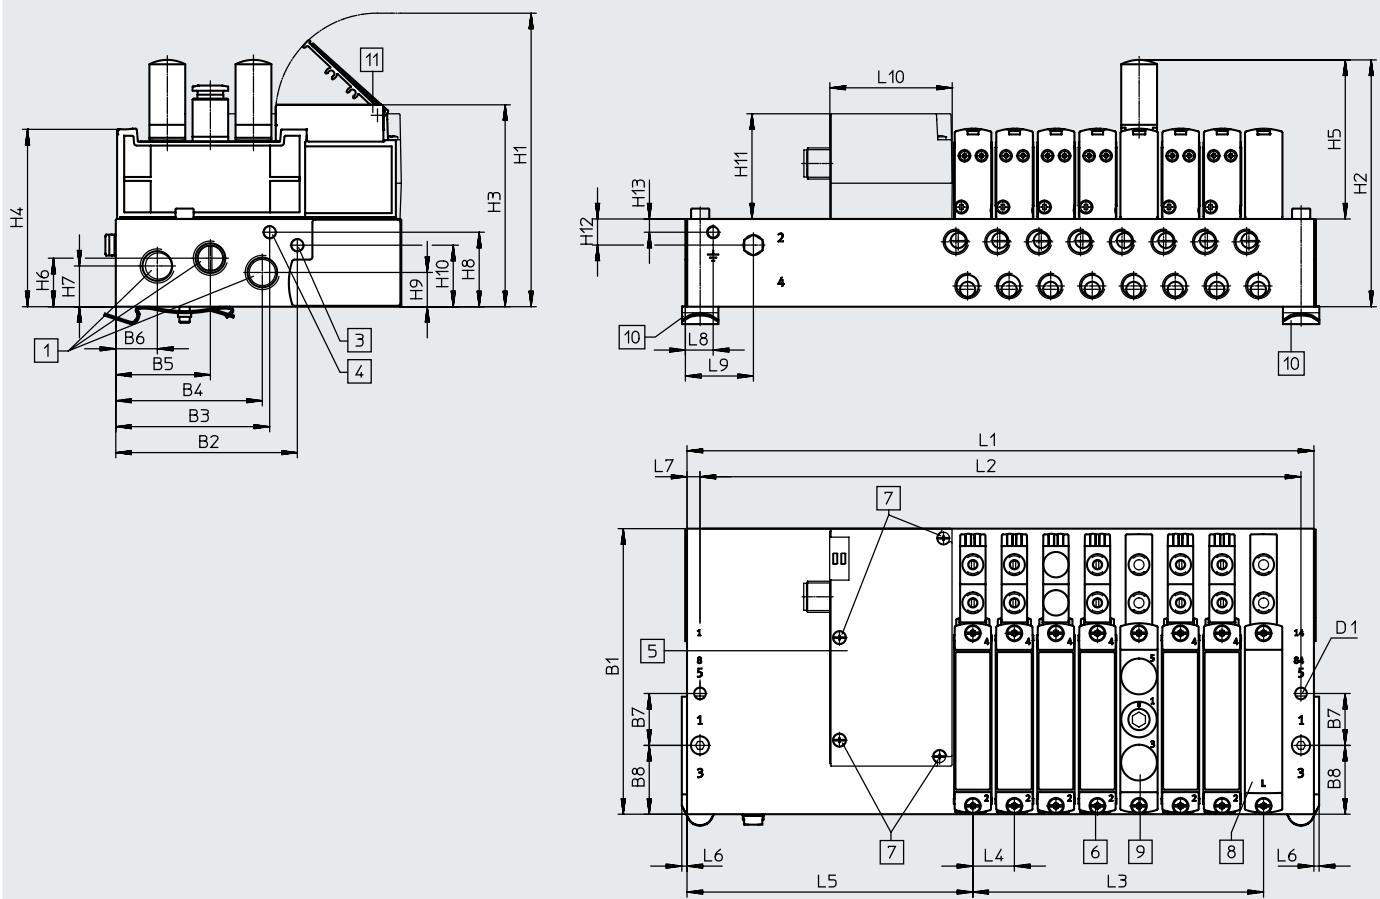

- [1] Ports 1, 3 and 5: size 10: G1/8 (at both ends), size 14: G1/4 (at both ends), size 18: G3/8 (at both ends)
- [2] Ports 12/14: sizes 10 and 14: M5 (at both ends), size 18: G1/8 (at both ends)
- [3] Ports 82/84: sizes 10 and 14: M5 (at both ends), size 18: G1/8 (at both ends)
- [4] Electrical connection I-Port interface/IO-Link®
- [5] Valves/cover plates/supply plates – mounting on manifold block: size 10: M2, size 14: M2.5, size 18: M3
- [6] Electrical interface
- [7] Cover plate
- [8] Supply plate, ports 1, 3 and 5: size 10: M7, size 14: G1/8, size 18: G1/4
- [9] H-rail mounting
- [10] Inscription label holder

Type	Number of valve positions	Size 10																
		B1	B2	B3	B4	B5	B6	B7	B8	D1Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	91.5	54	52.4	41.5	25.6	9.8	16	17.7	4.5	102.3	77.1	67	56.1	54.1	15.2	11.5	15.5

Type	Number of valve positions	Size 10													
		H9	H10	H11	H12	H13	L4	L5	L6	L7	L8	L9	L10		
VABM	4-24	12.4	5.5	40.8	10.1	5.1	10.5	106.8	2.5	4.5	36	75	47.1		

Type	Number of valve positions	Size 14																
		B1	B2	B3	B4	B5	B6	B7	B8	D1Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	110	70	59.3	56.5	36.5	16	20	26.5	4.5	113.1	95.1	77.7	68.6	61.3	18.7	15.7	28.7

Type	Number of valve positions	Size 14													
		H9	H10	H11	H12	H13	L4	L5	L6	L7	L8	L9	L10		
VABM	4-24	13.2	23.7	40.8	10.1	5.1	16	110.1	2	5	10	75	47.1		

## Datasheet – Manifold rail VABM

Type	Number of valve positions	Size 18																
		B1	B2	B3	B4	B5	B6	B7	B8	D1Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	131	90.5	77.3	72.3	47.5	21.5	26	34	5.5	121.5	95.2	–	77.4	52.7	23.6	18.7	35.1

Type	Number of valve positions	Size 18											
		H9	H10	H11	H12	H13	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	14.5	27	40.8	13.8	10	19	105	2	5	10	27	47.1

Type	Number of valve positions	Size 10			Size 14			Size 18		
		L1	L2	L3	L1	L2	L3	L1	L2	L3
VABM	4	152.5	143.5	31.5	177.5	167.5	48	181	171	57
	5	163	154	42	193.5	183.5	64	200	190	76
	6	173.5	164.5	52.5	209.5	199.5	80	219	209	95
	7	184	175	63	225.5	215.5	96	238	228	114
	8	194.5	185.5	73.5	241.5	231.5	112	257	247	133
	9	205	196	84	257.5	247.5	128	276	266	152
	10	215.5	206.5	94.5	273.5	263.5	144	295	285	171
	12	236.5	227.5	115.5	305.5	295.5	176	333	323	209
	16	278.5	269.5	157.5	369.5	359.5	240	409	399	285
	20	321	311.5	199.5	433.5	423.5	304	485	475	361
	24	362.5	353.5	241.5	497.5	487.5	368	561	551	437




**Note**  
The dimensions for size 10 are the same as the dimensions for the manifold rail with interlock.

## Datasheet – Manifold rail VABM

## Dimensions – Example of control cabinet installation for valve terminal

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation of electrical components on top

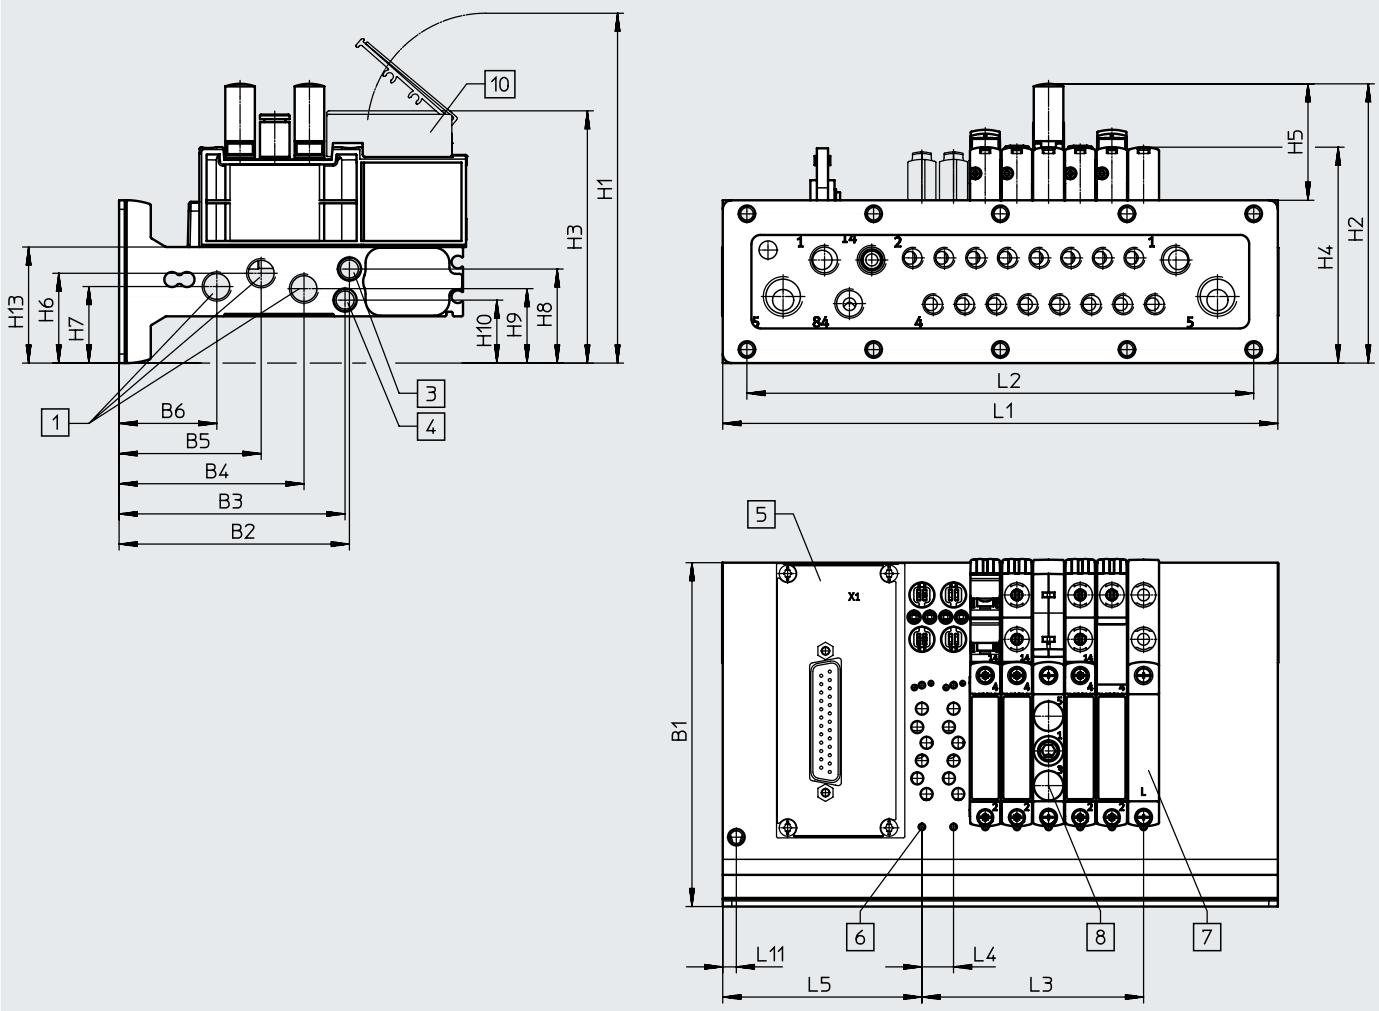

[1] Ports 1, 3 and 5: size 10: G1/8,  
G1/4, size 14: G3/8, G1/4

[3] Ports 12/14: size 10: M5 (at  
both ends), size 14: M7 (at both  
ends)

[4] Ports 82/84: size 10: M5 (at  
both ends), size 14: M7 (at both  
ends)

[5] Electrical connection

[6] Valves/cover plates/supply  
plates – mounting on manifold  
block: M2

[7] Cover plate

[8] Supply plate, ports 1, 3 and 5:  
M7

[10] Inscription label holder

Type	Number of valve positions	Size 10									
		B1	B2	B3	B4	B5	B6	H1	H2	H3	H4
VABM	4-24	114	76.4	74.9	61.3	47.1	32.4	116	92.6	84	71.6

Type	Number of valve positions	Size 10									
		H5	H6	H7	H8	H9	H10	H13	L4	L5	L11
VABM	4-24	38.6	29.8	25.4	31.2	24.7	20.9	38.5	10.5	66	4.5

Type	Number of valve positions	Size 14									
		B1	B2	B3	B4	B5	B6	H1	H2	H3	H4
VABM	4-24	132	93	80.8	76.5	55.5	36.1	111.3	101.7	77.6	85.1

Type	Number of valve positions	Size 14									
		H5	H6	H7	H8	H9	H10	H13	L4	L5	L11
VABM	4-24	34.9	35.2	30.3	39.3	30.3	45	50.3	16	72.6	4.5


## Datasheet – Manifold rail VABM

Number of valve positions	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5
VABM-L1-10HWS2-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-G18-24-GR	352	336	241.5
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-H-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-H-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-H-G18-24-GR	352	336	241.5
VABM-L1-14HWS1-G14-4-GR	135	64	48
VABM-L1-14HWS1-G14-8-GR	199	128	112
VABM-L1-14HWS2-G14-8-GR	234	192	112
VABM-L1-14HWS2-G14-12-GR	298	256	176
VABM-L1-14HWS2-G14-16-GR	362	320	240
VABM-L1-14HWS2-G14-24-GR	490	448	368
VABM-L1-14HWS2-H-G14-8-GR	234	192	112
VABM-L1-14HWS2-H-G14-12-GR	298	256	176
VABM-L1-14HWS2-H-G14-16-GR	362	320	240
VABM-L1-14HWS2-H-G14-24-GR	490	448	368

## Datasheet – Manifold rail VABM

## Dimensions – Example of control cabinet installation for valve terminal

Outlet orientation of electrical components on top, with shut-off function (hot swap)

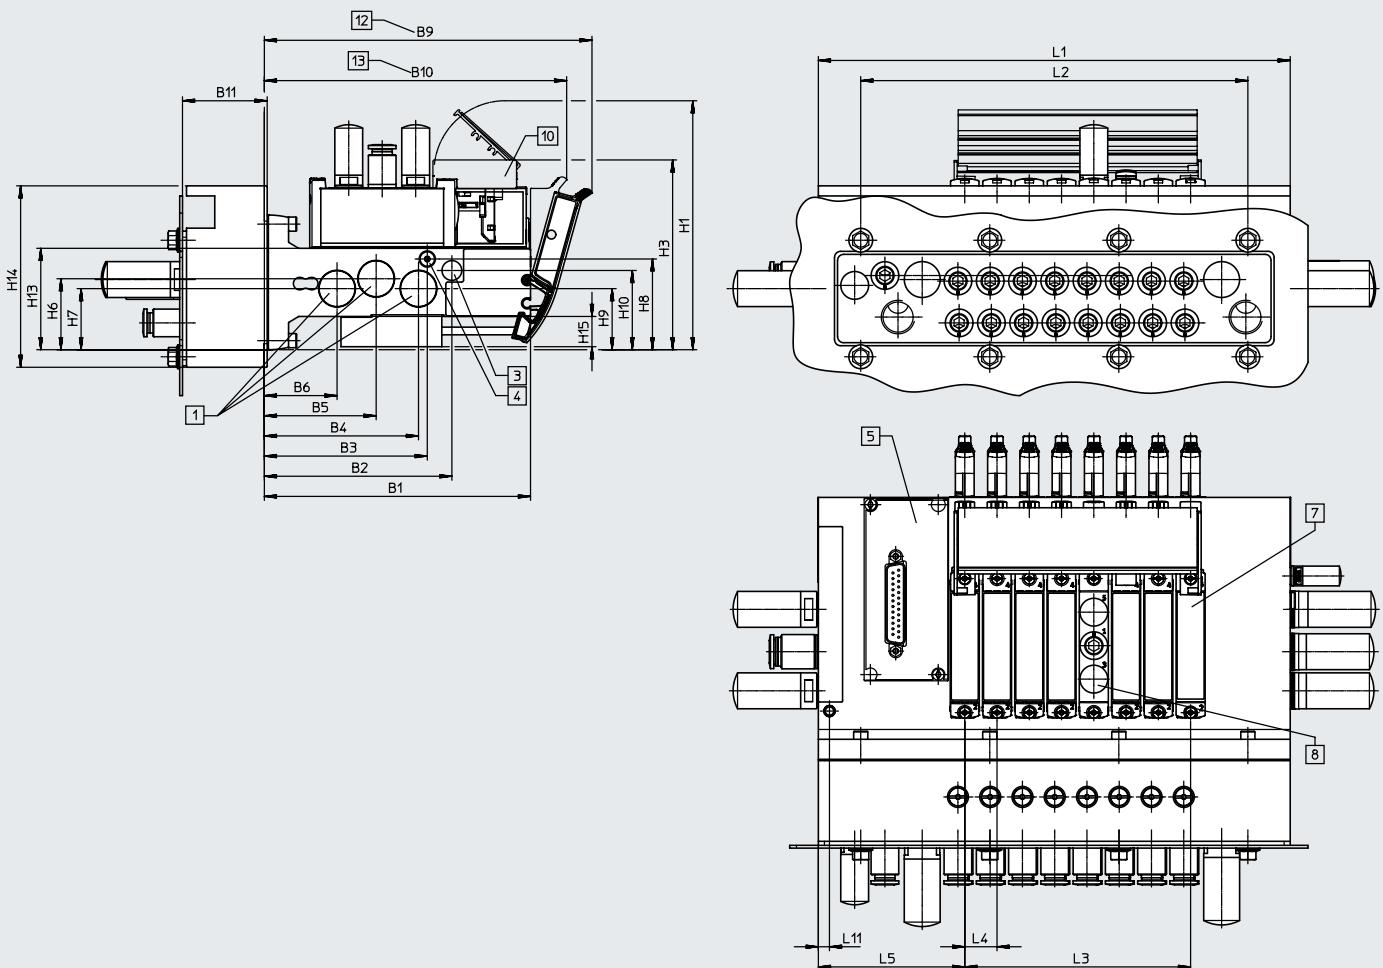Download CAD data → [www.festo.com](http://www.festo.com)

- [1] Ports 1, 3 and 5: size 10: G1/8,  
G1/4, size 14: G3/8, G1/4  
[3] Ports 12/14: size 10: M5 (at  
both ends), size 14: M7 (at both  
ends)

- [4] Ports 82/84: size 10: M5 (at  
both ends), size 14: M7 (at both  
ends)  
[5] Electrical connection

- [7] Cover plate  
[8] Supply plate, ports 1, 3 and 5:  
M7  
[10] Inscription label holder

- [12] VTUG 10: with seal and stain-  
less steel plate  
VTUG 14: with seal and stain-  
less steel plate, hot swap 1 and  
2/4  
[13] With seal and stainless steel  
plate

Type	Number of valve positions	Size 10										
		B1	B2	B3	B4	B5	B6	B9	B10	B11	H1	H3
VABM	4-24	114	76.4	74.9	61.3	47.1	32.4	142	132	–	114	82

Type	Number of valve positions	Size 10										
		H6	H7	H8	H9	H10	H13	H14	H15	L4	L5	L11
VABM	4-24	29.8	25.4	20.9	24.7	31.2	38.5	–	15	10.5	66	5.5

Type	Number of valve positions	Size 14										
		B1	B2	B3	B4	B5	B6	B9	B10	B11	H1	H3
VABM	4-24	132	93	80.8	76.5	55.5	36.1	163	150.4	42	123.5	93.9

Type	Number of valve positions	Size 14										
		H6	H7	H8	H9	H10	H13	H14	H15	L4	L5	L11
VABM	4-24	35.2	30.3	45	30.3	39.3	50.3	90	15	16	72.6	5.5



## Datasheet – Manifold rail VABM

Number of valve positions	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5
VABM-L1-10HWS2-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-G18-24-GR	352	336	241.5
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-H-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-H-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-H-G18-24-GR	352	336	241.5
VABM-L1-14HWS1-G14-4-GR	135	64	48
VABM-L1-14HWS1-G14-8-GR	199	128	112
VABM-L1-14HWS2-G14-8-GR	234	192	112
VABM-L1-14HWS2-G14-12-GR	298	256	176
VABM-L1-14HWS2-G14-16-GR	362	320	240
VABM-L1-14HWS2-G14-24-GR	490	448	368
VABM-L1-14HWS2-H-G14-8-GR	234	192	112
VABM-L1-14HWS2-H-G14-12-GR	298	256	176
VABM-L1-14HWS2-H-G14-16-GR	362	320	240
VABM-L1-14HWS2-H-G14-24-GR	490	448	368

## Datasheet – Manifold rail VABM


## Dimensions – Manifold rail outlet orientation at the front

Size 10, I-Port interface on top

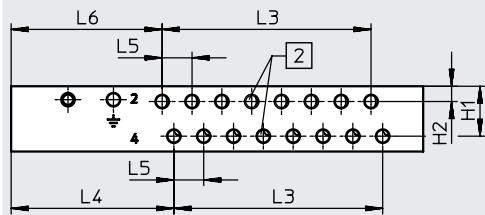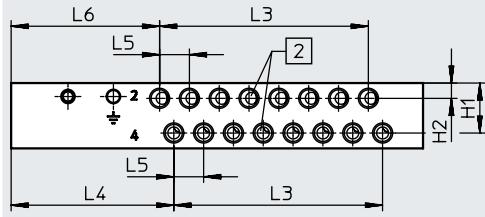

[2] Port 2 and 4



Size 18, I-Port interface on top

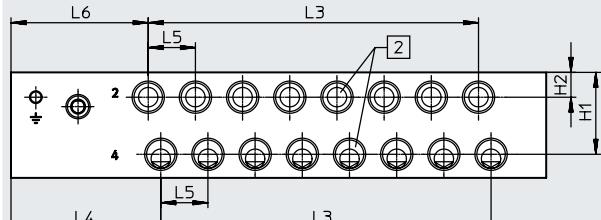

[2] Port 2 and 4


Download CAD data → [www.festo.com](http://www.festo.com)

Size 14, I-Port interface on top

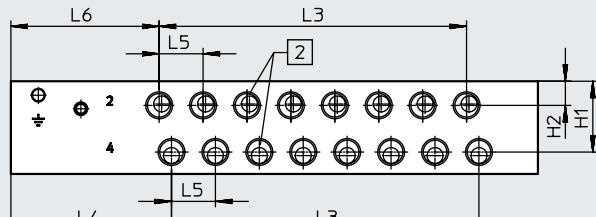

[2] Port 2 and 4

Sizes 10, 14, 18, I-Port interface on the side

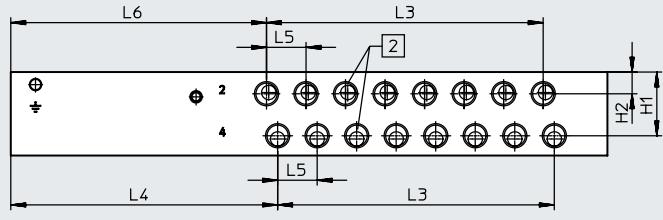

[2] Port 2 and 4

Size	Port 2 and 4	Manifold rail with I-Port interface on top				
		H1	H2	L4	L5	L6
10	M7 thread	17.6	5.4	57.3	10.5	52.3
	M5 thread					53.2
14	G1/8 thread	25.8	8.8	58.5	16	54
18	G1/4 thread	33	10	60.3	19	55.3

Size	Port 2 and 4	Manifold rail with I-Port interface on the side				
		H1	H2	L4	L5	L6
10	M7 thread	17.6	5.4	106.8	10.5	101.8
	M5 thread					102.7
14	G1/8 thread	25.8	8.8	108	16	103.5
18	G1/4 thread	33	10	101.8	19	96.8

## Datasheet – Manifold rail VABM


Type	Number of valve positions	Size 10	Size 14	Size 18
		L3	L3	L3
VABM	4	31.5	48	57
	5	42	64	76
	6	52.5	80	95
	7	63	96	114
	8	73.5	112	133
	9	84	128	152
	10	94.5	144	171
	12	115.5	176	209
	16	157.5	240	285
	20	199.5	304	361
	24	241.5	368	437

## Datasheet – Manifold rail VABM

## Dimensions – Manifold rail outlet orientation underneath

Download CAD data → [www.festo.com](http://www.festo.com)

Control cabinet installation

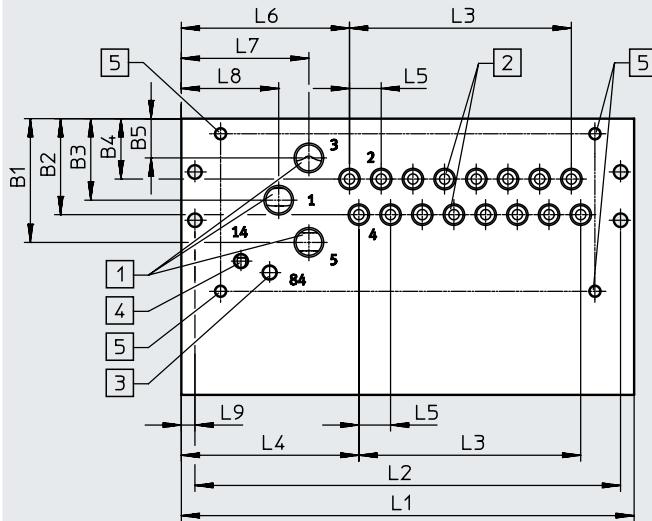

- [1] Ports 1, 3 and 5: size 10: G1/8, size 14: G1/4, size 18: G3/8
- [2] Ports 2 and 4: size 10: M5/M7, size 14: G1/8, size 18: G1/4
- [3] Ports 82/84: sizes 10 and 14: M5, size 18: G1/8
- [4] Ports 12/14: sizes 10 and 14: M5, size 18: G1/8
- [5] Mounting holes, outlet orientation underneath: M4x8

Type	Manifold rail with I-Port interface on top, size 10										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	41	31.8	27	20	13	58.8	10.5	55.7	42.3	32.3	4.5

Type	Manifold rail with I-Port interface on top, size 14										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	53.5	45.1	35.2	27.8	17	58.5	16	58.5	43	33	5

Type	Manifold rail with I-Port interface on top, size 18										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	75	59.5	48.5	35.7	22	60.3	19	60.3	40	40	5

Type	Number of valve positions	Size 10			Size 14			Size 18		
		L1 +5	L2 +5	L3	L1	L2	L3	L1	L2	L3
VABM	4	103	94	31.5	128	118	48	139.5	129.5	57
	5	113.5	104.5	42	144	134	64	158.5	148.5	76
	6	124	115	52.5	160	150	80	177.5	167.5	95
	7	134.5	125.5	63	176	166	96	196.5	186.5	114
	8	145	136	73.5	192	182	112	215.5	205.5	133
	9	155.5	146.5	84	208	198	128	234.5	224.5	152
	10	166	157	94.5	224	214	144	253.5	243.5	171
	12	187	178	115.5	256	246	176	291.5	281.5	209
	16	229	220	157.5	320	310	240	367.5	357.5	285
	20	271	262	199.5	384	374	304	443.5	433.5	361
	24	313	304	241.5	448	438	368	519.5	509.5	437

## Datasheet – Manifold rail VABM


Type	Manifold rail with I-Port interface, size 10										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	41	31.8	27	20	13	108.3	10.5	105.2	91.8	81.8	4.5
Type	Manifold rail with I-Port interface, size 14										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	53.5	45.1	35.2	27.8	17	108	16	108	92.5	82.5	5
Type	Manifold rail with I-Port interface, size 18										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	75	59.5	48.5	35.7	22	101.8	19	101.8	81.5	81.5	5
Type	Number of valve positions	Manifold rail with I-Port interface Size 10			Manifold rail with I-Port interface Size 14			Manifold rail with I-Port interface Size 18			
		L1 +5	L2 +5	L3	L1	L2	L3	L1	L2	L3	
VABM	4	152.5	143.5	31.5	177.5	167.5	48	181	171	57	
	5	163	154	42	193.5	183.5	64	200	190	76	
	6	173.5	164.5	52.5	209.5	199.5	80	219	209	95	
	7	184	175	63	225.5	215.5	96	238	228	114	
	8	194.5	185.5	73.5	241.5	231.5	112	257	247	133	
	9	205	196	84	257.5	247.5	128	276	266	152	
	10	215.5	206.5	94.5	273.5	263.5	144	295	285	171	
	12	236.5	227.5	115.5	305.5	295.5	176	333	323	209	
	16	278.5	269.5	157.5	369.5	359.5	240	409	399	285	
	20	320.5	311.5	199.5	433.5	423.5	304	485	475	361	
	24	362.5	353.5	241.5	497.5	487.5	368	561	551	437	

## Datasheet – Manifold rail VABM

## Dimensions – Manifold rail outlet orientation at the front

Download CAD data → [www.festo.com](http://www.festo.com)

Control cabinet installation/control cabinet installation with shut-off function (hot swap)

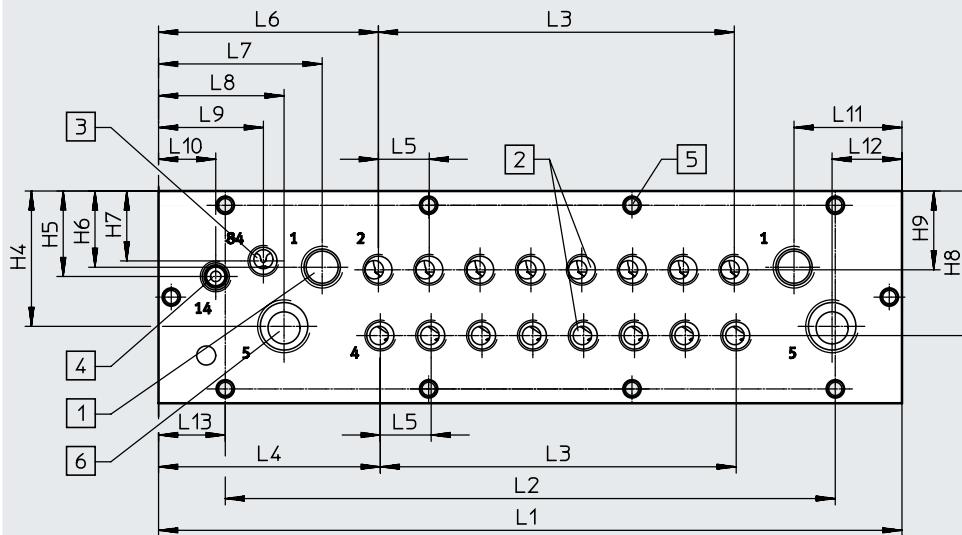

- |   |   |   |
|---|---|---|
| [1] Ports 1, 3 and 5: size 10: G1/8,<br>size 14: G1/4 | [3] Ports 82/84:<br>sizes 10 and 14: G1/8 | [5] Mounting holes, outlet orientation underneath: M5 |
| [2] Ports 2 and 4: size 10: M5/M7,<br>size 14: G1/8   | [4] Ports 12/14:<br>sizes 10 and 14: G1/8 | [6] Ports 3/5:<br>size 10: G1/4,<br>size 14: G3/8     |

Type	Size 10															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-10HWS1	111.5	73.9	72.4	58.8	44.6	29.9	69.8	10.5	63	33.8	20	42	49.4	33.8	20	16.1
VABM-L1-10HWS2																8

Type	Size 10									
	H1	H2	H3	H4	H5	H6	H7	H8	H9	
VABM-L1-10HWS1	54	15.5	23	31.9	19.8	19.8	34.3	34.5	19.1	
VABM-L1-10HWS2										

Type	Size 14															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-14HWS1	130	91	78.8	74.5	53.5	34.1	69.8	16	96.2	51.5	39.5	33	18	34	22	35.5
VABM-L1-14HWS2																21

Type	Size 14									
	H1	H2	H3	H4	H5	H6	H7	H8	H9	
VABM-L1-14HWS1	66.8	16.5	33.8	42.6	26.9	24	22	45.5	24.8	
VABM-L1-14HWS2										



## Datasheet – Manifold rail VABM

Number of valve positions	L1	L2	L3	L13
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5	16.1
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5	16.1
VABM-L1-10HWS2-G18-8-GR	184	168	73.5	8
VABM-L1-10HWS2-G18-12-GR	226	210	115.5	8
VABM-L1-10HWS2-G18-16-GR	268	252	157.5	8
VABM-L1-10HWS2-G18-24-GR	352	336	241.5	8
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5	8
VABM-L1-10HWS2-H-G18-8-GR	226	210	115.5	8
VABM-L1-10HWS2-H-G18-8-GR	268	252	157.5	8
VABM-L1-10HWS2-H-G18-8-GR	352	336	241.5	8
VABM-L1-14HWS1-G14-4-GR	135	64	48	35.5
VABM-L1-14HWS1-G14-8-GR	199	128	112	35.5
VABM-L1-14HWS2-G14-8-GR	234	192	112	21
VABM-L1-14HWS2-G14-12-GR	298	256	176	21
VABM-L1-14HWS2-G14-16-GR	362	320	240	21
VABM-L1-14HWS2-G14-24-GR	490	448	368	21
VABM-L1-14HWS2-H-G14-8-GR	234	192	112	21
VABM-L1-14HWS2-H-G14-12-GR	298	256	176	21
VABM-L1-14HWS2-H-G14-16-GR	362	320	240	21
VABM-L1-14HWS2-H-G14-24-GR	490	448	368	21

## Datasheet – Manifold rail VABM

**Dimensions – Recess for control cabinet installation, outlet orientation underneath, size 10**

Up to 8 valves

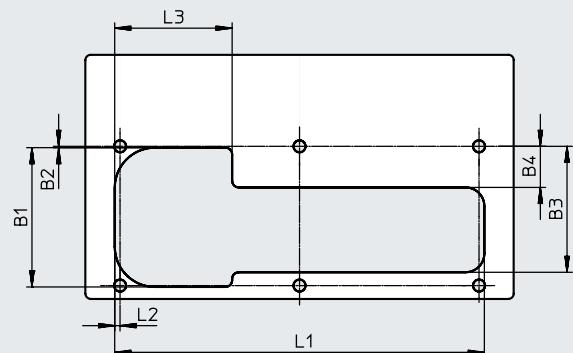
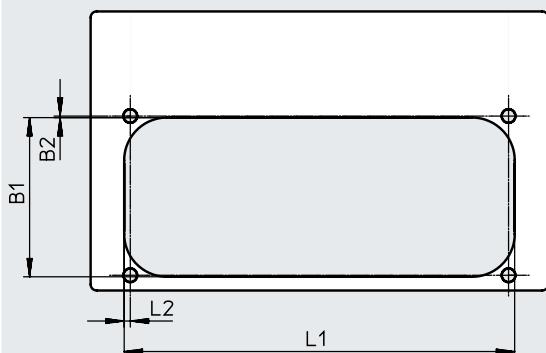


Type	B1	B2	L1	L2	
VABM-L1-10...G18-4	52.7	0.5	86	2	
VABM-L1-10...G18-5			96.5		
VABM-L1-10...G18-6			107		
VABM-L1-10...G18-7			117.5		
VABM-L1-10...G18-8			128		

Type	B1	B2	B3	B4	L1	L2	L3
VABM-L1-10...G18-9	52.7	0.5	47.2	15.4	138.5	2	44
					149		
					170		
					212		
					254		
					296		

**Dimensions – Recess for control cabinet installation, outlet orientation underneath, size 14**

Up to 7 valves

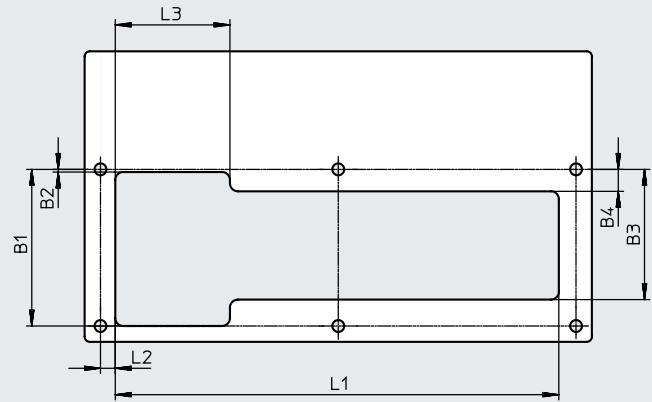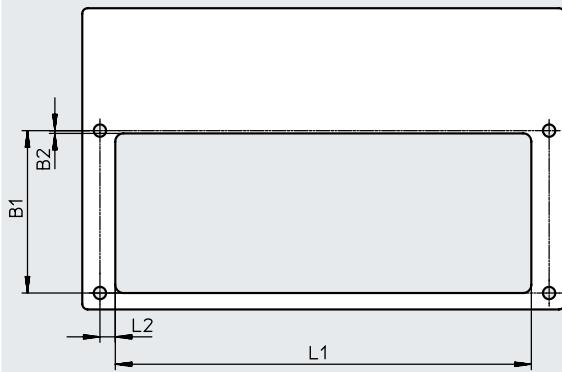


Type	B1	B2	L1	L2	
VABM-L1-14...G14-4	59.3	1	103.9	5.6	
VABM-L1-14...G14-5			119.9		
VABM-L1-14...G14-6			135.9		
VABM-L1-14...G14-7			151.9		

Type	B1	B2	B3	B4	L1	L2	L3
VABM-L1-14...G14-8	59.3	1	49.3	8.3	167.9	5.6	43.4
					183.9		
					199.9		
					231.9		
					295.9		
					359.9		
					423.9		

## Datasheet – Manifold rail VABM

## Dimensions – Recess for control cabinet installation, outlet orientation underneath, size 18

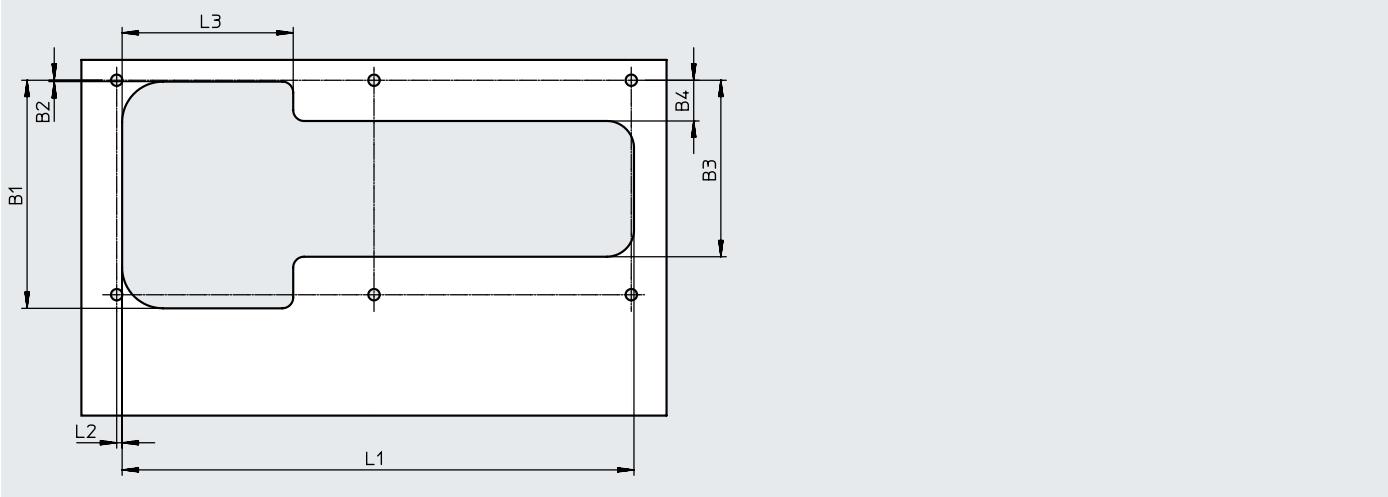


Type	B1	B2	B3	B4	L1	L2	L3
VABM-L1-18...G38-4	83.5	0.5	65	15	112.5	2	63
VABM-L1-18...G38-5					131.5		
VABM-L1-18...G38-6					150.5		
VABM-L1-18...G38-7					169.5		
VABM-L1-18...G38-8					188.5		
VABM-L1-18...G38-9					207.5		
VABM-L1-18...G38-10					226.5		
VABM-L1-18...G38-12					264.5		
VABM-L1-18...G38-16					340.5		
VABM-L1-18...G38-20					416.5		
VABM-L1-18...G38-24					492.5		

## Datasheet – Manifold rail VABM


**Dimensions – Recess for control cabinet installation, outlet orientation at the front, size 10**

Single supply, up to 8 valves

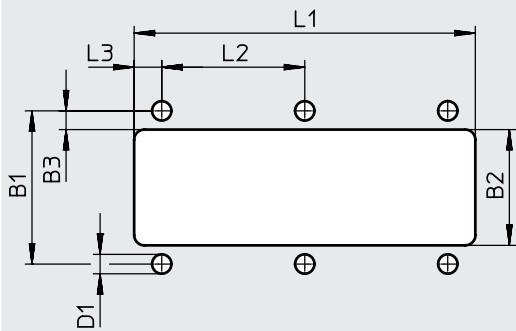

Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	45	34	5.5	5.7	100.2	42	8.1
VABM-L1-10HWS1-G18-8-GR					143.2		


Double supply, 8 or more valves

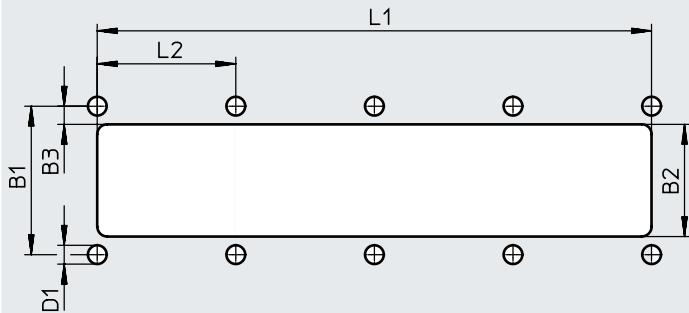

Type	B1	B2	B3	D1	L1	L2
VABM-L1-10HWS2...G18-8-GR	45	34	5.5	5.7	168	42
VABM-L1-10HWS2...G18-12-GR					210	
VABM-L1-10HWS2...G18-16-GR					252	
VABM-L1-10HWS2...G18-24-GR					336	

**Dimensions – Recess for control cabinet installation, outlet orientation at the front, size 14**

Single supply, up to 8 valves

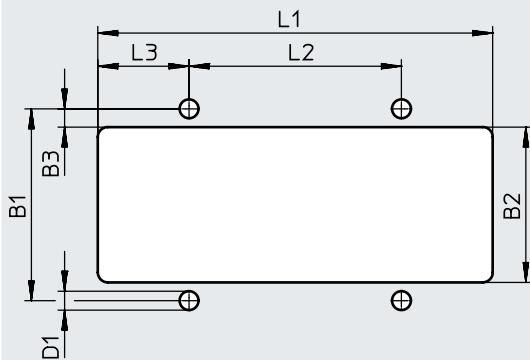


Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-14HWS1-G14-4-GR	57.8	46.8	5.5	5.7	119	64	27.5
VABM-L1-14HWS1-G14-8-GR					183		

## Datasheet – Manifold rail VABM

### Dimensions – Recess for control cabinet installation, outlet orientation at the front, size 14

Double supply, 8 or more valves

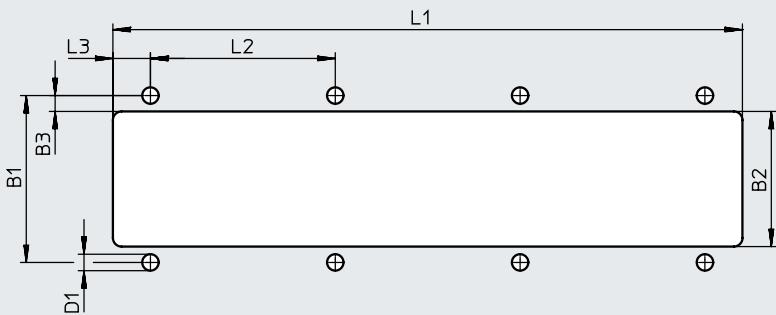


Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-14HWS2-G14...-8-GR	57.8	46.8	5.5	5.7	218	64	13
VABM-L1-14HWS2-G14...-12-GR					282		
VABM-L1-14HWS2-G14...-16-GR					346		
VABM-L1-14HWS2-G14...-24-GR					474		

### Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation underneath

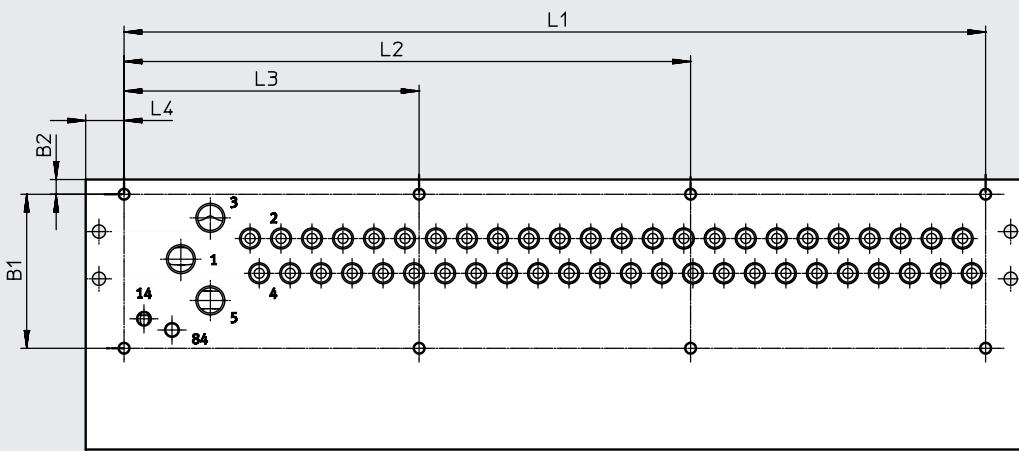


Type	Up to 8 valves	Outlet orientation of electrical components on top						I-Port interface on the side
		B1	B2	L1	L2	L3	L4	
VABM-L1-10...-G18-4	Up to 8 valves	52.2	5	82	–	–	13	62.5
VABM-L1-10...-G18-5				92.5	–	–		
VABM-L1-10...-G18-6				103	–	–		
VABM-L1-10...-G18-7				113.5	–	–		
VABM-L1-10...-G18-8				124	–	–		
VABM-L1-10...-G18-9	Up to 20 valves	52.2	5	134.5	–	67.25	13	62.5
VABM-L1-10...-G18-10				145	–	72.5		
VABM-L1-10...-G18-12				166	–	83		
VABM-L1-10...-G18-16				208	–	104		
VABM-L1-10...-G18-20				250	–	125		
VABM-L1-10...-G18-24	24 valves	52.2	5	292	192	100	13	62.5

## Datasheet – Manifold rail VABM

## Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation at the front

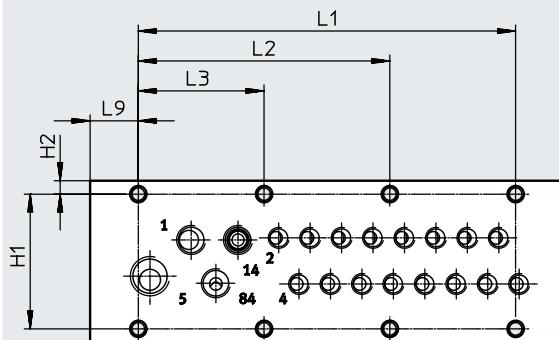


Type	H1	H2	L1	L2	L3	L9
VABM-L1-10HWS1-G18-4-GR	45	4.5	84	–	42	16.1
VABM-L1-10HWS1-G18-8-GR	45	4.5	126	84	42	16.1

Type	No. of valve positions	No. of mounting holes
VABM-L1-10HWS1-G18-4-GR	4	3
VABM-L1-10HWS1-G18-8-GR	8	4

## Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation at the front

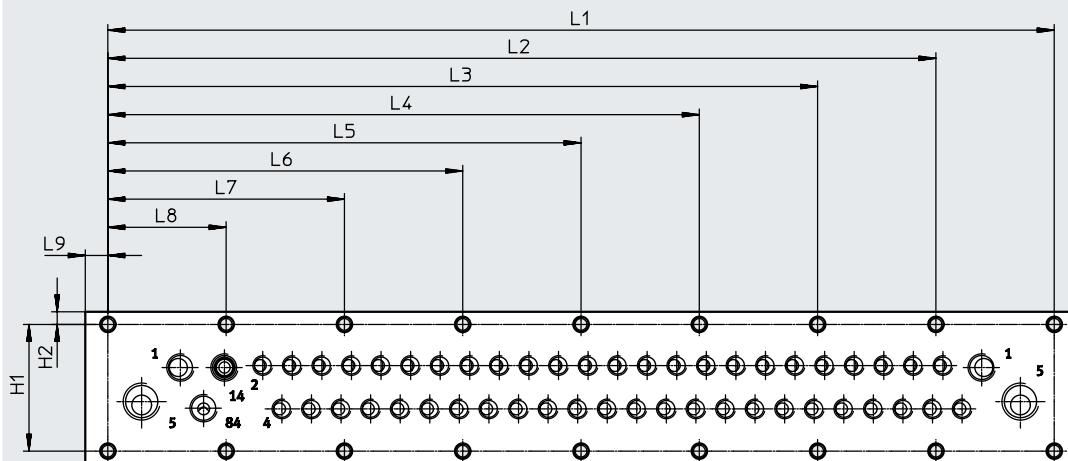

Type	H1	H2	L1	L2	L3	L4	L5	L6	L7	L8	L9
VABM-L1-10HWS2-...-8-GR	45	4.5	168	–	–	–	–	126	84	42	8
VABM-L1-10HWS2-...-12-GR	45	4.5	210	–	–	–	168	126	84	42	8
VABM-L1-10HWS2-...-16-GR	45	4.5	252	–	–	210	168	126	84	42	8
VABM-L1-10HWS2-...-24-GR	45	4.5	336	294	252	210	168	126	84	42	8


Type	No. of valve positions	No. of mounting holes
VABM-L1-10HWS2-...-8-GR	8	5
VABM-L1-10HWS2-...-12-GR	12	6
VABM-L1-10HWS2-...-16-GR	16	7
VABM-L1-10HWS2-...-24-GR	24	9

## Datasheet – Manifold rail VABM

### Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation underneath

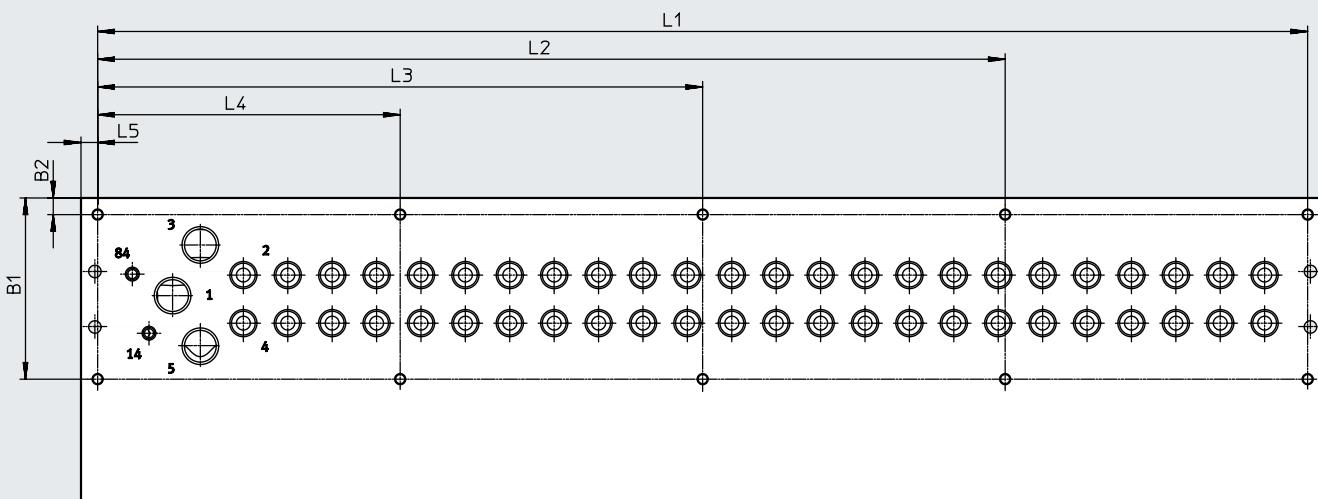


Type		Outlet orientation of electrical components on top							I-Port interface on the side
		B1	B2	L1	L2	L3	L4	L5	
VABM-L1-14...-G14-4	Up to 8 valves	59.3	6	116	–	–	–	6	55.5
VABM-L1-14...-G14-5				132	–	–	–		
VABM-L1-14...-G14-6				148	–	–	–		
VABM-L1-14...-G14-7				164	–	–	–		
VABM-L1-14...-G14-8	8 to 10 valves	59.3	6	180	–	–	90	6	55.5
VABM-L1-14...-G14-9				196	–	–	98		
VABM-L1-14...-G14-10				212	–	–	106		
VABM-L1-14...-G14-12	12 valves and 16 valves	59.3	6	244	–	162	82	6	55.5
VABM-L1-14...-G14-16				308	–	204	104		
VABM-L1-14...-G14-20	20 valves and 24 valves	59.3	6	372	279	186	93	6	55.5
VABM-L1-14...-G14-24				436	327	218	109		

## Datasheet – Manifold rail VABM

## Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation at the front

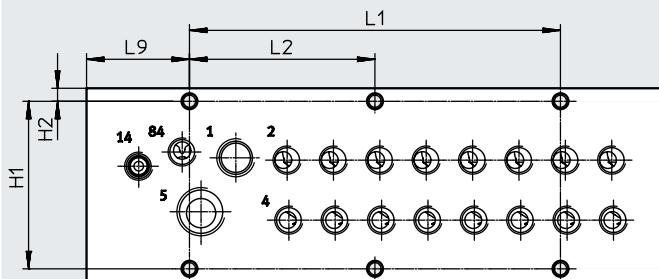


Type	H1	H2	L1	L2	L9
VABM-L1-14HWS1-G14-4-GR	57.8	4.5	64	–	35.5
VABM-L1-14HWS1-G14-8-GR	57.8	4.5	128	64	35.5

Type	No. of valve positions	No. of mounting holes
VABM-L1-14HWS1-G14-4-GR	4	2
VABM-L1-14HWS1-G14-8-GR	8	3

## Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation at the front

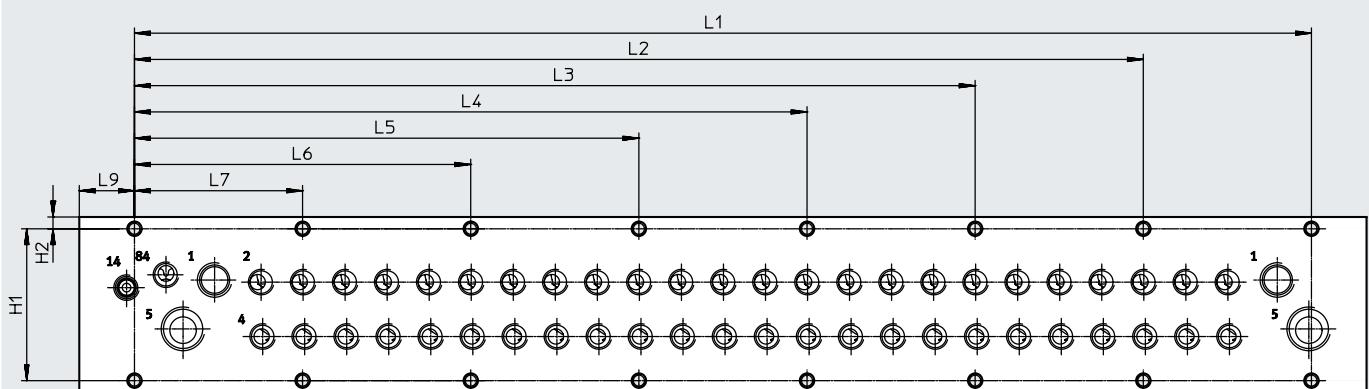

Type	H1	H2	L1	L2	L3	L4	L5	L6	L7	L9
VABM-L1-14HWS2-...-8-GR	57.8	4.5	192	–	–	–	–	128	64	21
VABM-L1-14HWS2-...-12-GR	57.8	4.5	256	–	–	–	192	128	64	21
VABM-L1-14HWS2-...-16-GR	57.8	4.5	320	–	–	256	192	128	64	21
VABM-L1-14HWS2-...-24-GR	57.8	4.5	448	384	320	256	192	128	64	21


Type	No. of valve positions	No. of mounting holes
VABM-L1-14HWS2-...-8-GR	8	4
VABM-L1-14HWS2-...-12-GR	12	5
VABM-L1-14HWS2-...-16-GR	16	6
VABM-L1-14HWS2-...-24-GR	24	8

## Datasheet – Manifold rail VABM

## Dimensions – Mounting holes for control cabinet installation, size 18

Download CAD data → [www.festo.com](http://www.festo.com)

Outlet orientation underneath

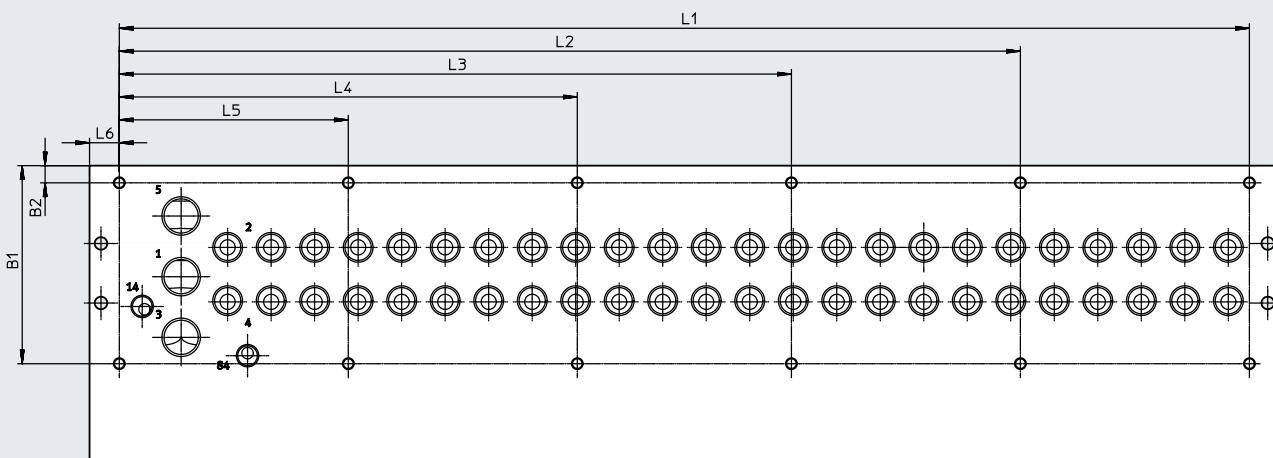


Type		Outlet direction of electrical components							I-Port interface on the side
		B1	B2	L1	L2	L3	L4	L5	
VABM-L1-18...-G38-4	4 valves and 5 valves	86.5	7.5	113.5	–	–	–	–	54.5
VABM-L1-18...-G38-5				132.5	–	–	–	–	
VABM-L1-18...-G38-6	6 to 10 valves	86.5	7.5	151.5	–	–	–	75.8	54.5
VABM-L1-18...-G38-7				170.5	–	–	–	85.3	
VABM-L1-18...-G38-8				189.5	–	–	–	94.8	
VABM-L1-18...-G38-9				208.5	–	–	–	104.3	
VABM-L1-18...-G38-10				227.5	–	–	–	113.8	
VABM-L1-18...-G38-12				265.5	–	–	165.5	100	54.5
VABM-L1-18...-G38-16	16 to 20 valves	86.5	7.5	341.5	–	–	170.8	100	54.5
VABM-L1-18...-G38-20				417.5	–	317.5	208.8	100	
VABM-L1-18...-G38-24	24 valves	86.5	7.5	493.5	393.5	293.5	200	100	54.5


## Ordering data

Ordering data	Description	Part no.	Type
<b>Manifold rail for semi in-line valve</b>			
	<b>Size 10 mm</b>		
	Ports 2, 4 on the valve	4 valve positions	573423 VABM-L1-10G-G18-4-GR
		5 valve positions	573424 VABM-L1-10G-G18-5-GR
		6 valve positions	573425 VABM-L1-10G-G18-6-GR
		7 valve positions	573426 VABM-L1-10G-G18-7-GR
		8 valve positions	573427 VABM-L1-10G-G18-8-GR
		9 valve positions	573428 VABM-L1-10G-G18-9-GR
		10 valve positions	573429 VABM-L1-10G-G18-10-GR
		12 valve positions	573430 VABM-L1-10G-G18-12-GR
		16 valve positions	573431 VABM-L1-10G-G18-16-GR
		20 valve positions	573432 VABM-L1-10G-G18-20-GR
		24 valve positions	573433 VABM-L1-10G-G18-24-GR
		8 double solenoid + 8 single solenoid valves	573927 VABM-L1-10G-G18-16-M-GR
		4 double solenoid + 16 single solenoid valves	573928 VABM-L1-10G-G18-20-M-GR
		24 single solenoid valves	573929 VABM-L1-10G-G18-24-M-GR
	<b>Size 14 mm</b>		
	Ports 2, 4 on the valve	4 valve positions	573489 VABM-L1-14G-G14-4-GR
		5 valve positions	573490 VABM-L1-14G-G14-5-GR
		6 valve positions	573491 VABM-L1-14G-G14-6-GR
		7 valve positions	573492 VABM-L1-14G-G14-7-GR
		8 valve positions	573493 VABM-L1-14G-G14-8-GR
		9 valve positions	573494 VABM-L1-14G-G14-9-GR
		10 valve positions	573495 VABM-L1-14G-G14-10-GR
		12 valve positions	573496 VABM-L1-14G-G14-12-GR
		16 valve positions	573497 VABM-L1-14G-G14-16-GR
		20 valve positions	573498 VABM-L1-14G-G14-20-GR
		24 valve positions	573499 VABM-L1-14G-G14-24-GR
		8 double solenoid + 8 single solenoid valves	573933 VABM-L1-14G-G14-16-M-GR
		4 double solenoid + 16 single solenoid valves	573934 VABM-L1-14G-G14-20-M-GR
		24 single solenoid valves	573935 VABM-L1-14G-G14-24-M-GR
	<b>Size 18 mm</b>		
	Ports 2, 4 on the valve	4 valve positions	8004899 VABM-L1-18G-G38-4-G
		5 valve positions	8004900 VABM-L1-18G-G38-5-G
		6 valve positions	8004901 VABM-L1-18G-G38-6-G
		7 valve positions	8004902 VABM-L1-18G-G38-7-G
		8 valve positions	8004903 VABM-L1-18G-G38-8-G
		9 valve positions	8004904 VABM-L1-18G-G38-9-G
		10 valve positions	8004905 VABM-L1-18G-G38-10-G
		12 valve positions	8004906 VABM-L1-18G-G38-12-G
		16 valve positions	8004907 VABM-L1-18G-G38-16-G
		20 valve positions	8004908 VABM-L1-18G-G38-20-G
		24 valve positions	8004909 VABM-L1-18G-G38-24-G
		8 double solenoid + 8 single solenoid valves	8004910 VABM-L1-18G-G38-16-M-G
		4 double solenoid + 16 single solenoid valves	8004911 VABM-L1-18G-G38-20-M-G
		24 single solenoid valves	8004912 VABM-L1-18G-G38-24-M-G

## Ordering data

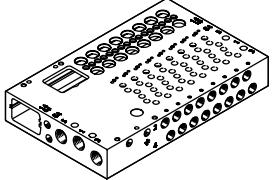Ordering data	Description	Part no.	Type
<b>Manifold rail for sub-base valve</b>			
	<b>Size 10 mm</b>		
Ports 2, 4 at the front			
	4 valve positions	573434	VABM-L1-10HW-G18-4-GR
	5 valve positions	573435	VABM-L1-10HW-G18-5-GR
	6 valve positions	573436	VABM-L1-10HW-G18-6-GR
	7 valve positions	573437	VABM-L1-10HW-G18-7-GR
	8 valve positions	573438	VABM-L1-10HW-G18-8-GR
	9 valve positions	573439	VABM-L1-10HW-G18-9-GR
	10 valve positions	573440	VABM-L1-10HW-G18-10-GR
	12 valve positions	573441	VABM-L1-10HW-G18-12-GR
	16 valve positions	573442	VABM-L1-10HW-G18-16-GR
	20 valve positions	573443	VABM-L1-10HW-G18-20-GR
	24 valve positions	573444	VABM-L1-10HW-G18-24-GR
	8 double solenoid + 8 single solenoid valves	573930	VABM-L1-10HW-G18-16-M-GR
	4 double solenoid + 16 single solenoid valves	573931	VABM-L1-10HW-G18-20-M-GR
	24 single solenoid valves	573932	VABM-L1-10HW-G18-24-M-GR
<b>Size 14 mm</b>			
Ports 2, 4 at the front			
	4 valve positions	573500	VABM-L1-14W-G14-4-GR
	5 valve positions	573501	VABM-L1-14W-G14-5-GR
	6 valve positions	573502	VABM-L1-14W-G14-6-GR
	7 valve positions	573503	VABM-L1-14W-G14-7-GR
	8 valve positions	573504	VABM-L1-14W-G14-8-GR
	9 valve positions	573505	VABM-L1-14W-G14-9-GR
	10 valve positions	573506	VABM-L1-14W-G14-10-GR
	12 valve positions	573507	VABM-L1-14W-G14-12-GR
	16 valve positions	573508	VABM-L1-14W-G14-16-GR
	20 valve positions	573509	VABM-L1-14W-G14-20-GR
	24 valve positions	573510	VABM-L1-14W-G14-24-GR
	8 double solenoid + 8 single solenoid valves	573936	VABM-L1-14W-G14-16-M-GR
	4 double solenoid + 16 single solenoid valves	573937	VABM-L1-14W-G14-20-M-GR
	24 single solenoid valves	573938	VABM-L1-14W-G14-24-M-GR
<b>Size 18 mm</b>			
Ports 2, 4 at the front			
	4 valve positions	8004913	VABM-L1-18W-G38-4-G
	5 valve positions	8004914	VABM-L1-18W-G38-5-G
	6 valve positions	8004915	VABM-L1-18W-G38-6-G
	7 valve positions	8004916	VABM-L1-18W-G38-7-G
	8 valve positions	8004917	VABM-L1-18W-G38-8-G
	9 valve positions	8004918	VABM-L1-18W-G38-9-G
	10 valve positions	8004919	VABM-L1-18W-G38-10-G
	12 valve positions	8004920	VABM-L1-18W-G38-12-G
	16 valve positions	8004921	VABM-L1-18W-G38-16-G
	20 valve positions	8004922	VABM-L1-18W-G38-20-G
	24 valve positions	8004923	VABM-L1-18W-G38-24-G
	8 double solenoid + 8 single solenoid valves	8004924	VABM-L1-18W-G38-16-M-G
	4 double solenoid + 16 single solenoid valves	8004925	VABM-L1-18W-G38-20-M-G
	24 single solenoid valves	8004926	VABM-L1-18W-G38-24-M-G

## Ordering data

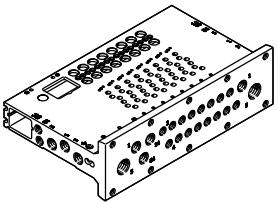Ordering data	Description	Part no.	Type	
<b>Manifold rail for sub-base valve, for control cabinet installation, outlet orientation at the front</b>				
	<b>Size 10 mm</b>			
	Ports 2, 4 at the front, single supply	4 valve positions	<b>8058335</b>	VABM-L1-10HWS1-G18-4-GR
		8 valve positions	<b>8058336</b>	VABM-L1-10HWS1-G18-8-GR
	Ports 2, 4 at the front, double supply	8 valve positions	<b>8058338</b>	VABM-L1-10HWS2-G18-8-GR
		12 valve positions	<b>8058339</b>	VABM-L1-10HWS2-G18-12-GR
		16 valve positions	<b>8058340</b>	VABM-L1-10HWS2-G18-16-GR
		24 valve positions	<b>8058341</b>	VABM-L1-10HWS2-G18-24-GR
	<b>Size 14 mm</b>			
	Ports 2, 4 at the front, single supply	4 valve positions	<b>8058342</b>	VABM-L1-14HWS1-G14-4-GR
		8 valve positions	<b>8058343</b>	VABM-L1-14HWS1-G14-8-GR
Ports 2, 4 at the front, double supply	8 valve positions	<b>8058344</b>	VABM-L1-14HWS2-G14-8-GR	
	12 valve positions	<b>8058345</b>	VABM-L1-14HWS2-G14-12-GR	
	16 valve positions	<b>8058346</b>	VABM-L1-14HWS2-G14-16-GR	
	24 valve positions	<b>8058347</b>	VABM-L1-14HWS2-G14-24-GR	

## Datasheet – Multi-pin plug connection

The following multi-pin plug connections are available for the valve terminal VTUG:

- Sub-D (25-pin)
- Sub-D (44-pin)
- Ribbon cable (26-pin)
- Ribbon cable (50-pin)



### Electrical multi-pin

Each pin on the multi-pin plug can actuate exactly one solenoid coil.

If the maximum configurable number of valve positions is 24, this means that 48 valve functions can be addressed.

The valves can be switched using positive or negative logic (positive switching or negative switching).

Mixed operation is generally not possible; however, an exception is made for the V22 ... V25 variants with 25-pin Sub-D. With these variants, a specific range of valve positions (e.g. Com 16...19) is supplied with common voltage.

This allows these ranges to be switched with positive or negative logic and valve groups to be switched off independently of the other ranges. Mixed operation within a range is not permitted.

#### Note

A double solenoid valve occupies one valve position and two pins on the multi-pin plug. This means that the number of double solenoid valves per manifold rail is limited. (Pin allocation → page 75)

### General technical data

Type	VAEM-L1-S-M1-25	VAEM-L1-S-M1-44	VAEM-L1-S-M3-26	VAEM-L1-S-M3-50
Number of pins	25-pin	44-pin	26-pin	50-pin
Electrical connection	Sub-D plug		Ribbon cable plug	
Max. no. of valve positions	24		24	
Protection rating to EN 60529	IP67		IP40	
Material	PA		PA	
Note on materials	RoHS-compliant		RoHS-compliant	
Certification	c UL us - Recognized (OL)			
CE marking (see declaration of conformity) <sup>1)</sup>	To EU EMC Directive			
Corrosion resistance class CRC <sup>2)</sup>	2			
LABS (PWIS) conformity	VDMA24364-B1/B2-L			
Weight	[g]	53	45	48

1) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

2) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Multi-pin plug connection

Pin allocation – Sub-D plug, 25-pin	Pin	Wire colour <sup>1)</sup>	M1-25 (V20)				M1-25V1 (V22)			
			12x double solenoid 8x single solenoid		8x double solenoid 8x single solenoid		4x double solenoid 16x single solenoid		24x single solenoid	
	1	WH	VP0	14	VPO	14	VPO	14	VP0	14
	2	BN	VP0	12	VPO	12	VPO	12	VP23	14
	3	GN	VP1	14	VP1	14	VP1	14	VP1	14
	4	YE	VP1	12	VP1	12	VP1	12	VP1	12
	5	GY	VP2	14	VP2	14	VP2	14	VP2	14
	6	PK	VP2	12	VP2	12	VP2	12	VP21	14
	7	BU	VP3	14	VP3	14	VP3	14	VP3	14
	8	RD	VP3	12	VP3	12	VP3	12	VP20	14
	9	BK	VP4	14	VP4	14	VP4	14	VP4	14
	10	VT	VP4	12	VP4	12	VP19	14	VP19	14
	11	GY PK	VP5	14	VP5	14	VP5	14	VP5	14
	12	RD BU	VP5	12	VP5	12	VP18	14	VP18	14
	13	GN WH	VP6	14	VP6	14	VP6	14	VP6	14
	14	BN GN	VP6	12	VP6	12	VP17	14	VP17	14
	15	YE WH	VP7	14	VP7	14	VP7	14	VP7	14
	16	BN YE	VP7	12	VP7	12	VP16	14	VP16	14
	17	GY WH	VP8	14	VP8	14	VP8	14	VP8	14
	18	BN GY	VP8	12	VP15	14	VP15	14	VP15	14
	19	WH PK	VP9	14	VP9	14	VP9	14	VP9	14
	20	BN PK	VP9	12	VP14	14	VP14	14	VP14	14
	21	BU WH	VP10	14	VP10	14	VP10	14	VP10	14
	22	BN BU	VP10	12	VP13	14	VP13	14	VP13	14
	23	RD WH	VP11	14	VP11	14	VP11	14	VP11	14
	24	BN RD	VP11	12	VP12	14	VP12	14	VP12	14
	25	BK WH	Com		Com		Com		Com	Com 0...3

1) According to IEC 60757

VP Valve position

 - Note


A grey field means that a double solenoid valve can be used. Only single solenoid valves can be used for fields with a white background.

## Datasheet – Multi-pin plug connection

Pin allocation – Sub-D plug, 25-pin						Pin allocation – Sub-D plug, 44-pin					
	Pin	Wire colour <sup>1)</sup>	M1-25V2 (V23)	M1-25V3 (V24)	M1-25V4 (V25)		Pin	Wire colour <sup>1)</sup>	M1-44 (V21)	18x double solenoid, 6x single solenoid	
1	1	WH	VP0	14	VP0	14	1	WH	VP0	14	
2	2	BN	VP0	12	VP0	12	2	BN	VP0	12	
3	3	GN	VP1	14	VP1	14	3	GN	VP1	14	
4	4	YE	VP1	12	VP1	12	4	YE	VP1	12	
5	5	GY	VP2	14	VP2	14	5	GY	VP2	14	
6	6	PK	VP2	12	VP2	12	6	PK	VP2	12	
7	7	BU	VP3	14	VP3	14	7	BU	VP3	14	
8	8	RD	VP3	12	VP3	12	8	RD	VP3	12	
9	9	BK	VP4	14	VP4	14	9	BK	VP4	14	
10	10	VT	VP4	12	VP5	14	10	VT	VP4	12	
11	11	GY PK	VP5	14	VP6	14	11	GY PK	VP5	14	
12	12	RD BU	VP5	12	VP7	14	12	RD BU	VP5	12	
13	13	GN WH	VP6	14	VP8	14	13	GN WH	VP6	14	
14	14	BN GN	VP6	12	VP9	14	14	BN GN	VP6	12	
15	15	YE WH	VP7	14	VP10	14	15	YE WH	VP7	14	
16	16	BN YE	VP7	12	VP11	14	16	BN YE	VP7	12	
17	17	GY WH	VP8	14	VP12	14	17	GY WH	VP8	14	
18	18	BN GY	VP9	14	VP13	14	18	BN GY	VP8	12	
19	19	WH PK	VP10	14	VP14	14	19	WH PK	VP9	14	
20	20	BN PK	VP11	14	VP15	14	20	BN PK	VP9	12	
21	21	BU WH	Com 16...19	Com 16...19	Com 16...19		21	BU WH	VP10	14	
22	22	BN BU	Com 12...15	Com 12...15	Com 12...15		22	BN BU	VP10	12	
23	23	RD WH	Com 8...11	Com 8...11	Com 8...11		23	RD WH	VP11	14	
24	24	BN RD	Com 4...7	Com 4...7	Com 4...7		24	BN RD	VP11	12	
25	25	BKWH	Com 0...3	Com 0...3	Com 0...3		25	BKWH	VP12	14	
–	–						26	BK BN	VP12	12	
–	–						27	GN GY	VP13	14	
–	–						28	YE GY	VP13	12	
–	–						29	GN PK	VP14	14	
–	–						30	YE PK	VP14	12	
–	–						31	GN BU	VP15	14	
–	–						32	YE BU	VP15	12	
–	–						33	RD GN	VP16	14	
–	–						34	RD YE	VP16	12	
–	–						35	BK GN	VP17	14	
–	–						36	BK YE	VP17	12	
–	–						37	BU GY	VP18	14	
–	–						38	BU PK	VP19	14	
–	–						39	RD GY	VP20	14	
–	–						40	RD PK	VP21	14	
–	–						41	BK GY	VP22	14	
–	–						42	BK PK	VP23	14	
–	–						43	BK BU	com		
–	–						44	BK RD			

<sup>1)</sup> According to IEC 60757

VP Valve position



## Note

A grey field means that a double solenoid valve can be used. Only single solenoid valves can be used for fields with a white background.

## Datasheet – Multi-pin plug connection


Pin allocation – Ribbon cable, 26-pin									Pin allocation – Ribbon cable, 50-pin			
	Pin	M3-26 (V20)							Pin	M3-50 (V26)		
		12x double sole-noid		8x double solenoid 8x single solenoid		4x double solenoid 16x single solenoid		24x single solenoid				
	1	VP0	14	VP0	14	VP0	14	VP0	14	1	VP0	14
	2	VP0	12	VP0	12	VP0	12	VP23	14	2	VP0	12
	3	VP1	14	VP1	14	VP1	14	VP1	14	3	VP1	14
	4	VP1	12	VP1	12	VP1	12	VP22	14	4	VP1	12
	5	VP2	14	VP2	14	VP2	14	VP2	14	5	VP2	14
	6	VP2	12	VP2	12	VP2	12	VP21	14	6	VP2	12
	7	VP3	14	VP3	14	VP3	14	VP3	14	7	VP3	14
	8	VP3	12	VP3	12	VP3	12	VP20	14	8	VP3	12
	9	VP4	14	VP4	14	VP4	14	VP4	14	9	VP4	14
	10	VP4	12	VP4	12	VP19	14	VP19	14	10	VP4	12
	11	VP5	14	VP5	14	VP5	14	VP5	14	11	VP5	14
	12	VP5	12	VP5	12	VP18	14	VP18	14	12	VP5	12
	13	VP6	14	VP6	14	VP6	14	VP6	14	13	VP6	14
	14	VP6	12	VP6	12	VP17	14	VP17	14	14	VP6	12
	15	VP7	14	VP7	14	VP7	14	VP7	14	15	VP7	14
	16	VP7	12	VP7	12	VP16	14	VP16	14	16	VP7	12
	17	VP8	14	VP8	14	VP8	14	VP8	14	17	VP8	14
	18	VP8	12	VP15	14	VP15	14	VP15	14	18	VP8	12
	19	VP9	14	VP9	14	VP9	14	VP9	14	19	VP9	14
	20	VP9	12	VP14	14	VP14	14	VP14	14	20	VP9	12
	21	VP10	14	VP10	14	VP10	14	VP10	14	21	VP10	14
	22	VP10	12	VP13	14	VP13	14	VP13	14	22	VP10	12
	23	VP11	14	VP11	14	VP11	14	VP11	14	23	VP11	14
	24	VP11	12	VP12	14	VP12	14	VP12	14	24	VP11	12
	25	Com		Com		Com		Com		25	VP12	14
	26	Com		Com		Com		Com		26	VP12	12
	-									27	VP13	14
	-									28	VP13	12
	-									29	VP14	14
	-									30	VP14	12
	-									31	VP15	14
	-									32	VP15	12
	-									33	VP16	14
	-									34	VP16	12
	-									35	VP17	14
	-									36	VP17	12
	-									37	VP18	14
	-									38	VP18	12
	-									39	VP19	14
	-									40	VP19	12
	-									41	VP20	14
	-									42	VP20	12
	-									43	VP21	14
	-									44	VP21	12
	-									45	VP22	14
	-									46	VP22	12
	-									47	VP23	14
	-									48	VP23	12
	-									49	Com	
	-									50		

VP Valve position

## Datasheet – Multi-pin plug connection

### Dimensions

Multi-pin plug connection, Sub-D

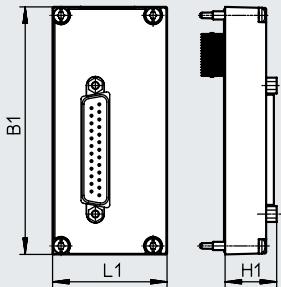

Download CAD data → [www.festo.com](http://www.festo.com)




**Note**  
Dimensions of the manifold  
rail with electrical  
connection  
(→ Page 49)

Type	B1	L1	H1
VAEM-L1-S-M1-...	90.5	41.9	18.9

### Dimensions

Multi-pin plug connection, ribbon cable

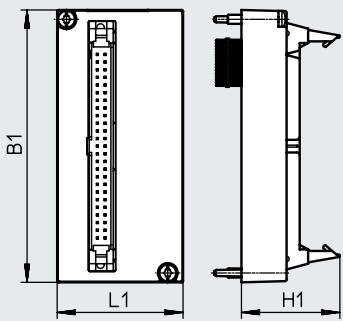




Download CAD data → [www.festo.com](http://www.festo.com)



**Note**  
Dimensions of the manifold  
rail with electrical  
connection  
(→ Page 49)

Type	B1	L1	H1
VAEM-L1-S-M3-...	90.5	41.9	32.7

## Accessories – Multi-pin plug connection

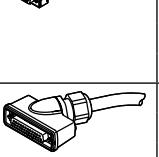Ordering data		Description	Part no.	Type		
<b>Electrical interface, Sub-D</b>						
	25-pin	For variant M1-25 (V20) For variant M1-25V1 (V22) For variant M1-25V2 (V23) For variant M1-25V3 (V24) For variant M1-25V4 (V25)	573445 573447 573448 573449 573450	VAEM-L1-S-M1-25 VAEM-L1-S-M1-25V1 VAEM-L1-S-M1-25V2 VAEM-L1-S-M1-25V3 VAEM-L1-S-M1-25V4		
	44-pin	For variant M1-44 (V21)	573446	VAEM-L1-S-M1-44		
	<b>Electrical interface, ribbon cable plug</b>					
		26-pin	For variant M3-26 (V20)	573452	VAEM-L1-S-M3-26	
		50-pin	For variant M3-50 (V26)	573451	VAEM-L1-S-M3-50	
<b>Connecting cable for multi-pin plug</b>						
	Sub-D socket, straight	• 25-pin, up to 24 coils, IP40 • Open cable end, 25-core	2.5 m 5 m 10 m	575417 575418 575419	NEBV-S1G25-K-2.5-N-LE25-S6 NEBV-S1G25-K-5-N-LE25-S6 NEBV-S1G25-K-10-N-LE25-S6	
		• 44-pin, up to 42 coils, IP40 • Open cable end, 44-core	2.5 m 5 m 10 m	575113 575114 575115	NEBV-S1G44-K-2.5-N-LE44-S6 NEBV-S1G44-K-5-N-LE44-S6 NEBV-S1G44-K-10-N-LE44-S6	
		Sub-D socket, angled	• 25-pin, up to 24 coils, IP65 • Open cable end, 25-core	2.5 m 5 m 10 m	575423 575424 575425	NEBV-S1WA25-K-2.5-N-LE25-S9 NEBV-S1WA25-K-5-N-LE25-S9 NEBV-S1WA25-K-10-N-LE25-S9
			• 44-pin, up to 42 coils, IP65 • Open cable end, 44-core	2.5 m 5 m 10 m	575420 575421 575422	NEBV-S1WA44-K-2.5-N-LE44-S9 NEBV-S1WA44-K-5-N-LE44-S9 NEBV-S1WA44-K-10-N-LE44-S9

## Datasheet – I-Port interface/IO-Link®

Festo-specific, standardised interface for direct connection to the fieldbus by mounting the bus node CTEU or to an IO-Link master via a cable (in IO-Link® mode).



## I-Port interface/IO-Link®

## Versions:

- I-Port interface for bus nodes (CTEU)
- IO-Link® mode for direct connection to a higher-level IO-Link master

The following protocols are supported in connection with the associated CTEU bus node:

- CANopen
- DeviceNet
- PROFIBUS
- CC-LINK
- EtherCAT
- AS-Interface
- PROFINET
- EtherNet/IP
- VARAN
- Festo installation system CPI

The electrical supply/transmission of communication takes place via an M12 plug.

The valve terminal can be equipped with 4 ... 24 (double solenoid) valves.

## General technical data

Types of communication	IO-Link®	
Electrical connection		<ul style="list-style-type: none"> <li>• M12 plug, 5-pin</li> <li>• A-coded</li> <li>• Metal thread for shielding</li> </ul>
Baud rates	COM3 COM2	[kbps] 230.4 38.4
Intrinsic current consumption, logic supply PS		[mA] 30
Intrinsic current consumption, valve supply PL		[mA] 30
Max. number of solenoid coils	VAEM-L1-S-8-PT VAEM-L1-S-16-PT VAEM-L1-S-24-PT	16 32 48
Max. no. of valve positions	VAEM-L1-S-8-PT VAEM-L1-S-16-PT VAEM-L1-S-24-PT	8 16 24
Ambient temperature		[°C] -5 ... +50
Product weight	Outlet on top Outlet on the side	[g] 49 100
Protection rating to EN 60529		IP67
Certification		c UL us - Recognized (OL)
CE marking (see declaration of conformity) <sup>1)</sup>		To EU EMC Directive
Corrosion resistance class CRC <sup>2)</sup>		2
LABS (PWIS) conformity		VDMA24364-B1/B2-L


1) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.


2) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – I-Port interface/IO-Link®

Status LED X1	Meaning (up to Rev. 07)	Meaning (from Rev. 08)
Illuminated green	Normal operating status	Data communication faulty
Flashes green	Data communication faulty	Normal operating status
Flashes alternately between red/green	24 V load voltage supply faulty	-
Flashes red	Device error	
Illuminated red	24 V load voltage supply and data communication faulty	24 V load voltage supply faulty. Data communication may be faulty
Off	No 24 V operating voltage supply or undervoltage	

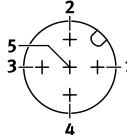Pin allocation – I-Port interface/IO-Link®			
	Pin	Allocation	Description
	1	24V <sub>EL/SEN</sub>	Operating voltage supply (electronics, sensors/inputs)
	2	24V <sub>VAL/OUT</sub>	Load voltage supply (valves/outputs)
	3	0V <sub>EL/SEN</sub>	Operating voltage supply (electronics, sensors/inputs)
	4	C/Q	Data communication
	5	0V <sub>VAL/OUT</sub>	Load voltage supply (valves/outputs)

## System overview – IO-Link®

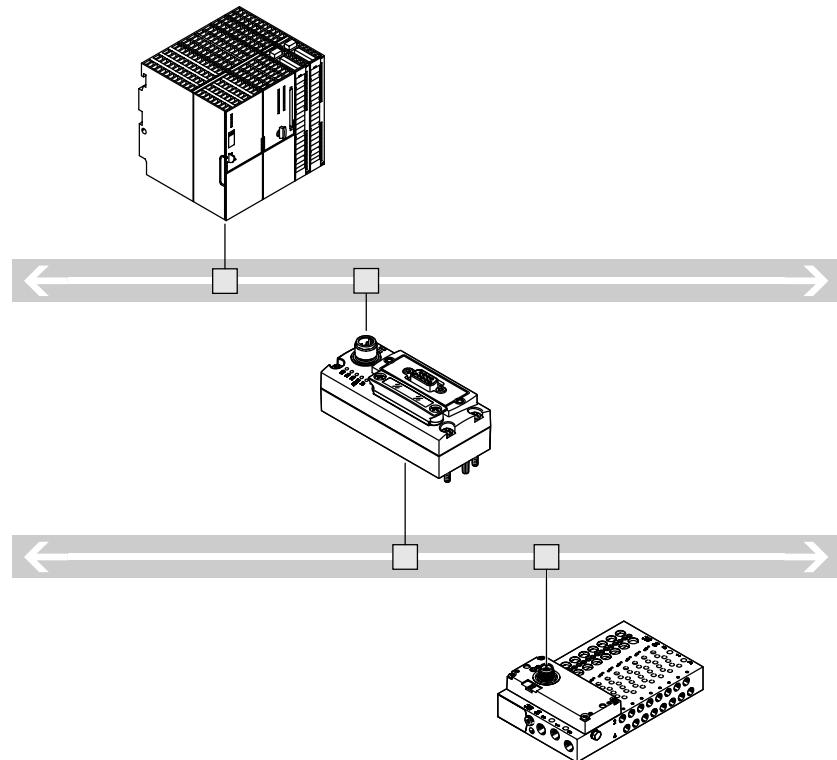


- Communication with the higher-order controller via fieldbus
- Use a bus node CTEU compatible with the fieldbus protocol
- Up to 64 inputs/outputs (solenoid coils), depending on the valve terminal
- No preprocessing

## Datasheet – I-Port interface/IO-Link®


## Dimensions

I-Port interface, outlet on top

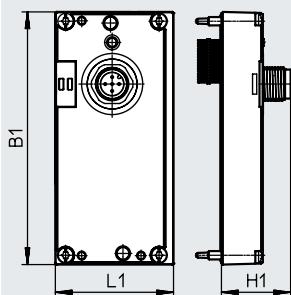Download CAD data → [www.festo.com](http://www.festo.com)

**Note**  
Dimensions of the manifold rail with electrical connection → page 49



I-Port interface, outlet on side

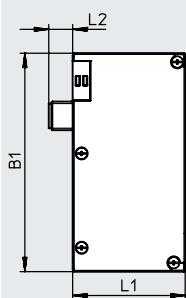

**Note**  
Dimensions of the manifold rail with electrical connection → page 49

Type	Outlet on top			Outlet on the side		
	B1	L1	H1	B1	L1	L2
VAEM-L1-S...	91	42.5	25	91.5	47.1	10

## Datasheet – I-Port interface/IO-Link®

Ordering data		Part no.	Type
	Description		
<b>Electrical interface for I-Port interface/IO-Link®, outlet on top</b>			
	Actuation of up to 8 double solenoid valve positions	573384	VAEM-L1-S-8-PT
	Actuation of up to 16 double solenoid valve positions	573939	VAEM-L1-S-16-PT
	Actuation of up to 24 double solenoid valve positions	573940	VAEM-L1-S-24-PT
<b>Electrical interface for I-Port interface/IO-Link®, outlet on the side</b>			
	Actuation of up to 8 double solenoid valve positions	574207	VAEM-L1-S-8-PTL
	Actuation of up to 16 double solenoid valve positions	574208	VAEM-L1-S-16-PTL
	Actuation of up to 24 double solenoid valve positions	574209	VAEM-L1-S-24-PTL
<b>Connection technology for IO-Link®</b>			
	T-adapter M12, 5-pin for IO-Link® and load supply	171175	FB-TA-M12-5POL
	Straight plug, M12, 5-pin, for T adapter FB-TA	175487	SEA-M12-5GS-PG7
	Y-distributor with cable on controller side, M12x1 A-coded, for IO-Link®	8091516	NEDU-L1R2-M12G5-M12LE-1R
	M12x1 A-coded, for IO-Link®, straight cable outlet	8000208	NEBU-M12G5-K-0.5-M12G4
	M12x1 A-coded, for IO-Link®, straight cable outlet	574321	NEBU-M12G5-E-5-Q8N-M12G5
	M12x1 A-coded, for IO-Link®, straight cable outlet	574322	NEBU-M12G5-E-7.5-Q8N-M12G5
	M12x1 A-coded, for IO-Link®, straight cable outlet	8003617	NEBU-M12G5-K-0.5-M12W5
	M12x1 A-coded, for IO-Link®, straight cable outlet	8003618	NEBU-M12G5-K-2-M12W5
	M12x1 A-coded, for IO-Link®, angled cable outlet	570733	NEBU-M12W5-K-0.5-M12W5
	M12x1 A-coded, for IO-Link®, angled cable outlet	570734	NEBU-M12W5-K-2-M12W5
<b>Inscription label for I-Port interface/IO-Link®</b>			
	40 pieces in frame	565306	ASLR-C-E4

## Datasheet – CAPC

**Function**

The electrical connection block CAPC enables the decentralised installation of bus nodes CTEU on a valve terminal or input modules with I-Port interface.

**Area of application**

- M12 connection technology (two interfaces)
- Enables the installation of valve terminals or other devices over a distance of 20 metres
- Accessory CAFM enables the connection block to be installed on an H-rail

**General technical data**

Type	CAPC-F1-E-M12	
Dimensions W x L x H	[mm]	50 x 148 x 28
Fieldbus interface		2x M12 socket, 5-pin
Operating voltage range	[V DC]	18 ... 30
Max. power supply	[A]	2
Nominal operating voltage	[V DC]	24
Product weight	[g]	85
Cable length	[m]	20

**Materials**

Housing	Reinforced PA
Note on materials	RoHS-compliant

**Operating and environmental conditions**

Protection rating to EN 60529	IP65, IP67
Ambient temperature	[°C] -5 ... +50
Storage temperature	[°C] -20 ... +70
Corrosion resistance class CRC <sup>1)</sup>	2
CE marking (see declaration of conformity) <sup>2)</sup>	To EU EMC Directive
LABS (PWIS) conformity	VDMA24364-B2-L

1) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

2) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

**Pin allocation – Power supply/IO-Link® interfaces**

	Pin	Allocation	Description
	1	24V <sub>EL/SEN</sub>	Operating voltage supply (electronics, sensors/inputs)
	2	24V <sub>VAL/OUT</sub>	Load voltage supply (valves/outputs)
	3	0V <sub>EL/SEN</sub>	Operating voltage supply (electronics, sensors/inputs)
	4	C/Q	Data communication
	5	0V <sub>VAL/OUT</sub>	Load voltage supply (valves/outputs)
		Housing, FE	Functional earth



## Datasheet – CAPC

## Dimensions

CAPC

Download CAD data → [www.festo.com](http://www.festo.com)

CAPC with mounted bus node CTEU-CO

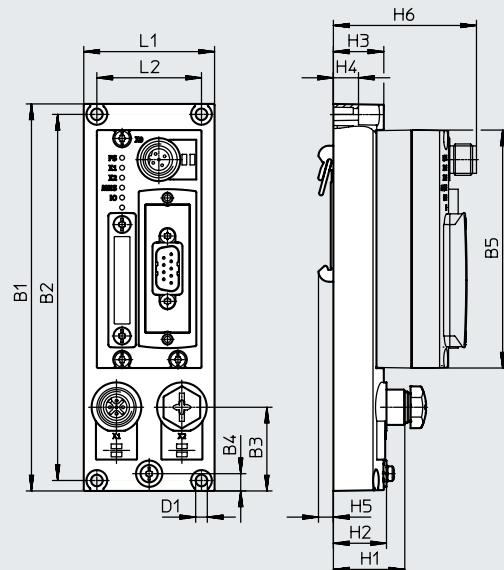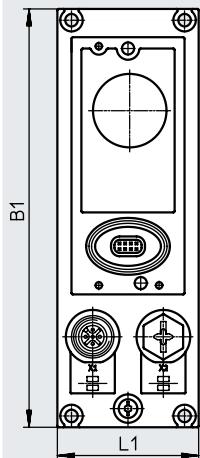


Type	B1	B2	B3	B4	B5	D1Ø	H1	H2	H3	H4	H5	H6	L1	L2
CAPC	148	140	32	6.6	91	4.4	27.3	20.3	19.3	9.6	5.7	54.8	50	40

## Ordering data

Part no.

Type

## Electrical connection block

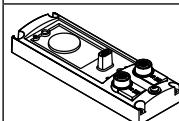


For connecting a second device with I-Port interface

570042

CAPC-F1-E-M12

## H-rail mounting

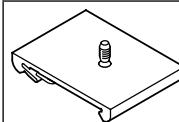


For electrical connection block CAPC

570043

CAF-M-F1-H

## Datasheet – Interlock

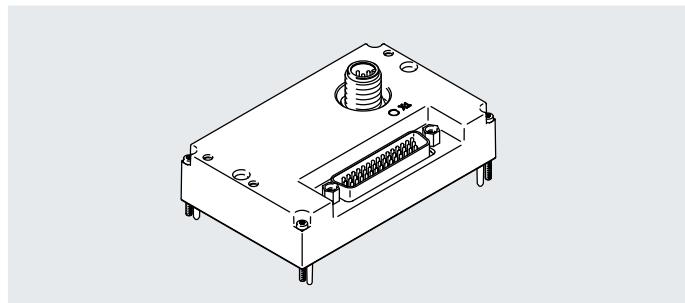**Interlock**

The interlock function enables the first 16 solenoid coils to be individually supplied externally.

This ensures that these valves can be released in a safety-oriented way.

The interlock interface is established via external contacts for a single-pin connection or via safety output terminals for a double-pin connection.

**General technical data**

Types of communication	I-Port/IO-Link®	
Number of valve positions	4...24	
Max. number of solenoid coils	48	
Number of interlock solenoid coils	16	
Number of inputs for voltage feedback	18 (16x interlock + 2 group supply)	
Mounting position	Any	
Nominal flow rate	[l/min]	330
Product weight	[g]	80
Residual ripple	[V <sub>SS</sub> ]	4
Baud rate	COM3 COM2	[kbps] [kbps]
	Protocol Connection technology Port type Number of ports Process data length OUT Process data IN Minimum cycle time	V1.0 M12, A-coded Type B 1 6 bytes 4 bytes 11.5 ms (2.3 ms per frame = 2 bytes of user data)
Corrosion resistance class CRC <sup>1)</sup>	2	

1) More information: [www.festo.com/x/topic/crc](http://www.festo.com/x/topic/crc)

## Datasheet – Interlock

### Interlock interface

#### Single-pin interlock interface


- The interlock interface is established via external positive switching contacts or single-pin switching safety terminals
- 16 solenoid coils can be actuated via the interlock ( $V_{n+}$ )

- Solenoid coils that do not require interlock actuation can be supplied directly with 24 V from pins 1 ... 3
- Application of the respective input voltage is reported via the fieldbus as a process image

#### Double-pin interlock interface


- The interlock interface is established via external positive-negative switching safety terminals
- The solenoid coils of the interlock valves are actuated via the corresponding pins in the sub-D plug (pins 7 ... 38)
- The solenoid coils that do not require interlock actuation can be supplied directly with 24 V (e.g. from pins 1 ... 3)
- Any difference in potential between  $V_{n-}$  and 0 VVAL/OUT must be below 5 V

Sample circuit diagram for a single-pin interlock interface

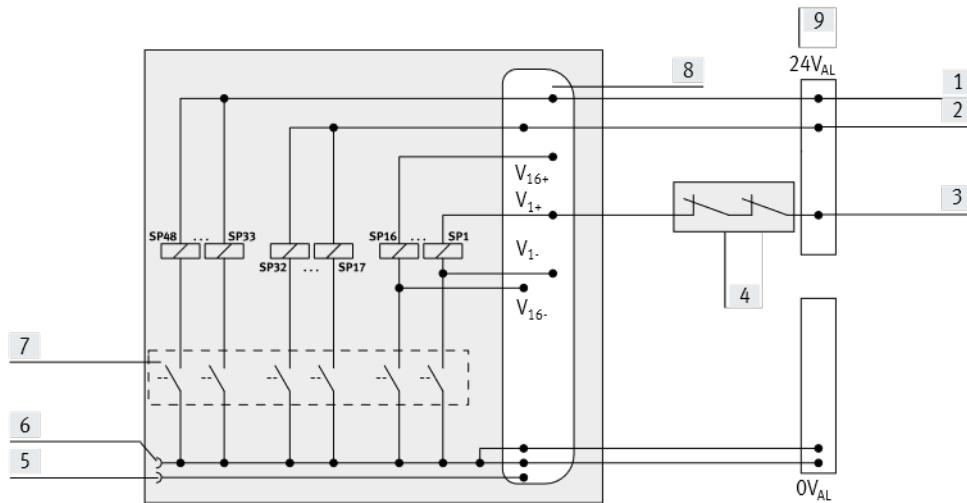

- [1] Power supply  $V_+$ ; solenoid coil 33 ... 48 (no interlock)
- [2] Power supply  $V_+$ ; solenoid coil 17 ... 32 (no interlock)
- [3] Actuation  $V_{n+}$  (via interlock)
- [4] Interlock contacts of the output terminal
- [5] I-Port connection pin 2, 24 VVAL/OUT (PL), load voltage supply
- [6] I-Port connection pin 5, 0 VVAL/OUT (PL), load voltage supply
- [7] Driver, actuated via fieldbus/I-Port
- [8] Interlock Sub-D connection
- [9] Power supply (interlock)

Sample circuit diagram for a double-pin interlock interface

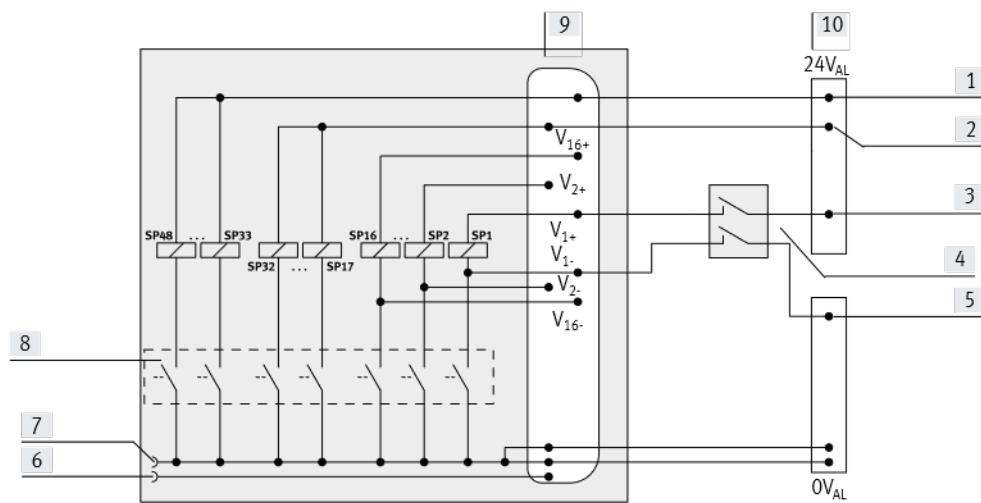

- [1] Power supply  $V_+$ ; solenoid coil 33 ... 48 (no interlock)
- [2] Power supply  $V_+$ ; solenoid coil 17 ... 32 (no interlock)
- [3] Actuation  $V_{n+}$  (via interlock)
- [4] Interlock contacts of the output terminal
- [5] Actuation  $V_{n-}$  (via interlock)
- [6] I-Port connection pin 2, 24 VVAL/OUT (PL), load voltage supply
- [7] I-Port connection pin 5, 0 VVAL/OUT (PL), load voltage supply
- [8] Driver, actuated via fieldbus/I-Port
- [9] Interlock Sub-D connection
- [10] Power supply (interlock)


## Datasheet – Interlock

Pin allocation – Interlock									
	Pin	Coil	Signal	Pin	Coil	Signal	Pin	Coil	Signal
31	1	–	24 V <sub>VAL/OUT</sub>	16	5	V5-	31	13	V13+
16	2	–	24 V <sub>VAL/OUT</sub>	17	6	V6+	32	13	V13-
15	3	–	24 V <sub>VAL/OUT</sub>	18	6	V6-	33	14	V14+
44	4	1 ... 48	0 V <sub>VAL/OUT</sub>	19	7	V7+	34	14	V14-
30	5	1 ... 48	0 V <sub>VAL/OUT</sub>	20	7	V7-	35	15	V15+
15	6	1 ... 48	0 V <sub>VAL/OUT</sub>	21	8	V8+	36	15	V15-
44	7	1	V1+	22	8	V8-	37	16	V16+
31	8	1	V1-	23	9	V9+	38	16	V16-
16	9	2	V2+	24	9	V9-	39	17 ... 32	V17 ... 32+
15	10	2	V2-	25	10	V10+	40	33 ... 48	V33 ... 48+
44	11	3	V3+	26	10	V10-	41	1 ... 48	0 V <sub>VAL/OUT</sub>
30	12	3	V3-	27	11	V11+	42	1 ... 48	0 V <sub>VAL/OUT</sub>
15	13	4	V4+	28	11	V11-	43	1 ... 48	0 V <sub>VAL/OUT</sub>
44	14	4	V4-	29	12	V12+	44	–	n.c.
31	15	5	V5+	30	12	V12-	Housing		FE

Pin allocation – I-Port interface/IO-Link®			
	Pin	Allocation	Description
5	1	24V <sub>EL/SEN</sub>	Operating voltage supply (electronics, sensors/inputs)
3	2	24V <sub>VAL/OUT</sub>	Load voltage supply (valves/outputs)
4	3	0V <sub>EL/SEN</sub>	Operating voltage supply (electronics, sensors/inputs)
2	4	C/Q	Data communication
1	5	0V <sub>VAL/OUT</sub>	Load voltage supply (valves/outputs)
Housing, FE		Functional earth	









## Dimensions

I-Port interface with interlock, outlet on top





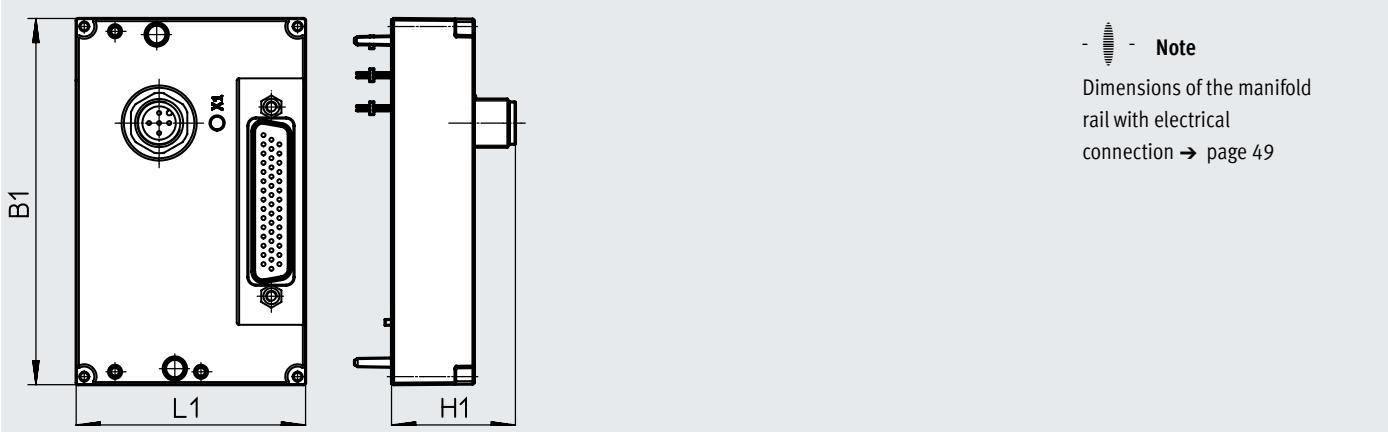
Download CAD data → [www.festo.com](http://www.festo.com)

Type	Outlet on top		
	B1	L1	H1
VAEM-L1-S-24-PTK	91	57	30.8

## Accessories – Valve terminal

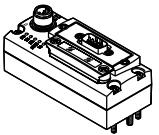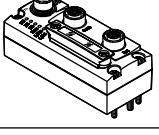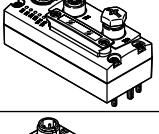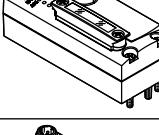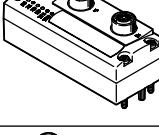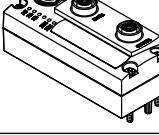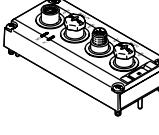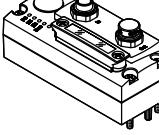Ordering data – CTEU		Description	Part no.	Type
<b>Bus node</b>				
	CANopen bus node		<b>570038</b>	CTEU-CO
	CC-Link bus node		<b>1544198</b>	CTEU-CC
	PROFIBUS bus node		<b>570040</b>	CTEU-PB
	DeviceNet bus node		<b>570039</b>	CTEU-DN
	EtherCAT bus node		<b>572556</b>	CTEU-EC
	EtherNet/IP bus node		<b>2798071</b>	CTEU-EP
	AS-Interface bus node		<b>572555</b>	CTEU-AS
	PROFINET RT bus node		<b>2201471</b>	CTEU-PN
	VARAN bus node		<b>8087559</b>	CTEU-VN
<b>Electrical interface</b>				
	For direct integration of the valve terminal into the decentralised IO system CPX-API	12 valve positions	<b>8081922</b>	VAEM-L1-S-12-AP
		24 valve positions	<b>8081923</b>	VAEM-L1-S-24-AP
	For direct integration of the valve terminal into the decentralised CPI installation system from Festo		<b>2149714</b>	CTEU-CP

## Accessories – Valve terminal



Ordering data – CTEU		Description	Part no.	Type
<b>Bus connection</b>				
	Sub-D plug, straight	For CANopen	532219	FBS-SUB-9-BU-2x5POL-B
		For CC Link	532220	FBS-SUB-9-GS-2x4POL-B
		For PROFIBUS	532216	FBS-SUB-9-GS-DP-B
	Sub-D plug, angled, 9-pin	For CANopen	533783	FBS-SUB-9-WS-CO-K
		For PROFIBUS	533780	FBS-SUB-9-WS-PB-K
	M12x1, 5-pin	A-coded, for CANopen	525632	FBA-2-M12-5POL
		B-coded, for PROFIBUS	533118	FBA-2-M12-5POL-RK
	For 5-pin terminal strip for CANopen		525634	FBA-1-SL-5POL
	Terminal strip, 5-pin, for DeviceNet/CANopen		525635	FBSD-KL-2x5POL
	Plug, straight, M12x1	5-pin, for CANopen	175380	FBS-M12-5GS-PG9
		4-pin, D-coded for EtherCAT	543109	NECU-M-S-D12G4-C2-ET
		5-pin, compatible with FBA-2-M12-5POL-RK for PROFIBUS	1066354	NECU-M-S-B12G5-C2-PB
	Straight socket, M12x1, 5-pin, for assembling a connecting cable compatible with FBA-2-M12-5POL-RK for PROFIBUS		1067905	NECU-M-B12G5-C2-PB
	Terminating resistor, M12, B-coded for PROFIBUS		1072128	CACR-S-B12G5-220-PB
<b>Plug socket</b>				
	For power supply, M12x1, 5-pin, B-coded for CANopen/DeviceNet		538999	NTSD-GD-9-M12-5POL-RK
			18324	FBSD-GD-9-5POL
<b>Inscription label</b>				
	For bus node		565306	ASLR-C-E4

## Accessories – Valve terminal

Ordering data		Description	Part no.	Type	PU <sup>1)</sup>	
<b>Push-in fitting, straight</b>						
	M5 thread	For tubing Ø 3 mm	–	153313	QSM-M5-3-I	
		Round releasing ring	133003	QSM-M5-3-I-R	10	
	M5 thread	For tubing Ø 4 mm	–	★ 153315	QSM-M5-4-I	10
		For tubing Ø 6 mm	Round releasing ring	133004	QSM-M5-4-I-R	10
	M7 thread	For tubing Ø 4 mm	–	★ 153319	QSM-M7-4-I	10
		For tubing Ø 6 mm	Round releasing ring	133005	QSM-M7-6-I-R	10
	G1/8 thread	For tubing Ø 4 mm	–	★ 186106	QS-G1/8-4-I	10
		For tubing Ø 6 mm	–	★ 186107	QS-G1/8-6-I	10
		For tubing Ø 8 mm	–	★ 186109	QS-G1/8-8-I	10
	R1/8 thread	For tubing Ø 10 mm	–	★ 190647	QS-1/8-10-I	10
	R1/4 thread	For tubing Ø 8 mm	–	132280	QS-B-1/4-8-I	1
		–	–	★ 153016	QS-1/4-8-I	10
		For tubing Ø 10 mm	–	132842	QS-B-1/4-10-I	1
		–	–	★ 153018	QS-1/4-10-I	10
	R3/8 thread	For tubing Ø 8 mm	–	130681	QS-3/8-8-50	50
		For tubing Ø 10 mm	–	130682	QS-3/8-10-50	50
		For tubing Ø 12 mm	–	130683	QS-3/8-12-20	20
		For tubing Ø 16 mm	–	164957	QS-3/8-16	1
<b>Push-in fitting, angled</b>						
	M5 thread	For tubing Ø 3 mm	–	153331	QSML-M5-3	
		For tubing Ø 4 mm	–	★ 153333	QSML-M5-4	10
	M7 thread	For tubing Ø 4 mm	–	★ 186352	QSML-M7-4	10
	G1/8 thread	For tubing Ø 6 mm	–	★ 186117	QSL-G1/8-6	10
	–	For tubing Ø 8 mm	–	★ 186119	QSL-G1/8-8	10
	R1/8 thread	For tubing Ø 10 mm	–	★ 190658	QSL-1/8-10	10
		For tubing Ø 6 mm	–	130765	QSML-1/8-6-100	100
	R1/4 thread	For tubing Ø 8 mm	–	132220	QSL-B-1/4-8	1
		For tubing Ø 8 mm	–	130732	QSL-1/4-8-50	50
		For tubing Ø 10 mm	–	132817	QSL-B-1/4-10	1
		For tubing Ø 10 mm	–	130733	QSL-1/4-10-50	50
		For tubing Ø 12 mm	–	130734	QSL-1/4-12-20	20
<b>Push-in fitting, long, angled</b>						
	M5 thread	For tubing Ø 3 mm	–	130838	QSMLL-M5-3	
		For tubing Ø 4 mm	–	153339	QSMLL-M5-4	10
	M7 thread	For tubing Ø 4 mm	–	186354	QSMLL-M7-4	10
	G1/8 thread	For tubing Ø 6 mm	–	186128	QSLL-G1/8-6	10
	–	For tubing Ø 8 mm	–	186130	QSLL-G1/8-8	10
<b>Blanking plug</b>						
	For M5 thread	–	★ 174308	B-M5-B	10	
	For M7 thread	–	★ 174309	B-M7	10	
	For G1/8 thread	–	★ 3568	B-1/8	10	
	For G1/4 thread	–	★ 3569	B-1/4	10	
	For G1/8 thread	–	196720	CDV15.0-B-G1/8	1	
	For G3/8 thread	–	196712	CDV15.0-B-G3/8	1	
	For G1/4 thread	–	8035644	CDV15.0-B-G1/4	1	

1) Packaging unit.

## Accessories – Valve terminal

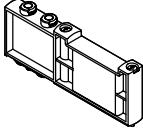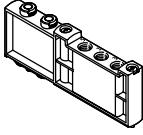Ordering data		Description	Part no.	Type	PU <sup>1)</sup>
<b>Silencer</b>					
	For M3 thread		1231120	AMTE-M-LH-M3	20
	For M5 thread		★ 1205858	AMTE-M-LH-M5	20
	For M7 thread		161418	UC-M7	1
	For G1/8 thread	High flow rate	★ 2307	U-1/8	1
		Lower flow rate	161419	UC-1/8	1
	For G1/4 thread	High flow rate	★ 2316	U-1/4	1
			534223	U-1/4-20	20
		Lower flow rate	165004	UC-1/4	1
			534220	UC-1/4-20	20
<b>Cover plate</b>					
	Vacant position width 10 mm	–	573422	VABB-L1-10-T	1
	Vacant position width 14 mm	–	573488	VABB-L1-14-T	1
	Vacant position width 18 mm	–	8004897	VABB-L1-18-T	1
<b>Supply plate</b>					
	Supply ports 1, 3, 5, width 10 mm	–	573924	VABF-L1-10-P3A4-M7-T1	1
	Supply ports 1, 3, 5, width 14 mm	–	573925	VABF-L1-14-P3A4-G18-T1	1
	Supply ports 1, 3, 5, width 18 mm	–	8004898	VABF-L1-18-P3A4-G14-T1	1
<b>Separator</b>					
	For manifold rail, size 10, M5/M7	For sub-base valves	569994	VABD-6-B	1
		For semi in-line valves	569995	VABD-8-B	1
	For all manifold rails, size 14		569996	VABD-10-B	1
	For all manifold rails, size 18		569997	VABD-12-B	1

1) Packaging unit.




## Accessories – Valve terminal

Ordering data		Description	Part no.	Type	PU <sup>1)</sup>
<b>Cover cap for manual override</b>					
	Covered		540898	VMPA-HBV-B	10
	Non-detenting		540897	VMPA-HBT-B	10
	Detenting (without accessories)		8002234	VAMC-L1-CD	10
<b>Inscription label holders</b>					
	Holder for an inscription label and covering for the retaining screw and manual override		570818	ASLR-D-L12	10
<b>Screw set</b>					
			8092501	VAME-S-M5-16-R1-P10	1

1) Packaging unit.


## Valve terminal VTUG with multi-pin plug and fieldbus interface




### Accessories – Valve terminal

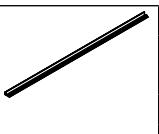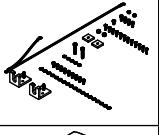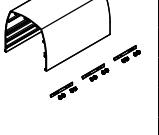Ordering data		Description	Part no.	Type	PU <sup>1)</sup>			
<b>Check valve</b>								
	For manifold rails VABM-L1-10...	For blocking the flow in the event of back pressure in duct 3 and 5	8047364	VABF-L1-10H-H2	10			
	For manifold rails VABM-L1-14...		8047365	VABF-L1-14H-H2	10			
<b>Flow restrictor</b>								
	For manifold rails VABM-L1-10...	For setting the flow rate during pressurisation and exhausting (for M5 threaded connection)	Nominal width: 0.5 mm	8025709	VFFG-T-M5-5	10		
			Nominal width: 0.6 mm	8025710	VFFG-T-M5-6	10		
			Nominal width: 0.7 mm	8025711	VFFG-T-M5-7	10		
			Nominal width: 0.85 mm	8025712	VFFG-T-M5-8	10		
			Nominal width: 1.05 mm	8025713	VFFG-T-M5-10	10		
			Nominal width: 1.2 mm	8025714	VFFG-T-M5-12	10		
			Nominal width: 1.55 mm	8025715	VFFG-T-M5-15	10		
For manifold rails VABM-L1-14...	For setting the flow rate during pressurisation and exhausting (for Ø 4 mm)	Nominal width: 0.5 mm	8047346	VFFG-T-F4-5	10			
		Nominal width: 0.6 mm	8047347	VFFG-T-F4-6	10			
					Nominal width: 0.7 mm	8047348	VFFG-T-F4-7	10
					Nominal width: 0.85 mm	8047349	VFFG-T-F4-8	10
					Nominal width: 1.05 mm	8047350	VFFG-T-F4-10	10
					Nominal width: 1.2 mm	8047351	VFFG-T-F4-12	10
					Nominal width: 1.55 mm	8047352	VFFG-T-F4-15	10
					Nominal width: 0.7 mm	8047353	VFFG-T-F6-7	10
					Nominal width: 0.85 mm	8047354	VFFG-T-F6-8	10
		<b>Flow restrictor set</b>						
	For manifold rails VABM-L1-10...	Two of each size, for M5 threaded connection		8025716	VFFG-T-M5-A-V1	14		
		Two of each size, for Ø 4 mm		8062200	VFFG-T-F4-A-V1	14		
	For manifold rails VABM-L1-14...	Two of each size, for Ø 5.8 mm		8062201	VFFG-T-F6-A-V1	14		
<b>Hood</b>								
Datasheets → Internet: cafm/cafc								
	Mounting rail for attaching the hood		196 mm	3307385	CAFM-X1-R-200	1		
			296 mm	3307386	CAFM-X1-R-300	1		
			396 mm	3307387	CAFM-X1-R-400	1		
			496 mm	3307388	CAFM-X1-R-500	1		
			596 mm	3307389	CAFM-X1-R-600	1		
	Mounting kit for VTUG hood		572257	CAFC-X1-BE		1		
	Hood section for VTUG terminal including mounting attachments for connecting several hood sections in series	VTUG-10-4 sections	200 mm	8127858	CAFC-X1-GAL-200-Z	1		
		VTUG-10-8/12-14-4 sections	300 mm	8127859	CAFC-X1-GAL-300-Z	1		
		VTUG-10-16/24-14-8/12-sections	400 mm	8127860	CAFC-X1-GAL-400-Z	1		
		VTUG-14-16 sections	600 mm	8127861	CAFC-X1-GAL-600-Z	1		
		VTUG-14-24 sections		8127862	CAFC-X1-GAL-600-Z	1		
	Kit for any hood section for terminal VTUG		-	CAFC... → Internet: cafc				

1) Packaging unit.

## Accessories – Valve terminal

Ordering data		Description	Part no.	Type
<b>Inscription label holder for valve terminal</b>				
	Size 10	For 4 valve positions For 5 valve positions For 6 valve positions For 7 valve positions For 8 valve positions For 9 valve positions For 10 valve positions For 12 valve positions For 16 valve positions For 20 valve positions For 24 valve positions	573453 573454 573455 573456 573457 573458 573459 573460 573461 573462 573463	ASCF-H-L1-10-4V ASCF-H-L1-10-5V ASCF-H-L1-10-6V ASCF-H-L1-10-7V ASCF-H-L1-10-8V ASCF-H-L1-10-9V ASCF-H-L1-10-10V ASCF-H-L1-10-12V ASCF-H-L1-10-16V ASCF-H-L1-10-20V ASCF-H-L1-10-24V
	Size 14	For 4 valve positions For 5 valve positions For 6 valve positions For 7 valve positions For 8 valve positions For 9 valve positions For 10 valve positions For 12 valve positions For 16 valve positions For 20 valve positions For 24 valve positions	573511 573512 573513 573514 573515 573516 573518 573519 573520 573521 573522	ASCF-H-L1-14-4V ASCF-H-L1-14-5V ASCF-H-L1-14-6V ASCF-H-L1-14-7V ASCF-H-L1-14-8V ASCF-H-L1-14-9V ASCF-H-L1-14-10V ASCF-H-L1-14-12V ASCF-H-L1-14-16V ASCF-H-L1-14-20V ASCF-H-L1-14-24V
	Size 18	For 4 valve positions For 5 valve positions For 6 valve positions For 7 valve positions For 8 valve positions For 9 valve positions For 10 valve positions For 12 valve positions For 16 valve positions For 20 valve positions For 24 valve positions	8004928 8004929 8004930 8004931 8004932 8004933 8004934 8004935 8004936 8004937 8004938	ASCF-H-L1-18-4V ASCF-H-L1-18-5V ASCF-H-L1-18-6V ASCF-H-L1-18-7V ASCF-H-L1-18-8V ASCF-H-L1-18-9V ASCF-H-L1-18-10V ASCF-H-L1-18-12V ASCF-H-L1-18-16V ASCF-H-L1-18-20V ASCF-H-L1-18-24V

Ordering data		Description	Part no.	Type
<b>H-rail</b>				
	To EN 60715, 35 x 7.5 (WxH)	Length: 2 m	35430	NRH-35-2000
<b>H-rail mounting</b>				
	Use the following screws for mounting: Size 10: DIN 912: M4 x 30 Size 14: DIN 912: M4 x 40 Size 18: DIN 912: M5 x 50	-	★ 569998	VAME-T-M4
<b>Mounting bracket</b>				
	Mounting bracket, right and left, with screw set for sub-base valve (control cabinet installation). Mounting is possible only with VTUG size 10 and 14.		8154010	VAME-L1-Q